


KLAST

www.klasthome.com

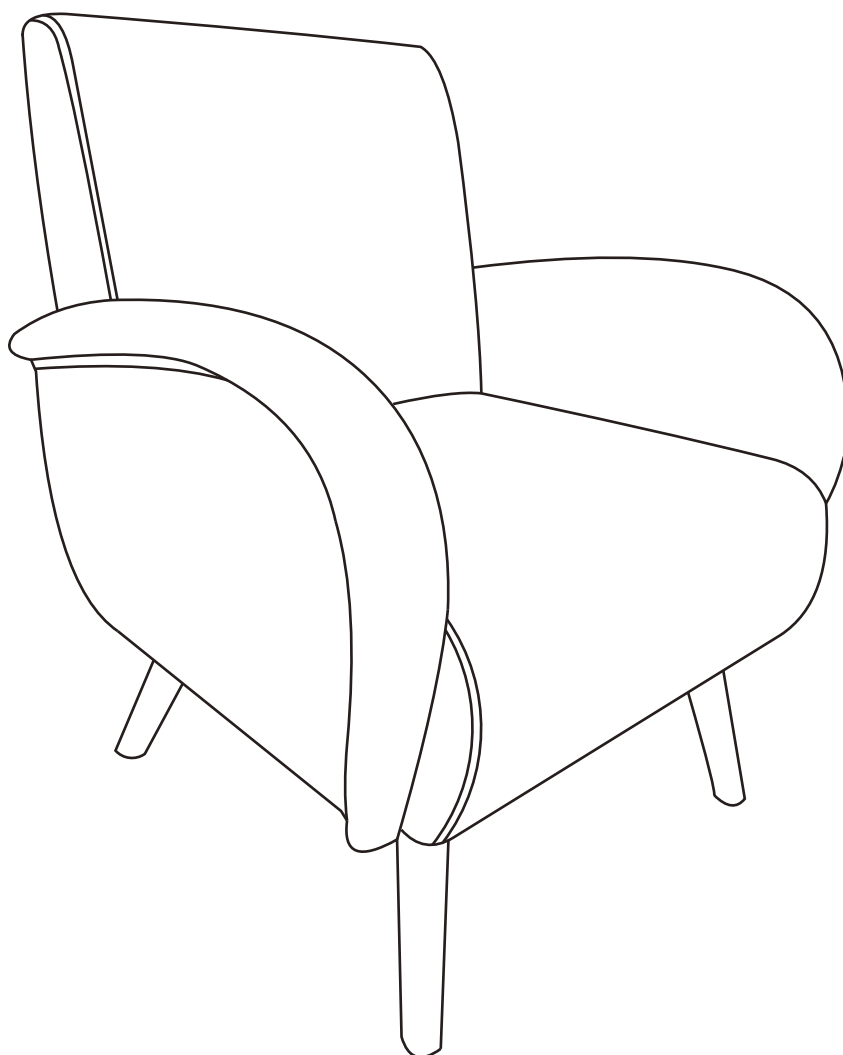

IRAIDA

Ref: QH-0014


1/3

-V1.0-

KLAST

www.klasthome.com


MATERIAL



A x1 PC




B x1 PC




Back leg with
adjustable screws

C x2 PC

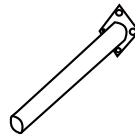


D x2 PC





M6X20 mm

E x4 PC



F x1 PC


STEP 1

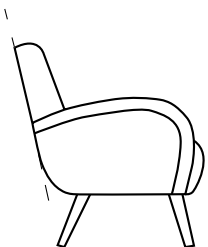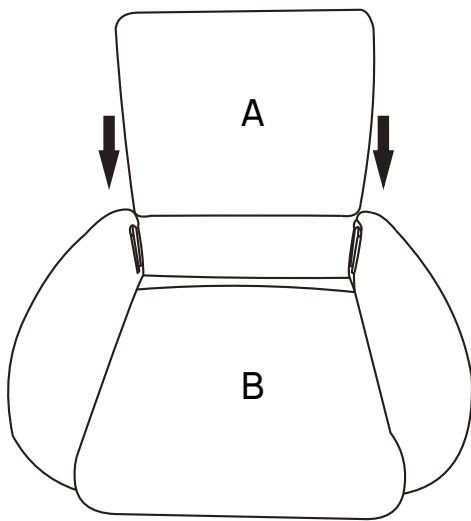

⚠ WARNING

Make sure that the
backrest is aligned
with the seat.

STEP 2

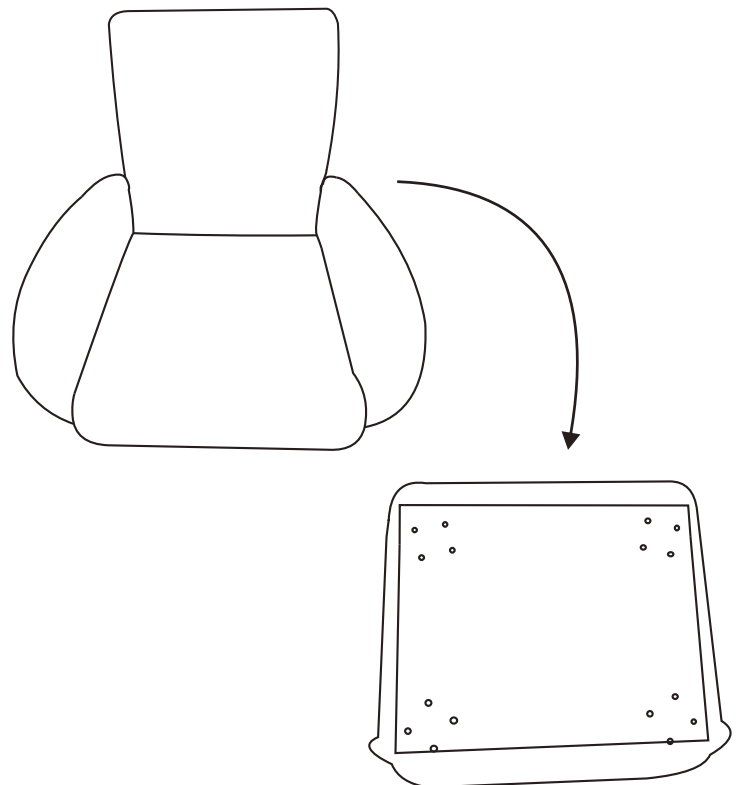


IRAIDA

Ref: QH-0014


KLAST

www.klasthome.com

STEP 3

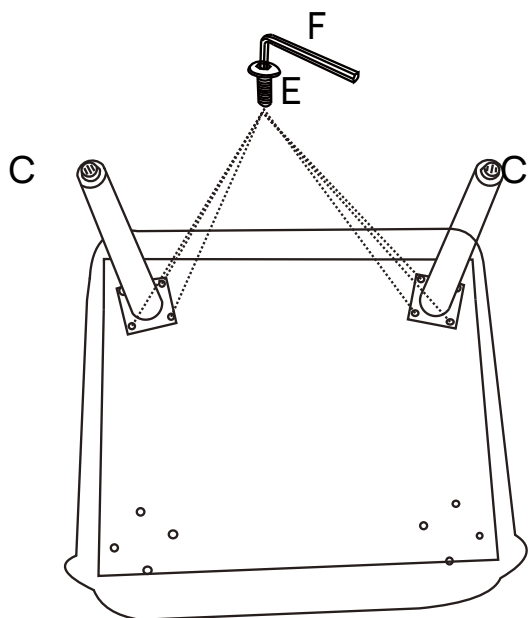

STEP 4

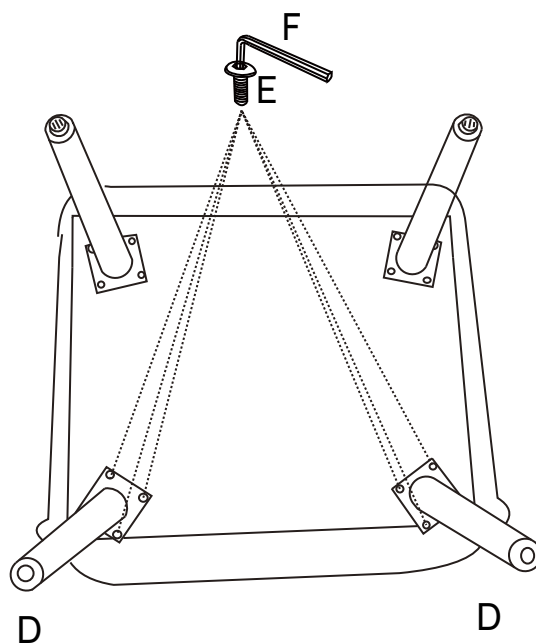

STEP 5



IRAIDA

Ref: QH-0014