

# **MAGALI**

Ref: PM-0003

1/2

- V 1.0 -

# KLAST

www.klasthome.com

# **MATERIAL**



A x2 PC



Bx2PC



3,5 x 16 mm **C** x4 PC




Dx4PC



4,5 x 35 mm **E x4 PC** 


### STEP 1

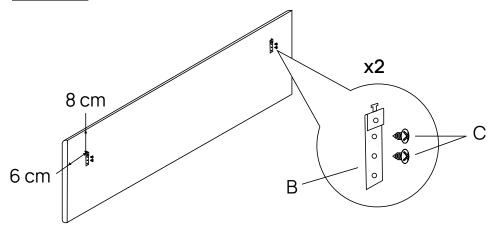


#### **WARNING**

- 1. Never force the joints.
- 2. Tighten the screws after a certain time of use.
- 3. Dry cleaning or with a damp cloth avoiding abrasive products.

## STEP 2

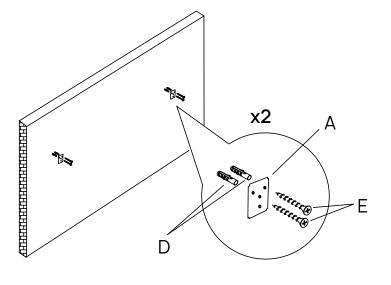

# STEP 3

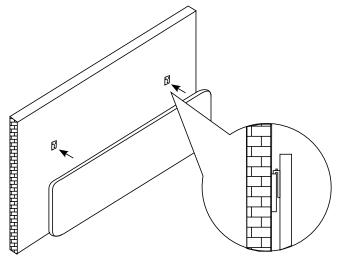

# **MAGALI**

Ref: PM-0003