


KLAST

www.klasthome.com

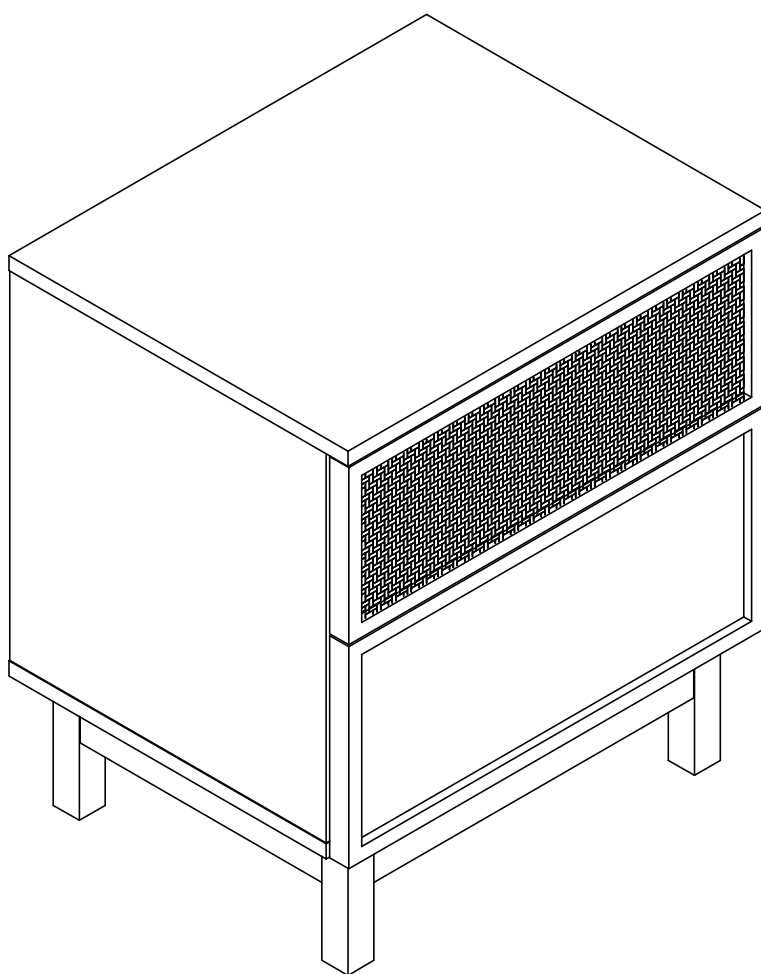

BORA

Ref: NW-0001


1/15

-V1.0-

KLAST

www.klasthome.com


MATERIAL



M5x35 mm
A x28 PC



Ø15x9.5 mm
B x28 PC




Ø6x30 mm
C x30 PC



Ø4x35 mm
D x12 PC




Ø3x12 mm
E x20 PC



F x2 PC



Ø25 mm
G x4 PC



Ø3x14 mm
H x4 PC



I x4 PC




Ø4x12 mm
J x8 PC




300 mm
CL x2 PC



300 mm
CR x2 PC



300 mm
DL x2 PC



300 mm
DR x2 PC


BORA

Ref: NW-0001

KLAST

www.klasthome.com

MATERIAL

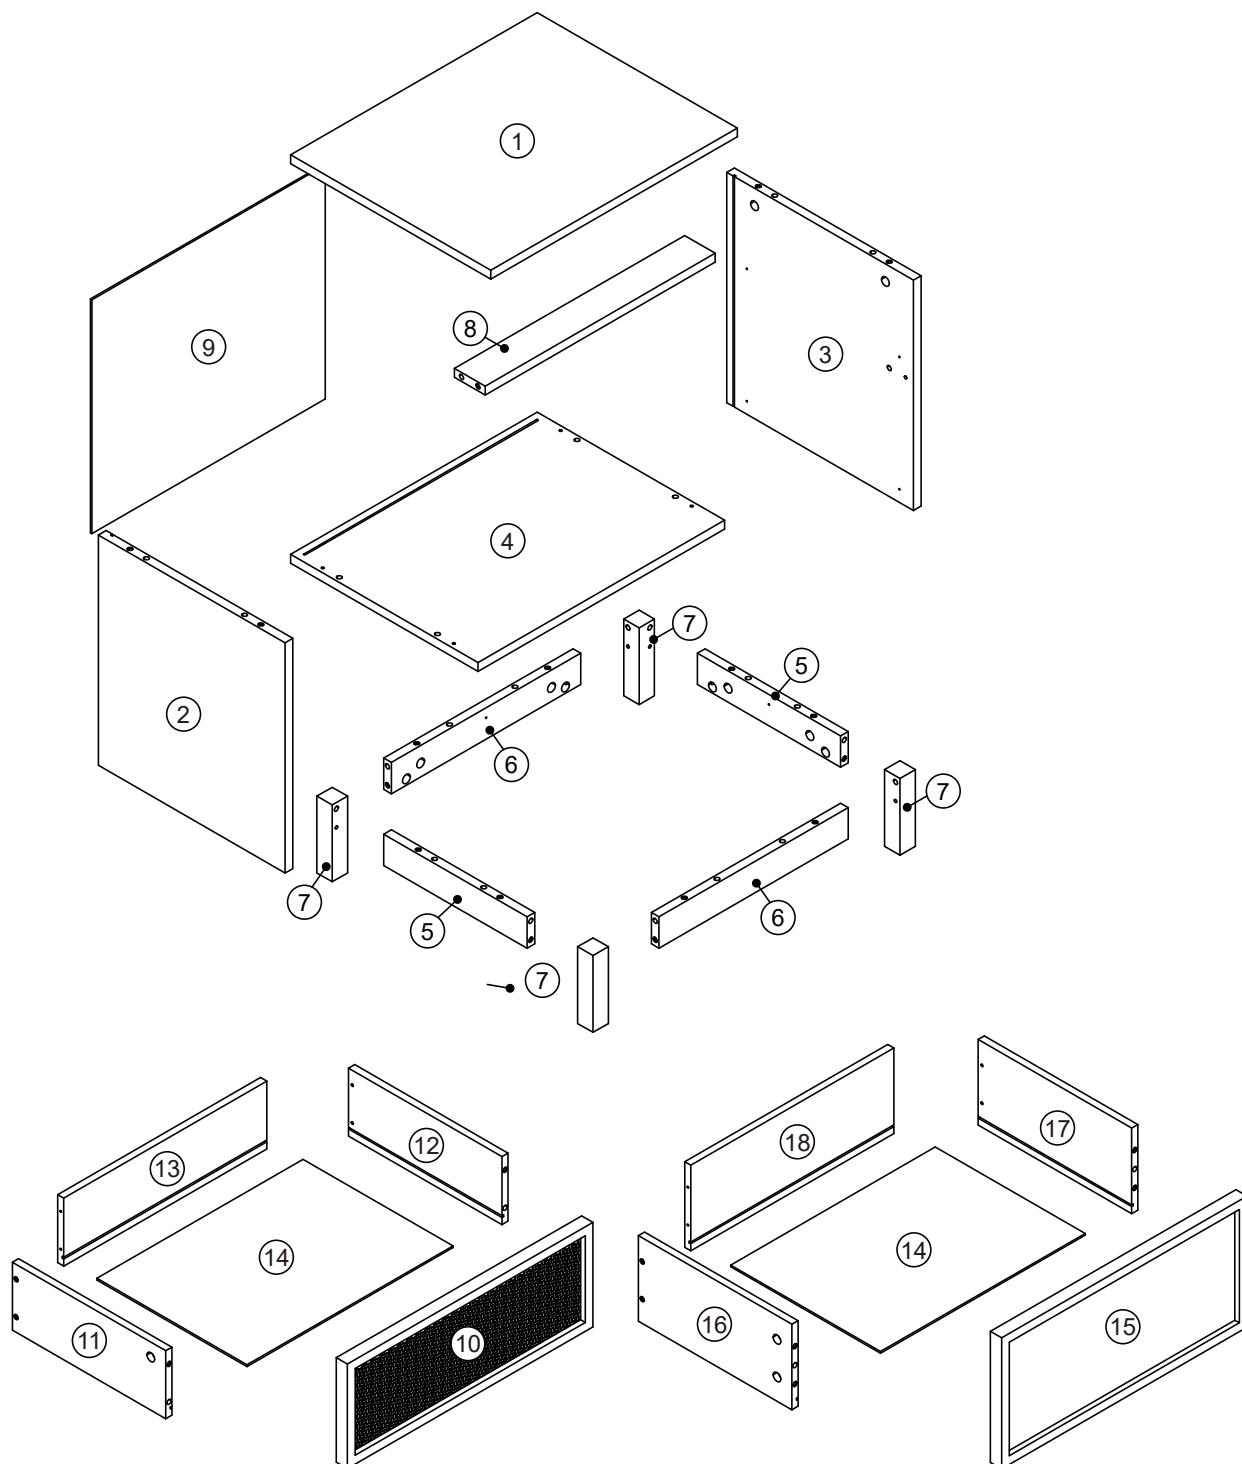


BORA

Ref: NW-0001


KLAST

www.klasthome.com

STEP 1

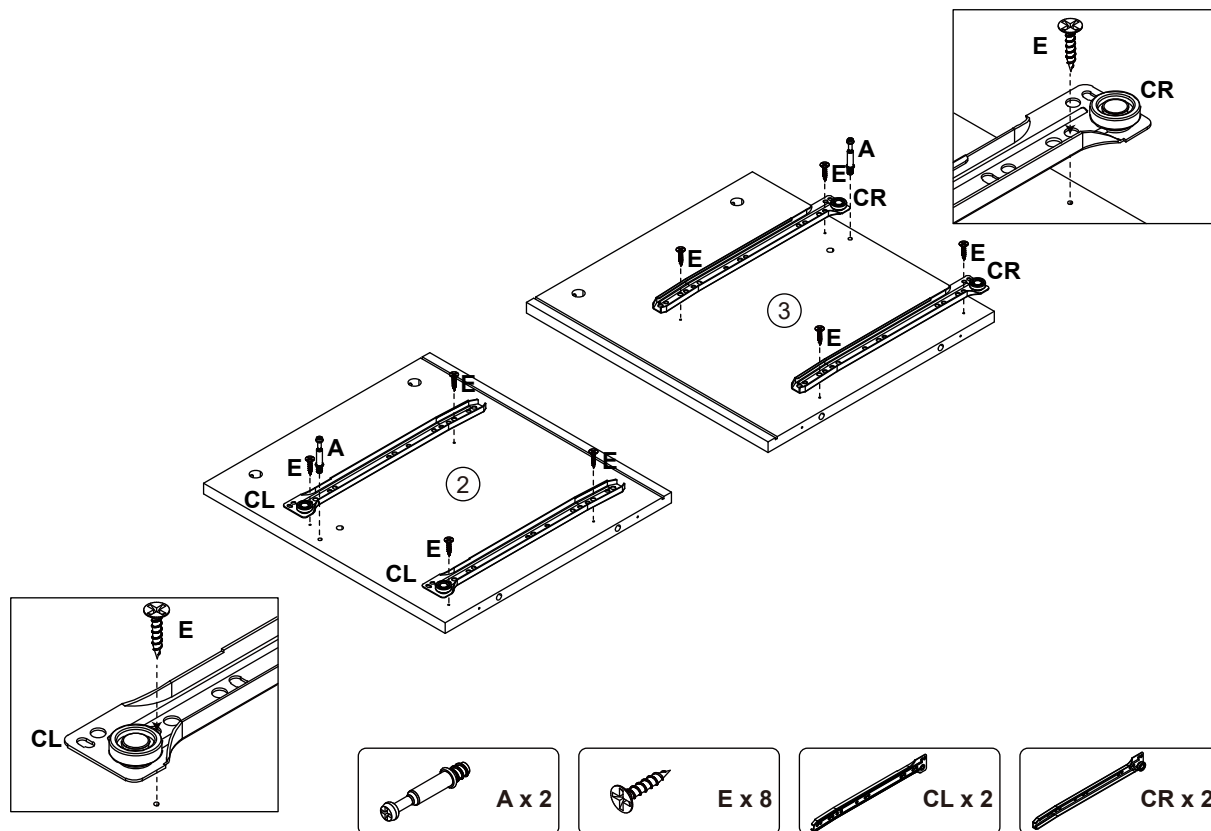

STEP 2

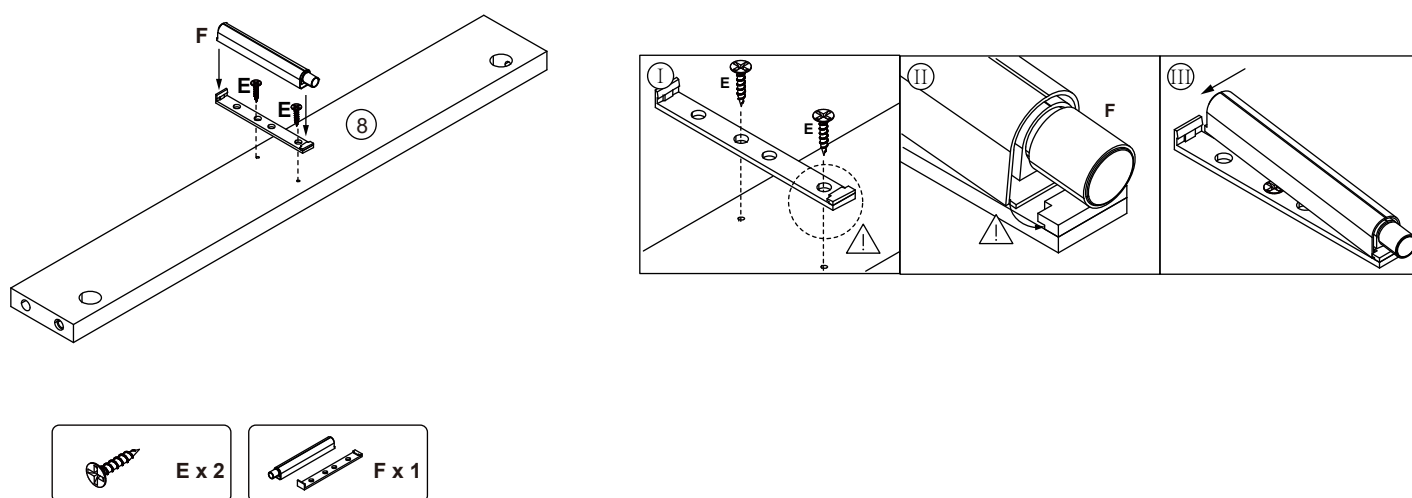


BORA

Ref: NW-0001


KLAST

www.klasthome.com

STEP 3

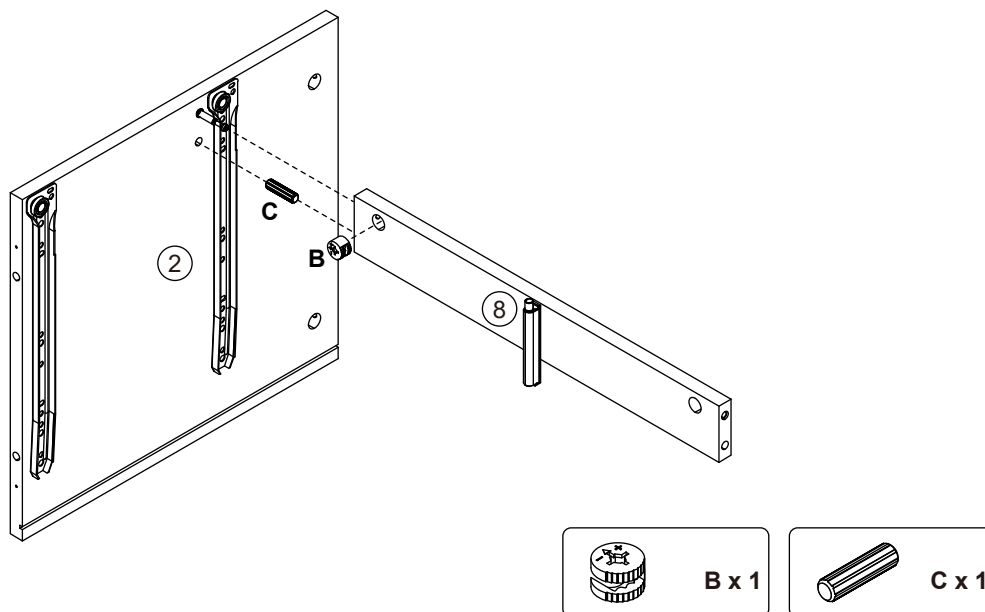

STEP 4

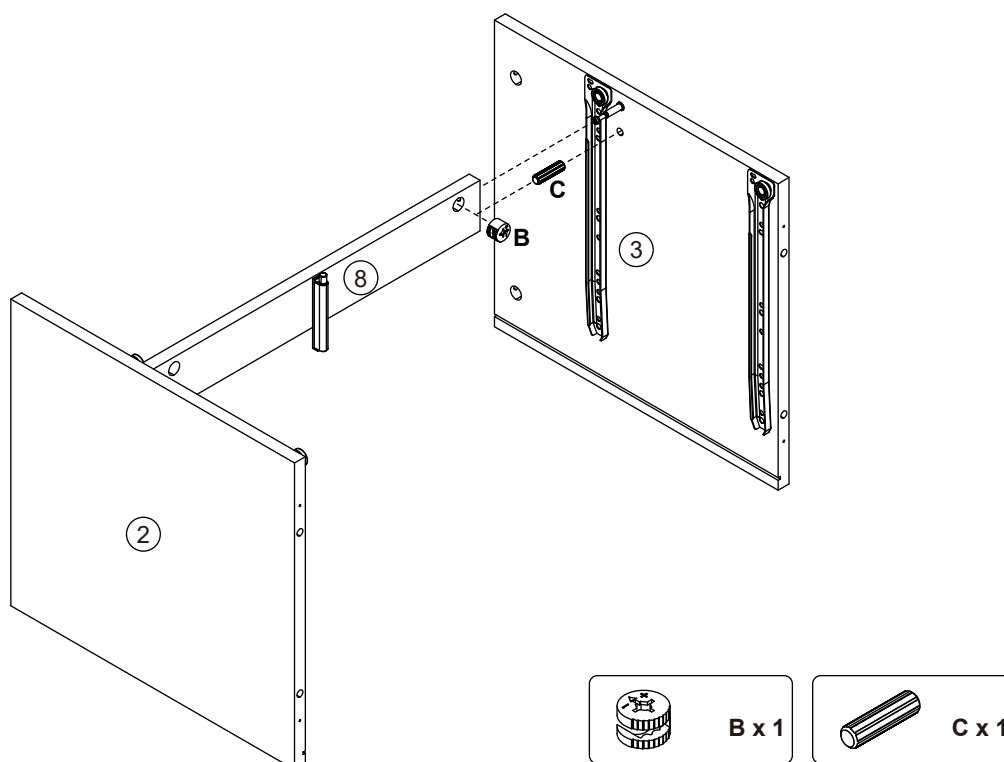



BORA

Ref: NW-0001



KLAST

www.klasthome.com




STEP 5

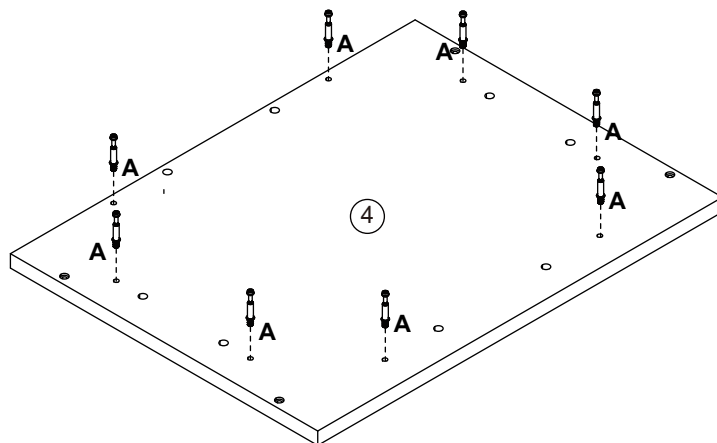




STEP 6

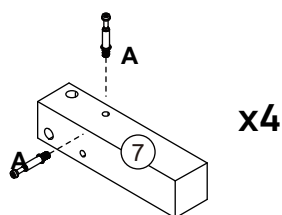

STEP 7

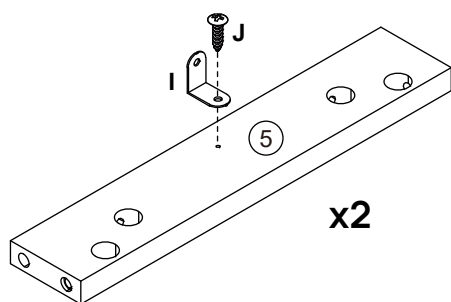

STEP 8

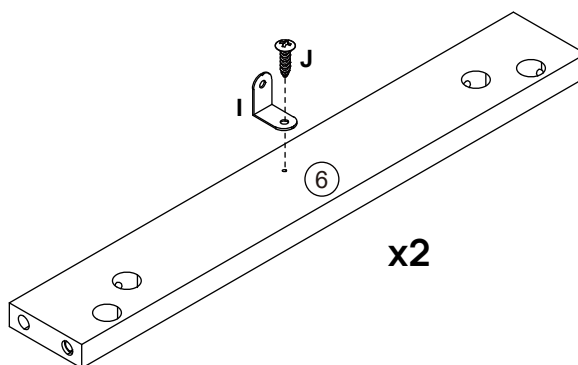


BORA

Ref: NW-0001


KLAST

www.klasthome.com

STEP 9

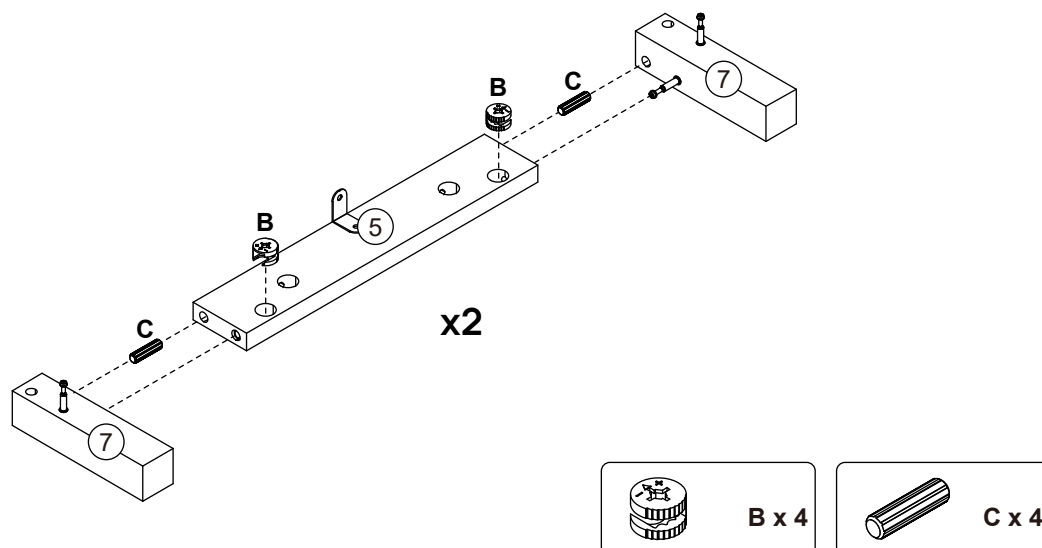

STEP 10

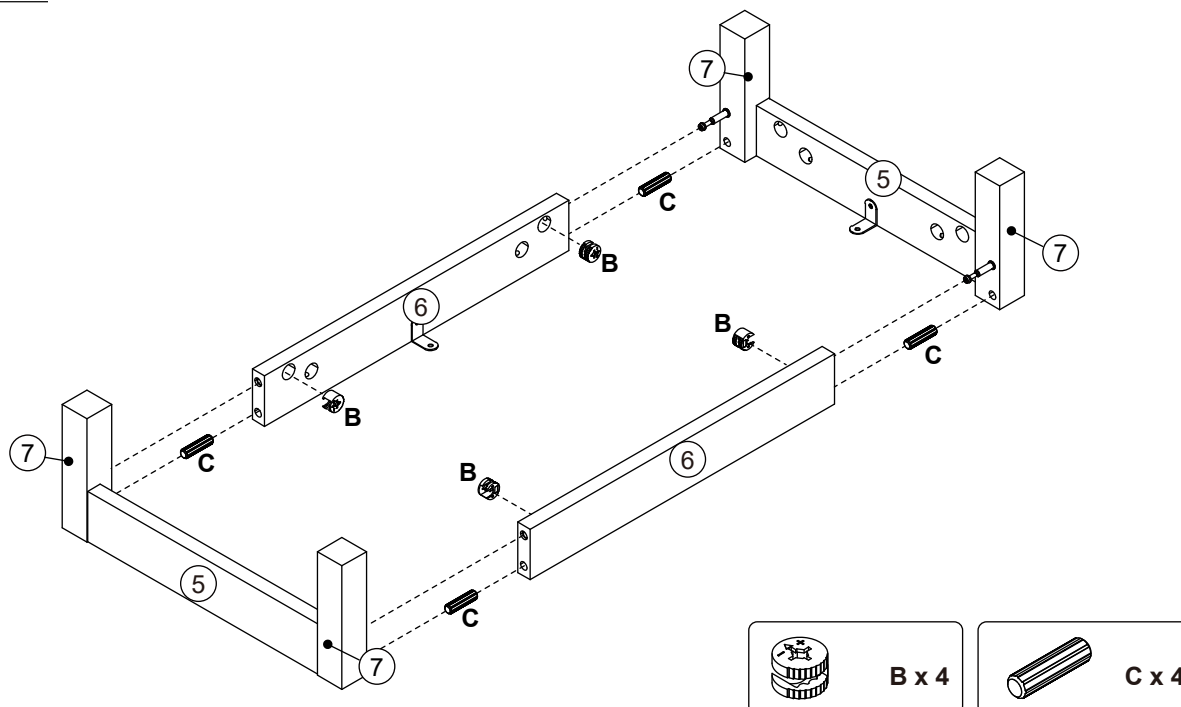





BORA

Ref: NW-0001



KLAST

www.klasthome.com

STEP 11

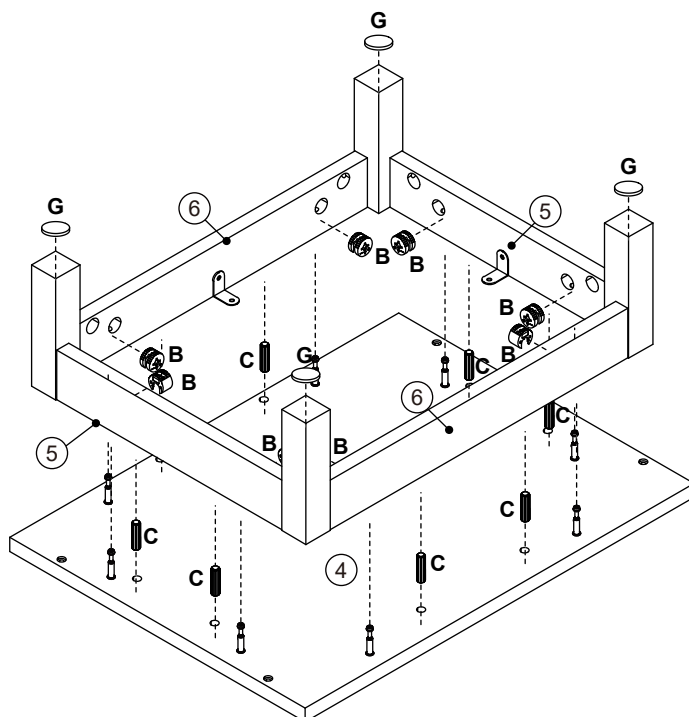

STEP 12

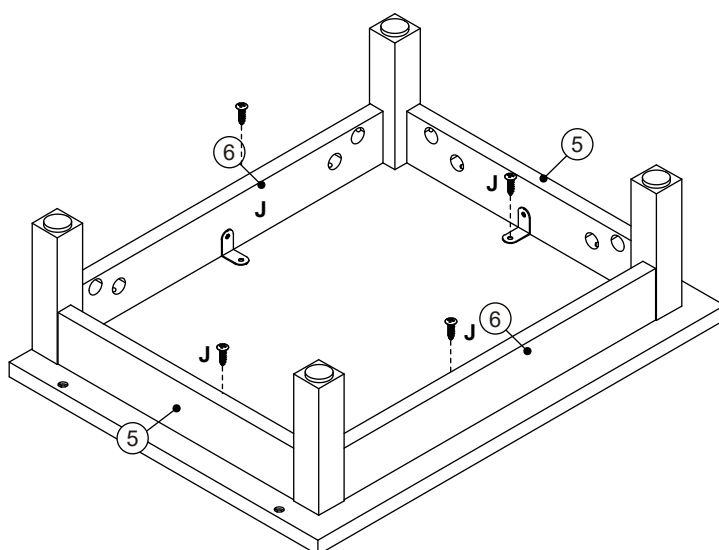


BORA

Ref: NW-0001


KLAST

www.klasthome.com

STEP 13

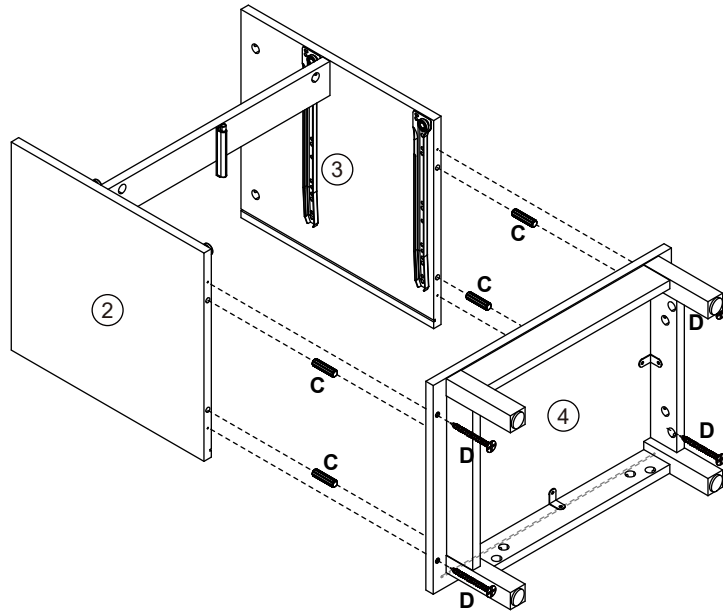

STEP 14

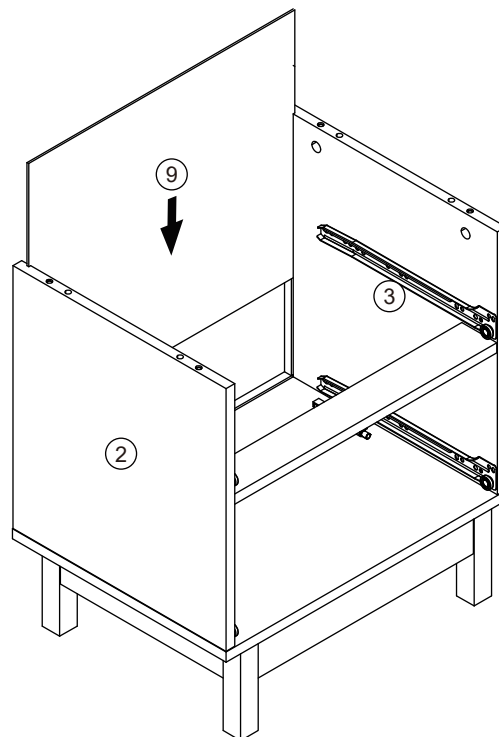





BORA

Ref: NW-0001


KLAST

www.klasthome.com

STEP 15

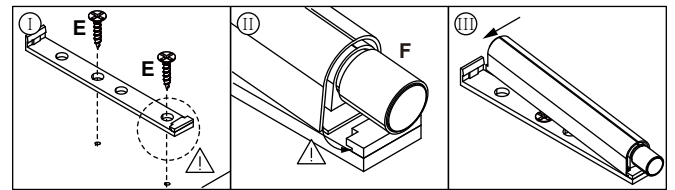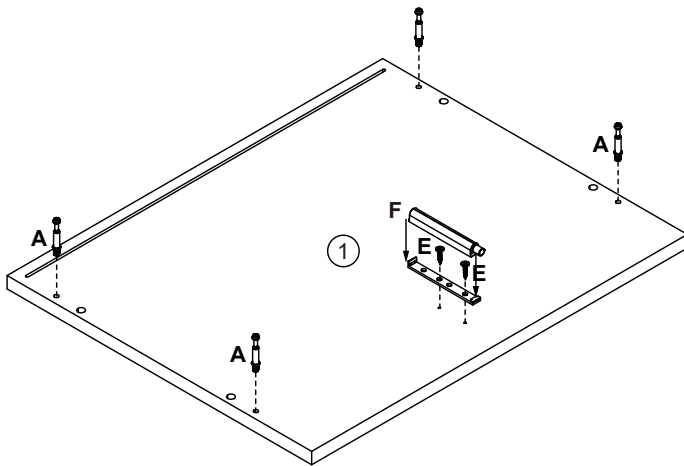

STEP 16

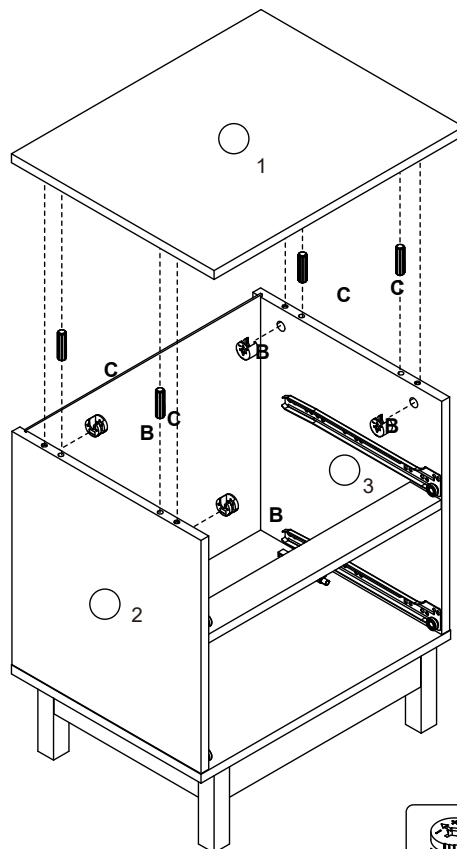



BORA

Ref: NW-0001



KLAST

www.klasthome.com



STEP 17

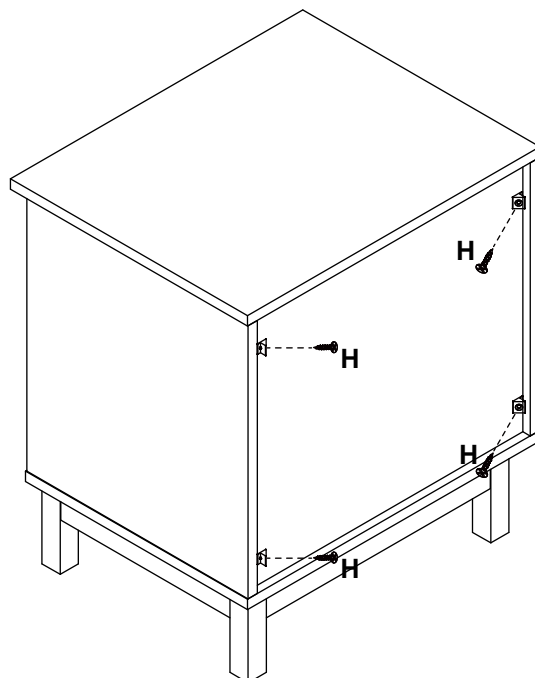

STEP 18

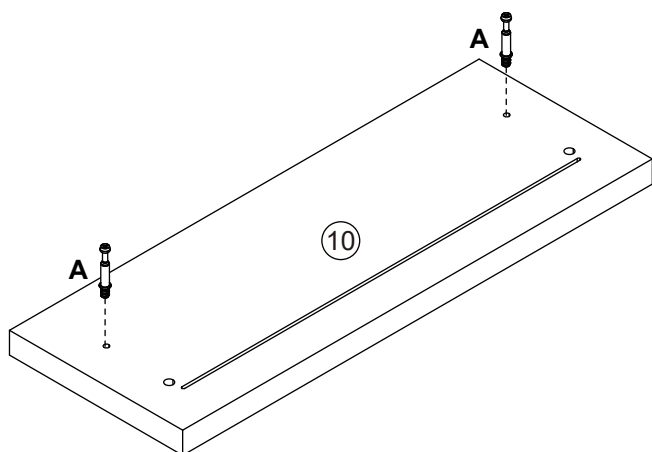

STEP 19

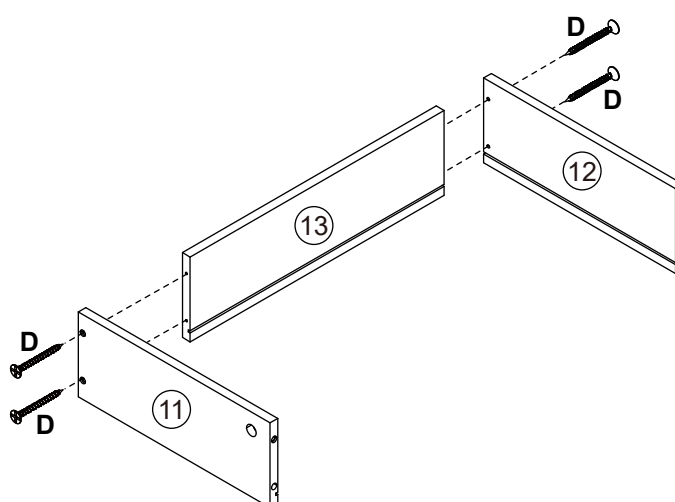

BORA

Ref: NW-0001


11/15

- V1.0 -



KLAST

www.klasthome.com


STEP 20

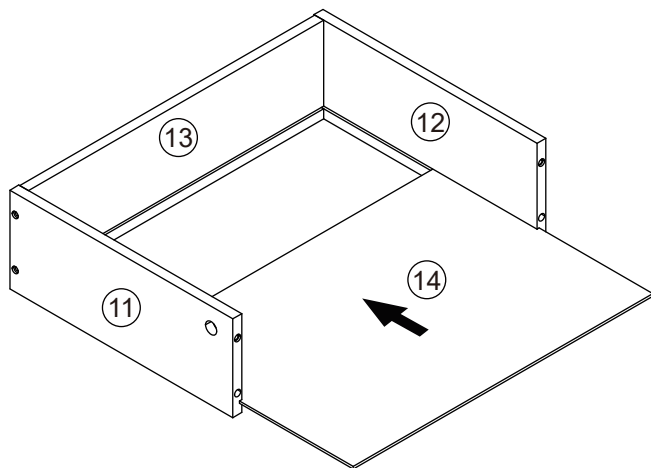

STEP 21



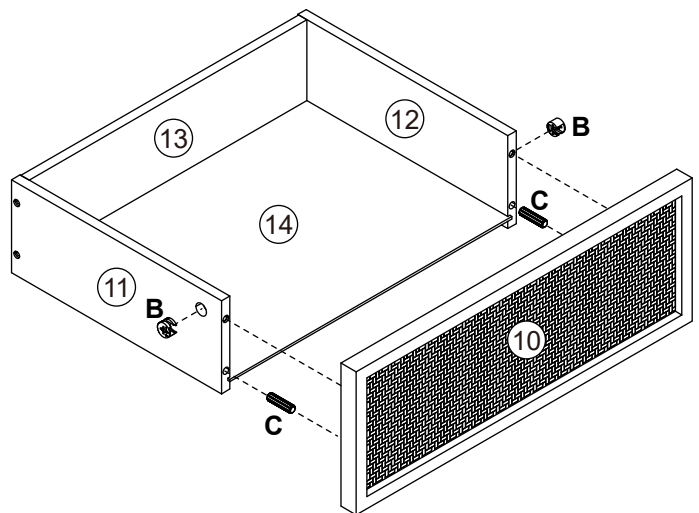


B x 2




C x 2

STEP 22

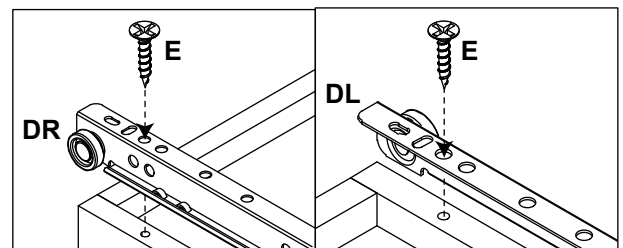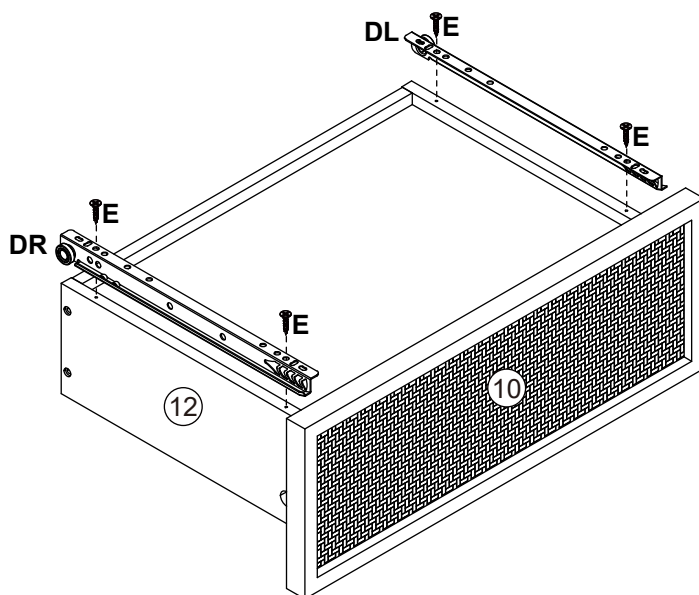

E x 4



DL x 1



DR x 1

BORA

Ref: NW-0001



12/15

- V1.0 -



KLAST

www.klasthome.com


STEP 23

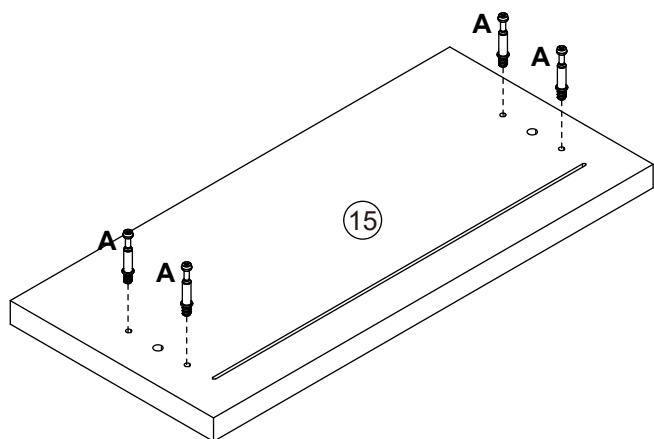




STEP 24

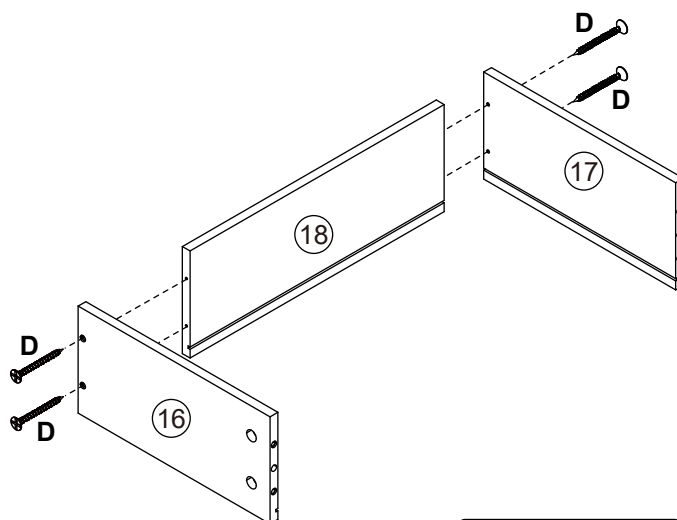

STEP 25

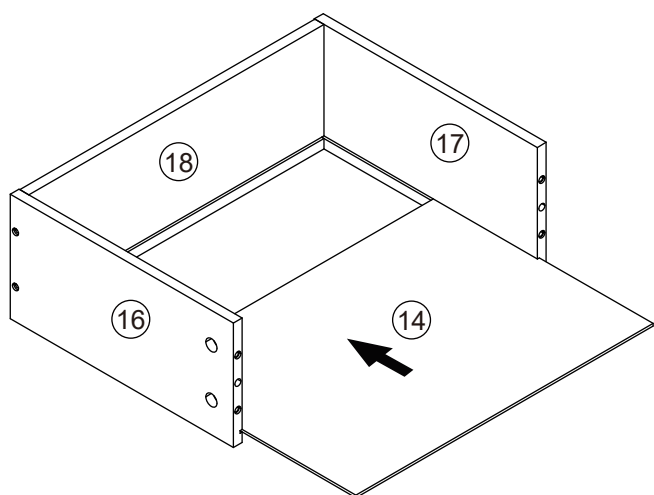

STEP 26

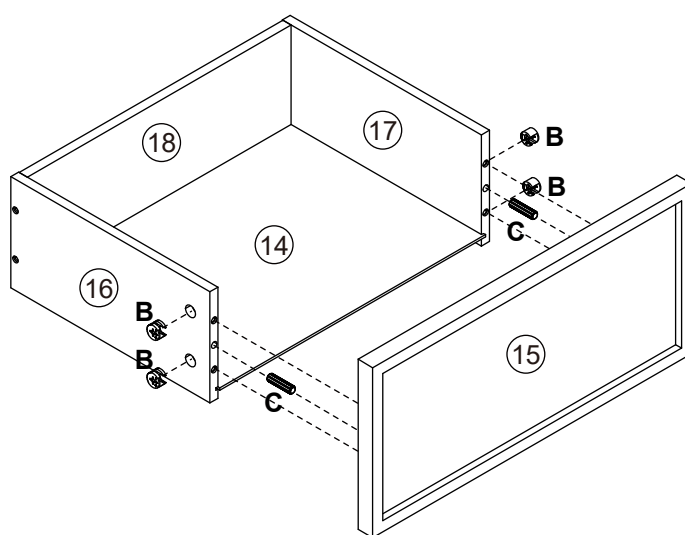






BORA

Ref: NW-0001



KLAST

www.klasthome.com

STEP 27

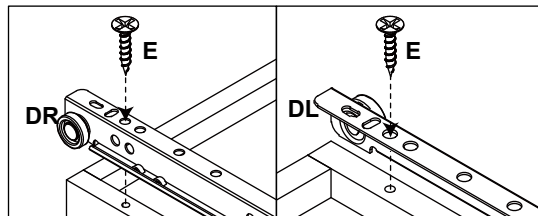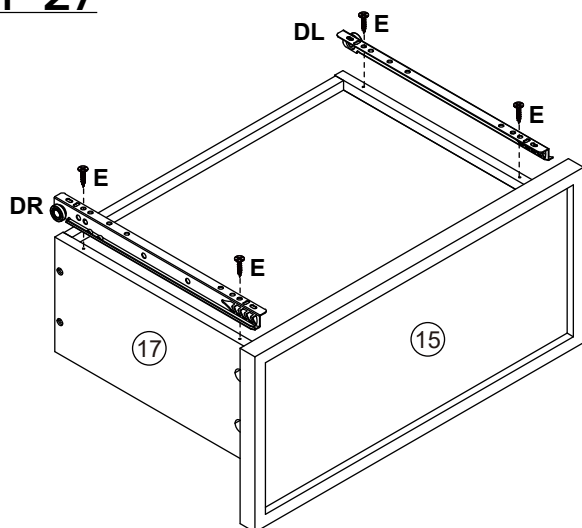

STEP 28

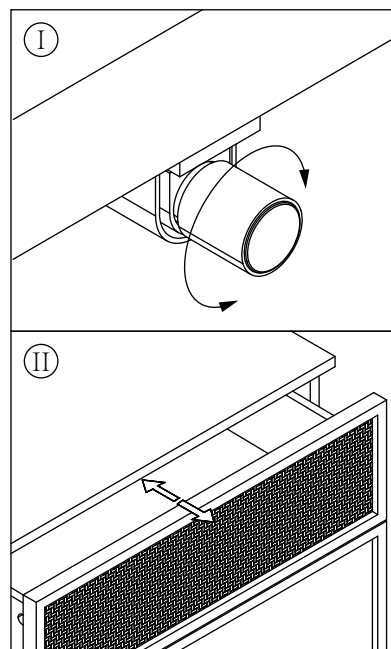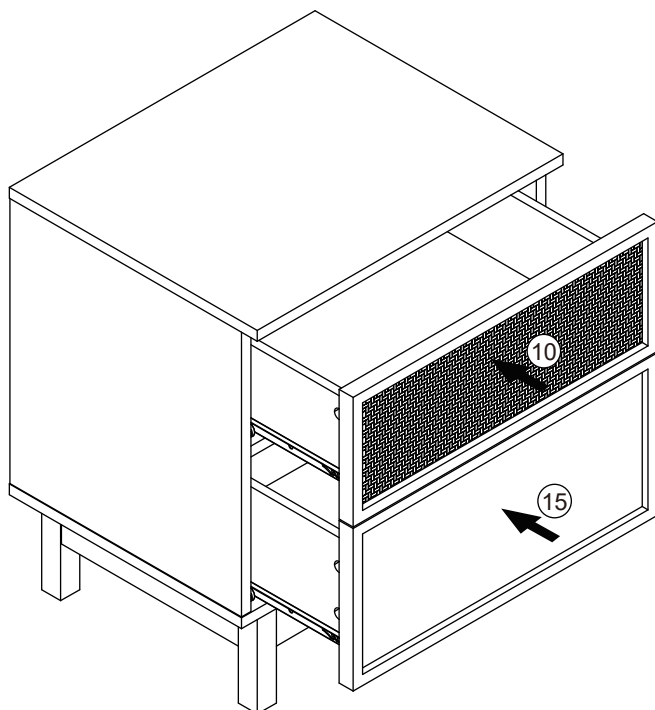


BORA

Ref: NW-0001

KLAST

www.klasthome.com

STEP 29

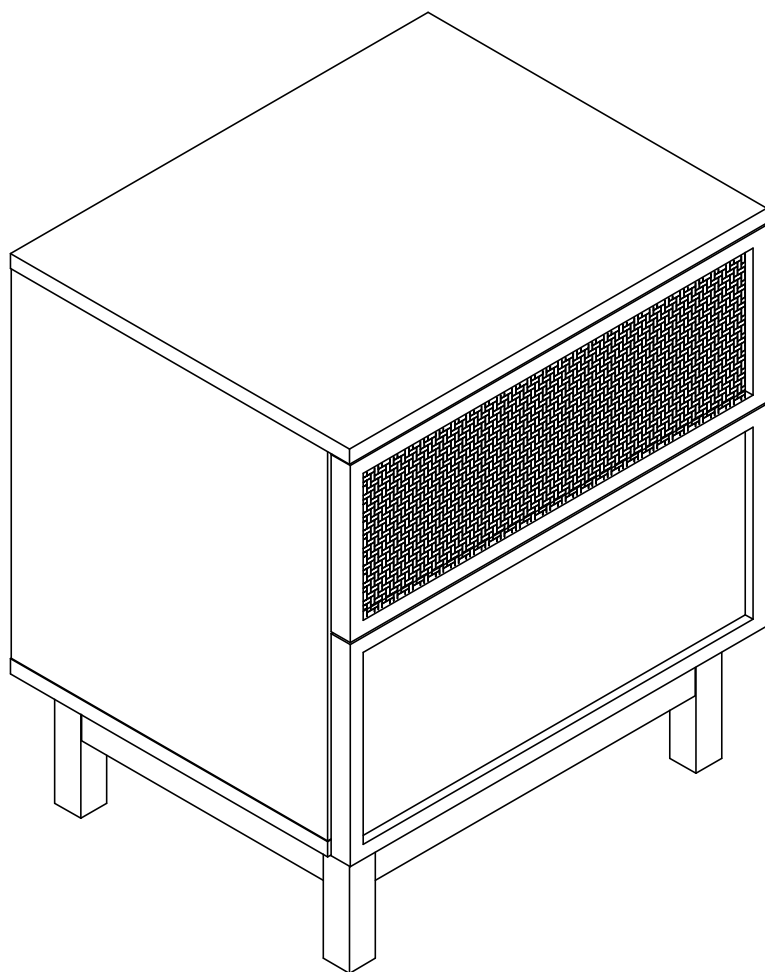

LIFT UP



DON'T PULL

BORA

Ref: NW-0001

15/15

- V1.0 -