


# KLAST

[www.klasthome.com](http://www.klasthome.com)

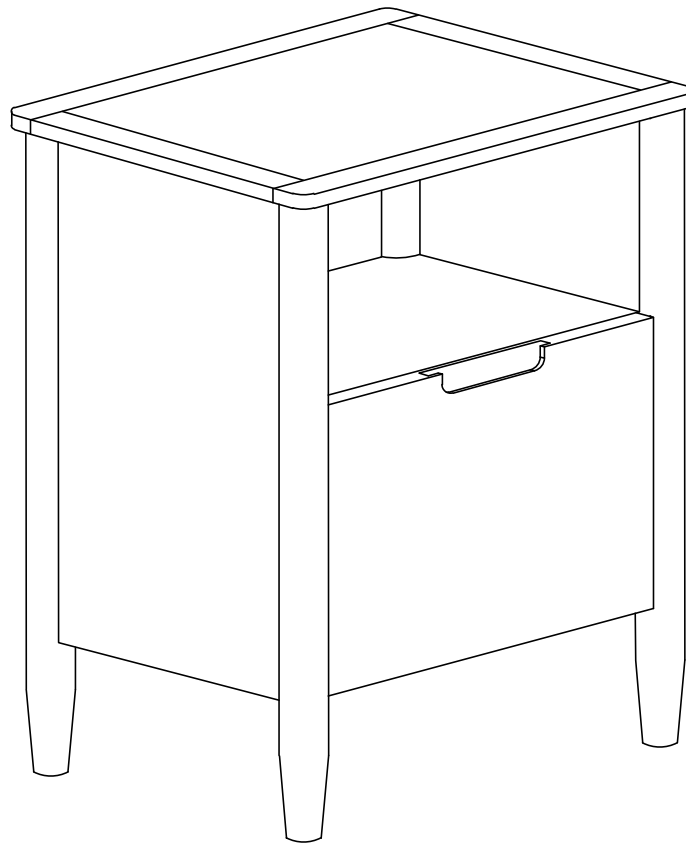

## KENAN

Ref: SD-0101


1/10

-V1.0-

# KLAST

www.klasthome.com

## MATERIAL

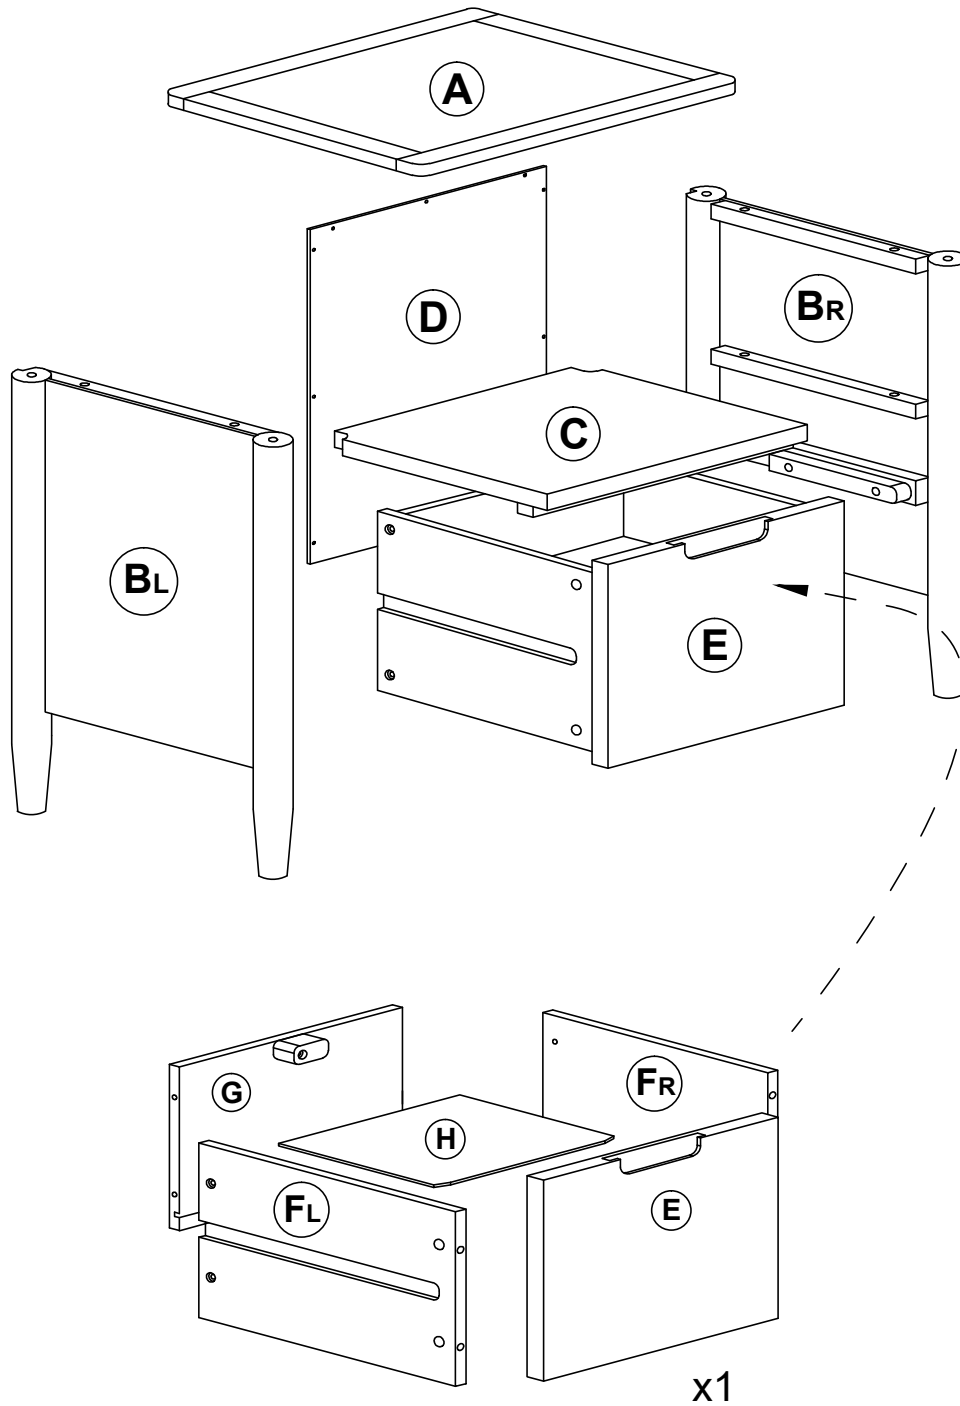


# KENAN

Ref: SD-0101


# KLAST

www.klasthome.com


## MATERIAL




A x1 PC

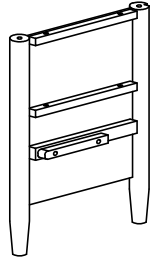


BL x1 PC

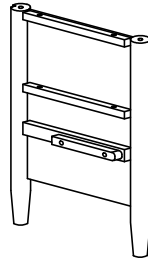


BR x1 PC




C x1 PC

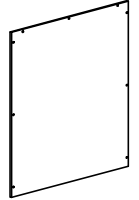


D x1 PC

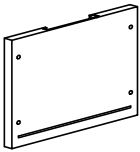


E x1 PC

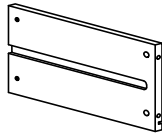

FL x1 PC

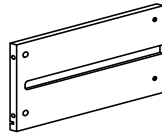


FR x1 PC

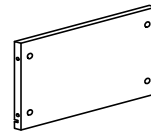


G x1 PC




H x1 PC




M6x25  
1 x8 PC

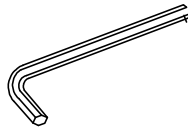


2 x1 PC




Ø8x30  
3 x4 PC

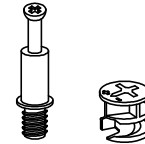

Ø6 Ø12  
4 x4 PC



M4x40  
5 x4 PC



M4x30  
6 x1 PC



M3.5x15  
7 x10 PC


## KENAN

Ref: SD-0101


# KLAST

www.klasthome.com

## STEP 1

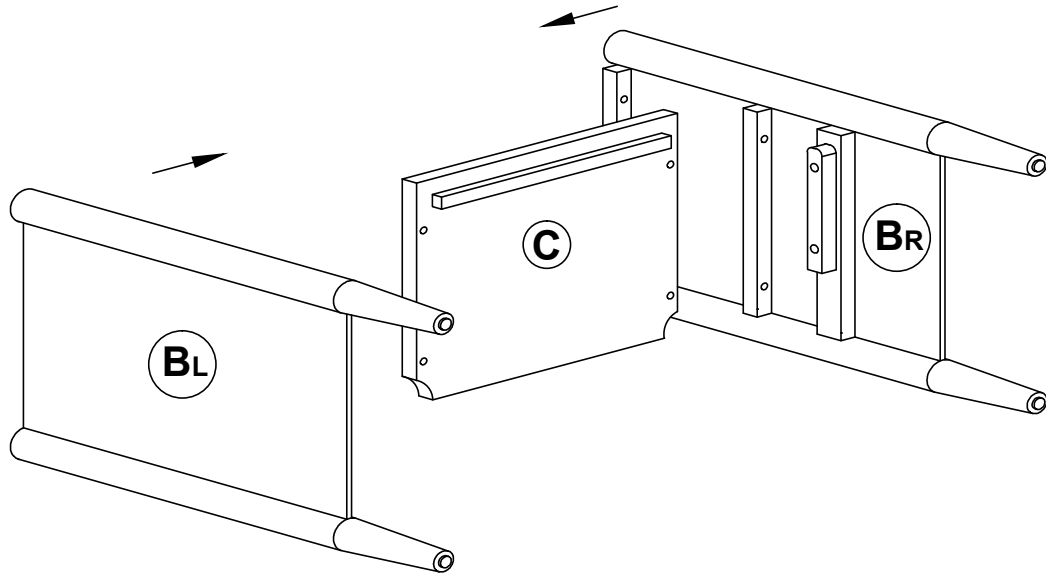

## STEP 2

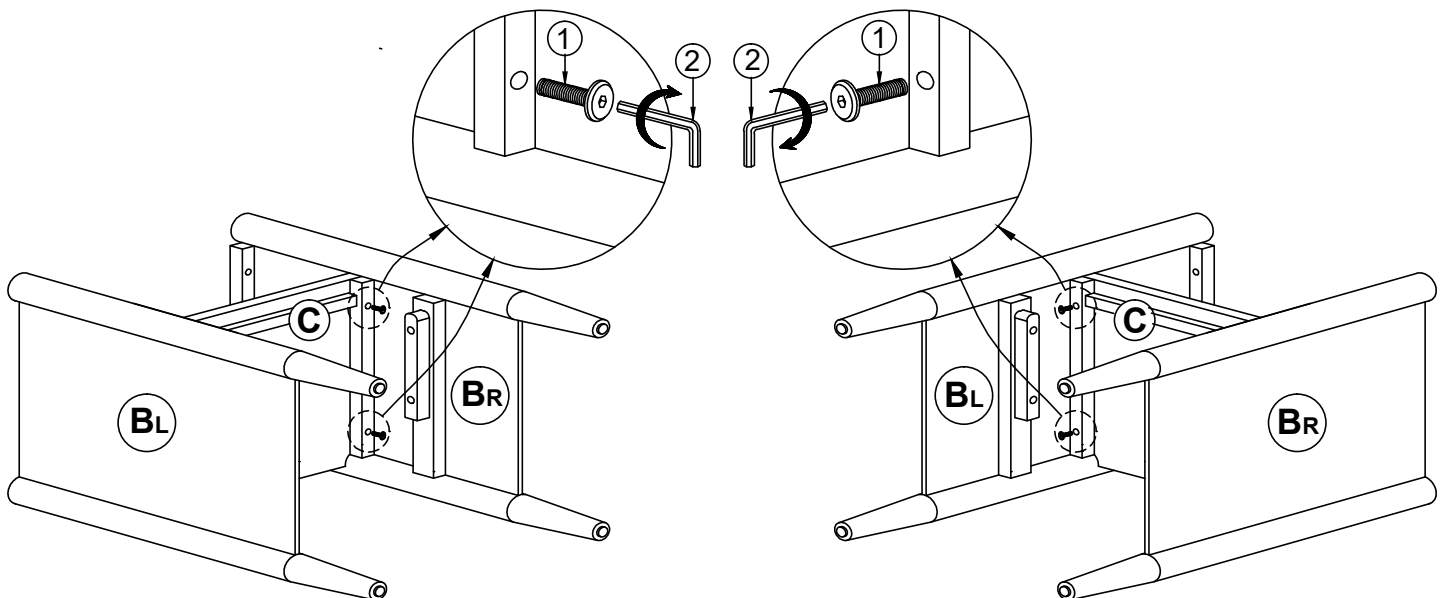


# KENAN

Ref: SD-0101


# KLAST

www.klasthome.com

## STEP 3

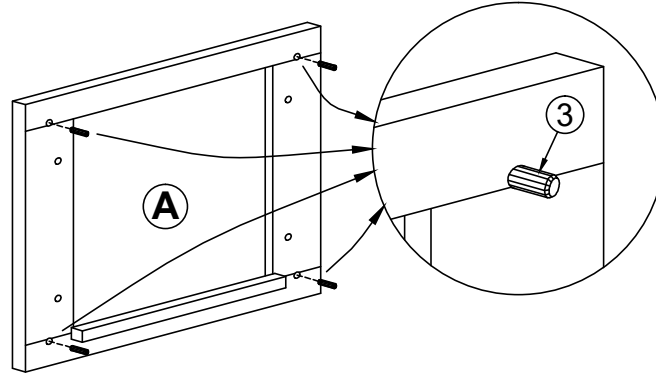

## STEP 4

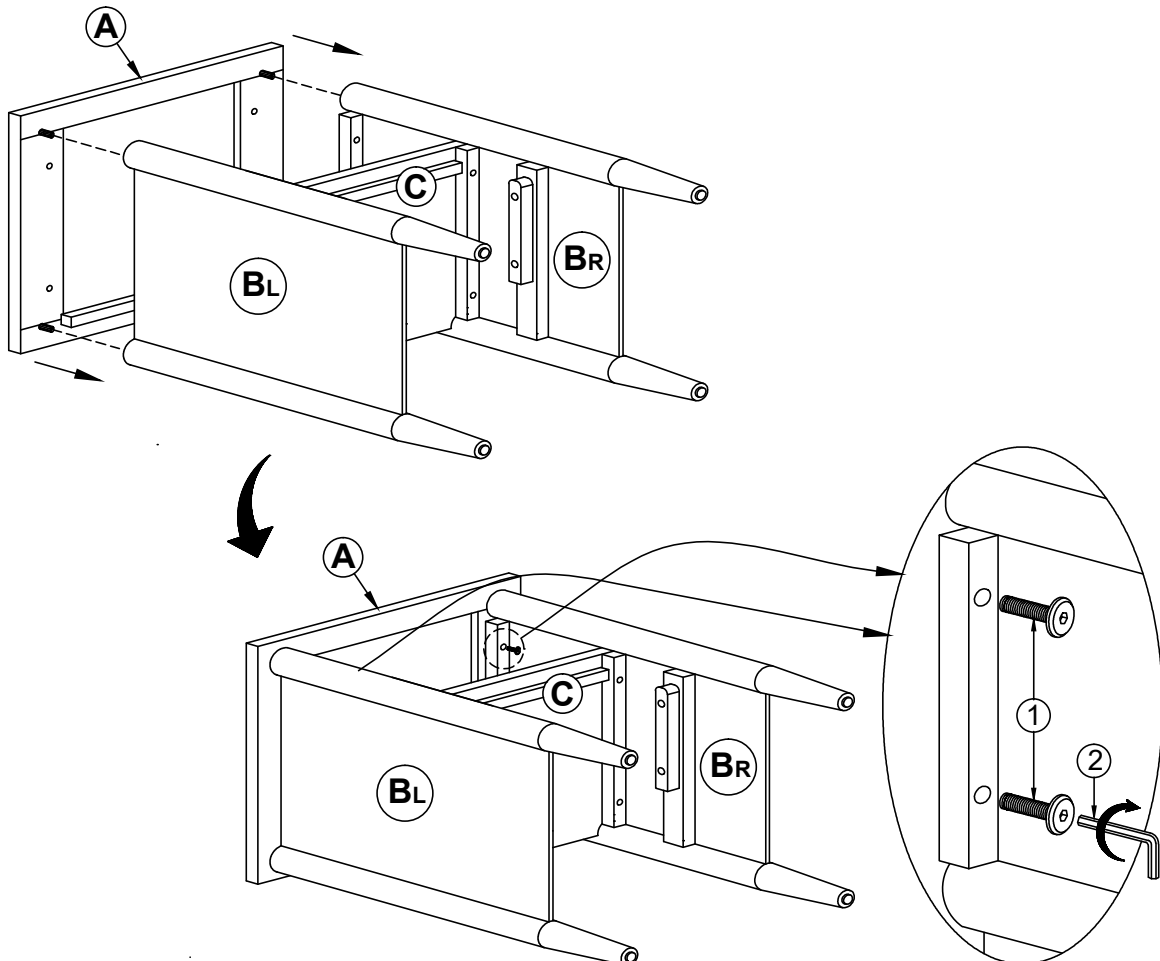

# KENAN




Ref: SD-0101

# KLAST

www.klasthome.com

## STEP 5

## STEP 6

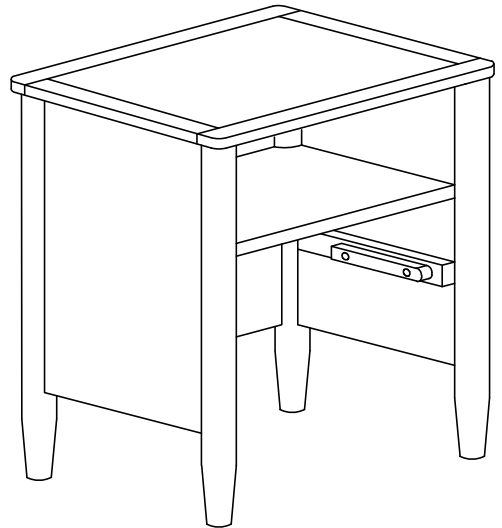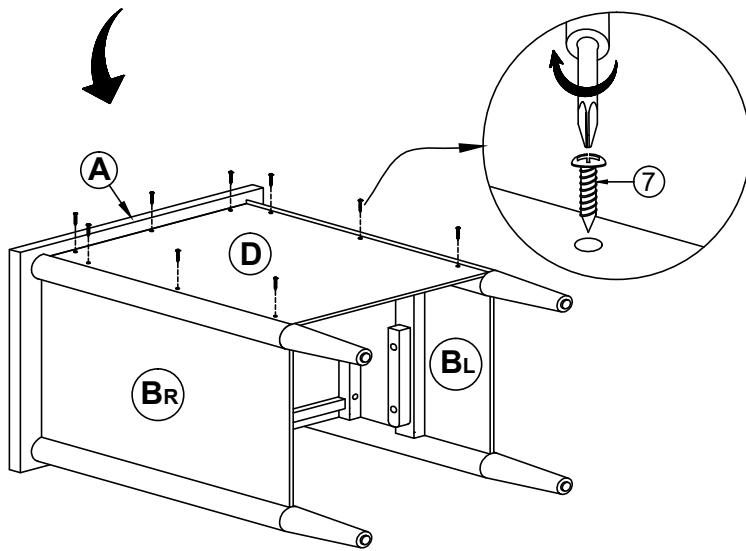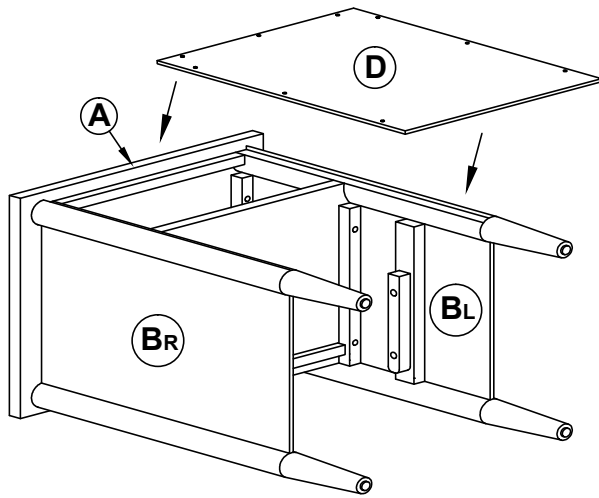


# KENAN

Ref: SD-0101


# KLAST

www.klasthome.com

## STEP 7

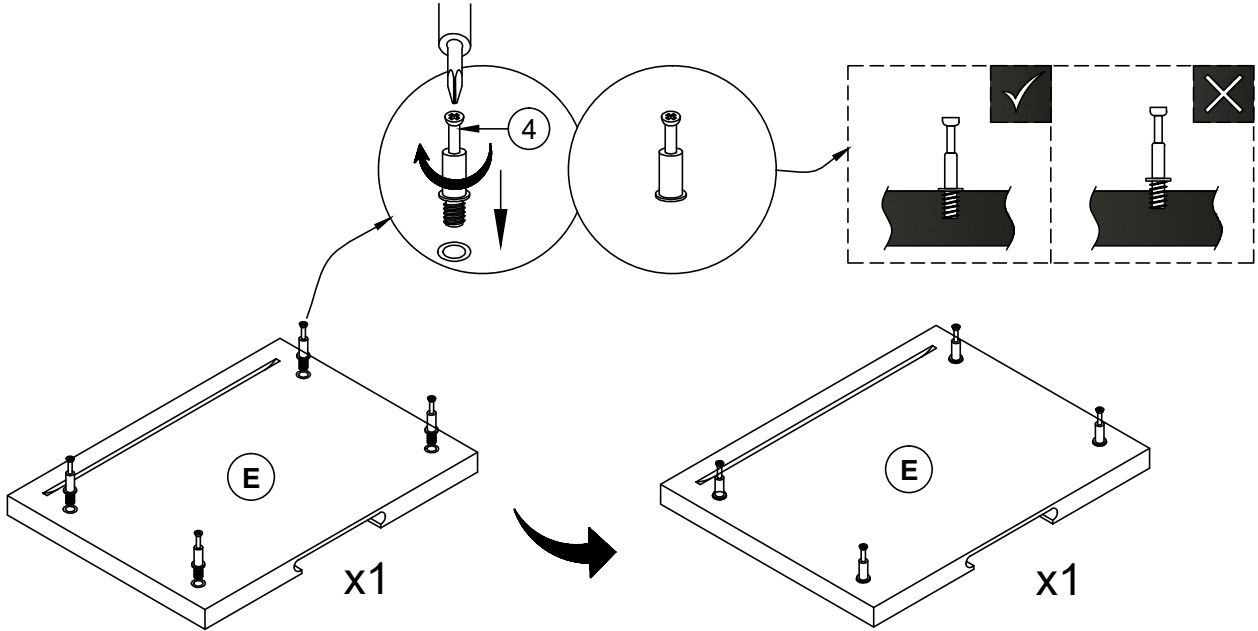

## STEP 8

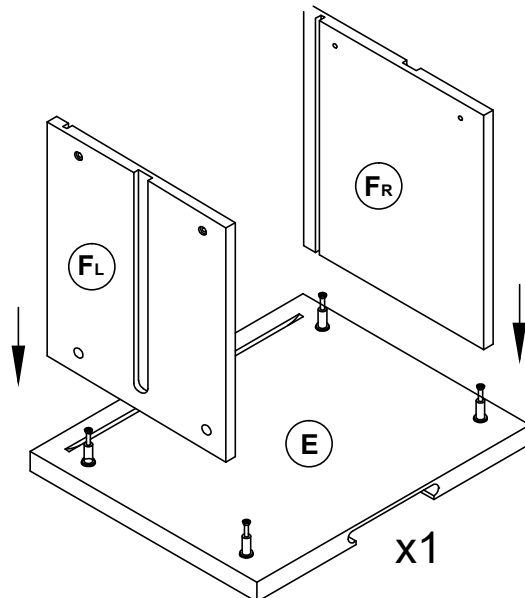


# KENAN

Ref: SD-0101


# KLAST

www.klasthome.com

## STEP 9

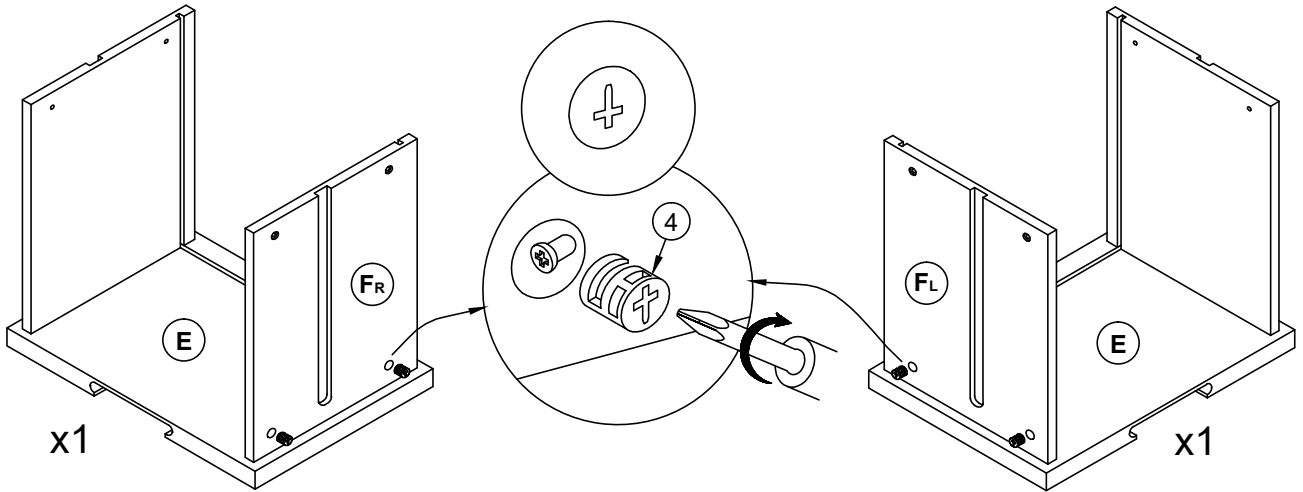

## STEP 10

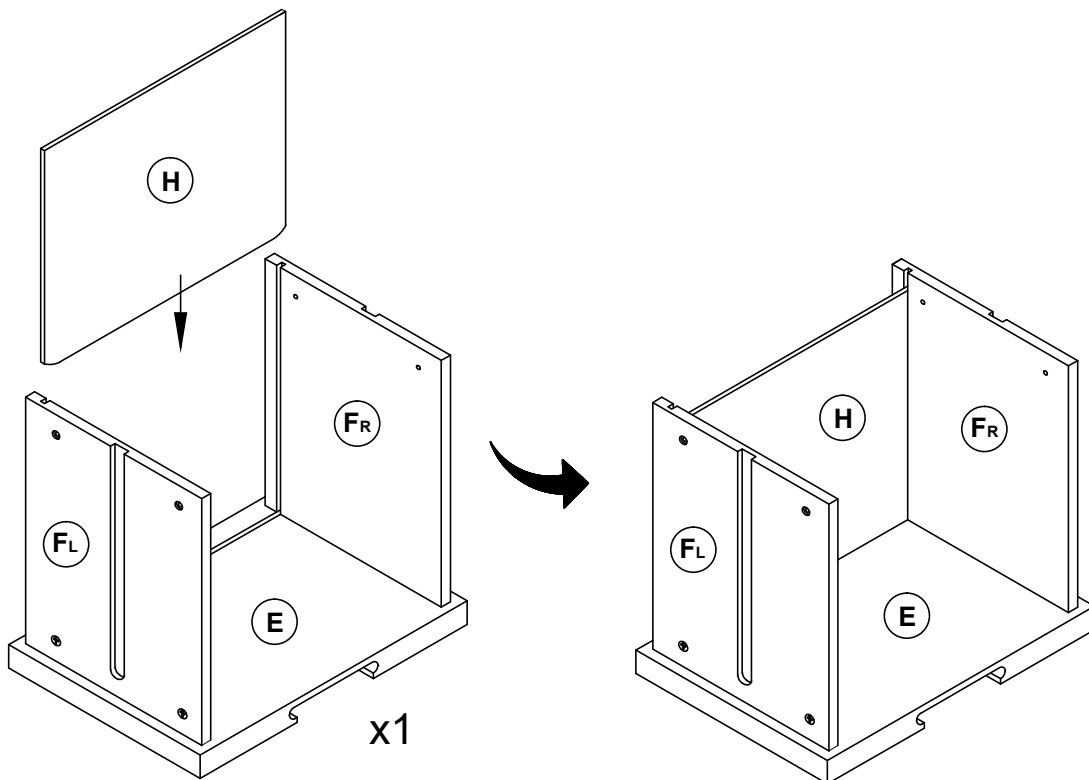

# KENAN


Ref: SD-0101




# KLAST

www.klasthome.com

## STEP 11

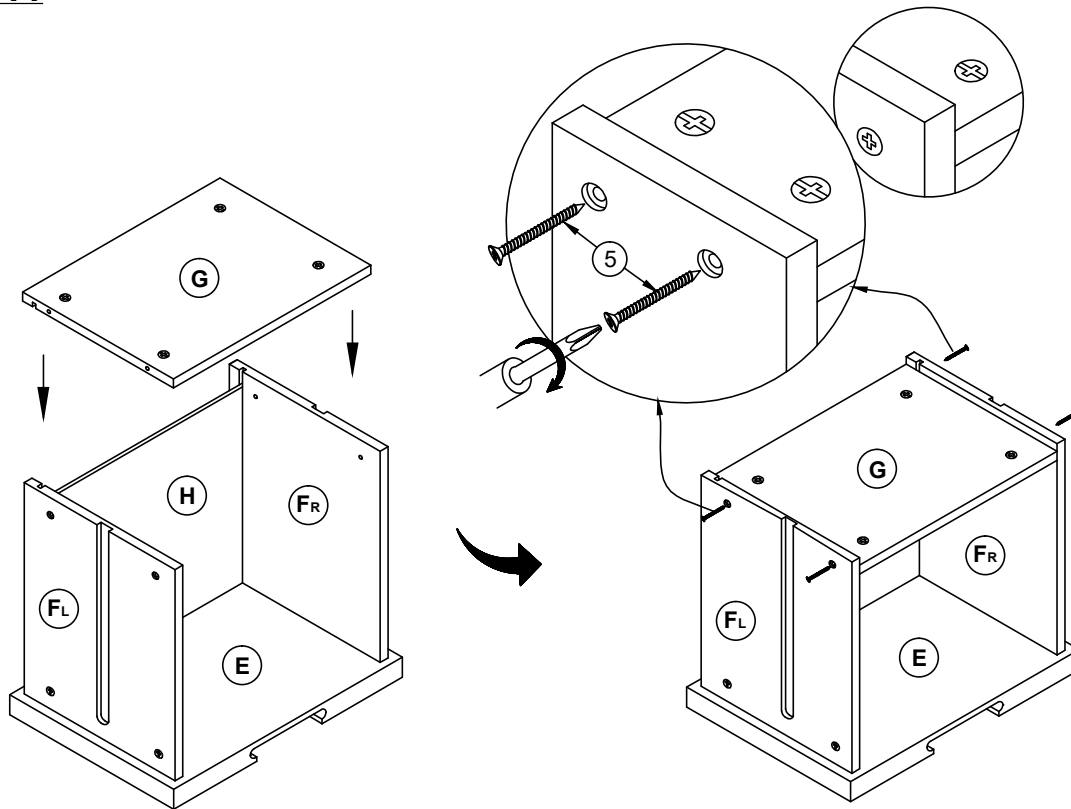

## STEP 12

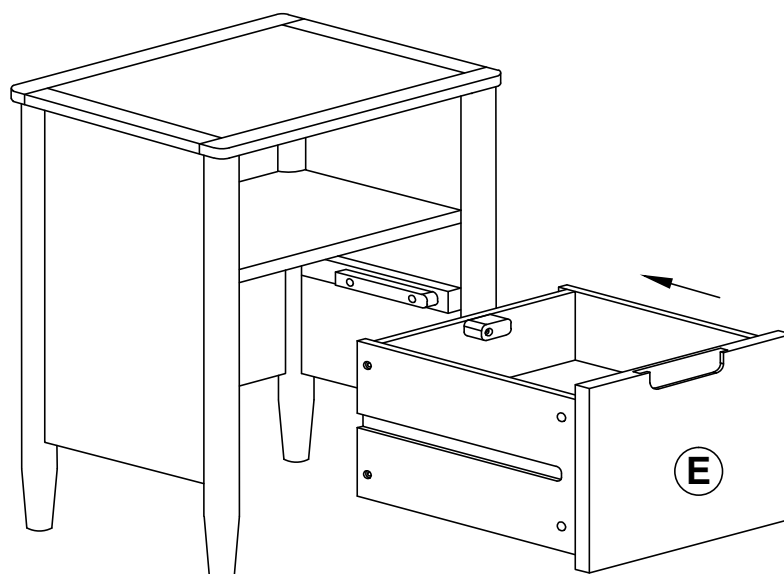

# KENAN

Ref: SD-0101


9/10

-V1.0-


# KLAST

www.klasthome.com

## STEP 13

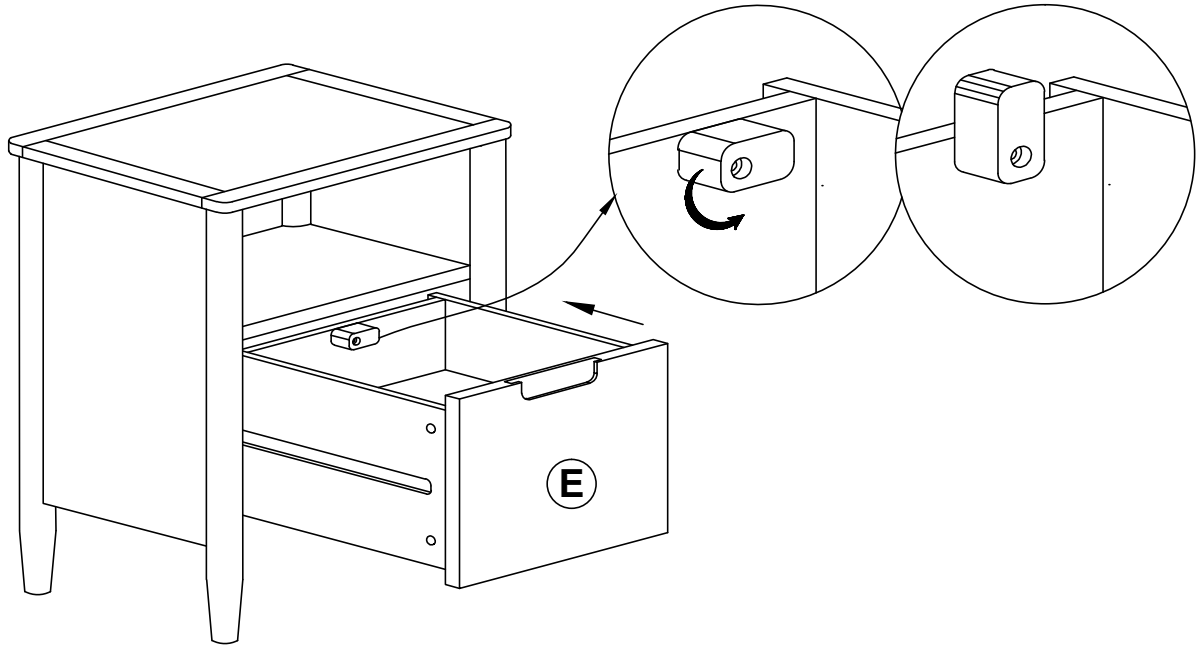

## STEP 14

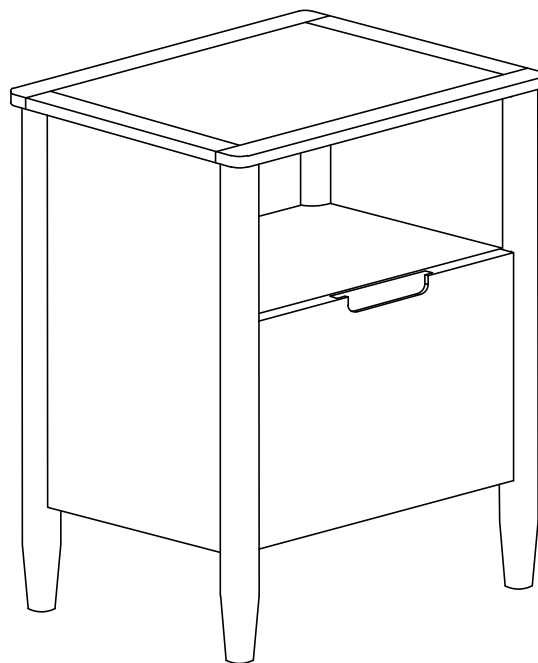

# KENAN

Ref: SD-0101

10/10

-V1.0-