


KLAST

www.klasthome.com

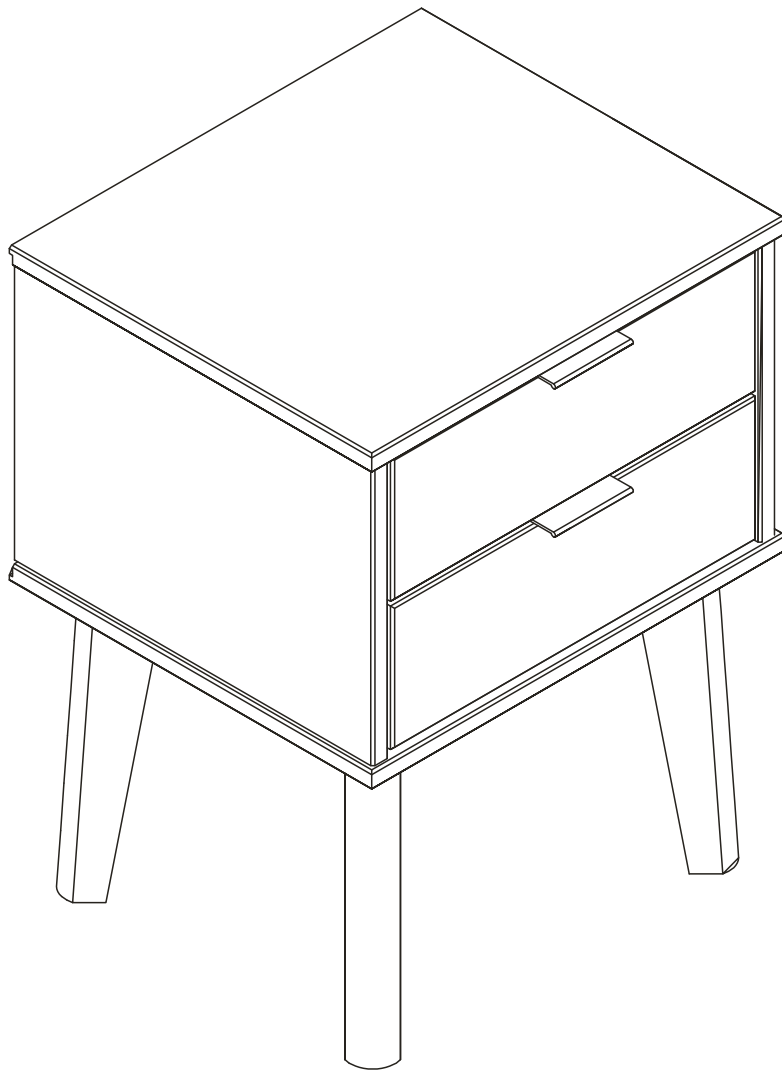

TROY

Ref: MC-0006


1/10

-V1.0-

KLAST

www.klasthome.com

MATERIAL

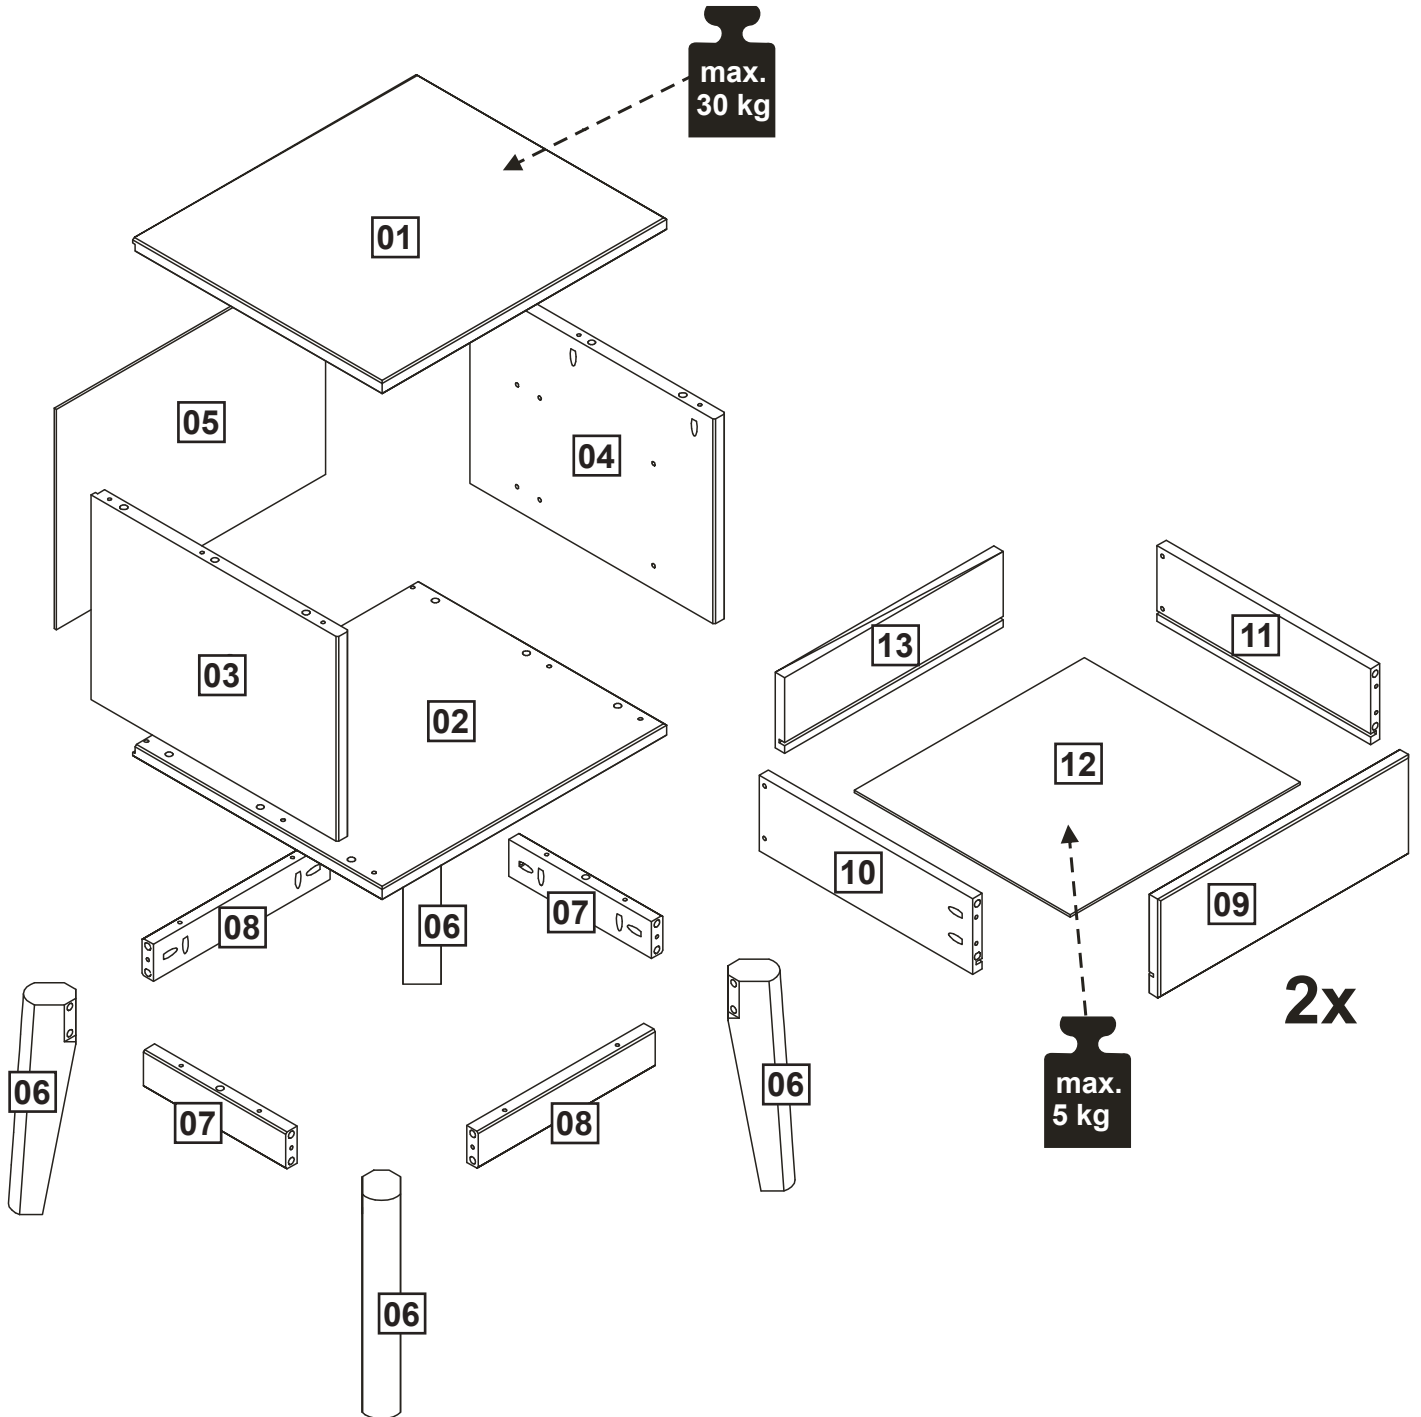

TROY

Ref: MC-0006




2/10








-V1.0-

KLAST

www.klasthome.com

MATERIAL

D		02	P		02
E		02			

A x38		8,0x30
B x30		4,0x30
C x06		4,0x40
F x08		4,5x35
G x08		6,0x10
H x20		3,0x12
N x14		1,8x20



TROY

Ref: MC-0006




KLAST

www.klathome.com

STEP 1

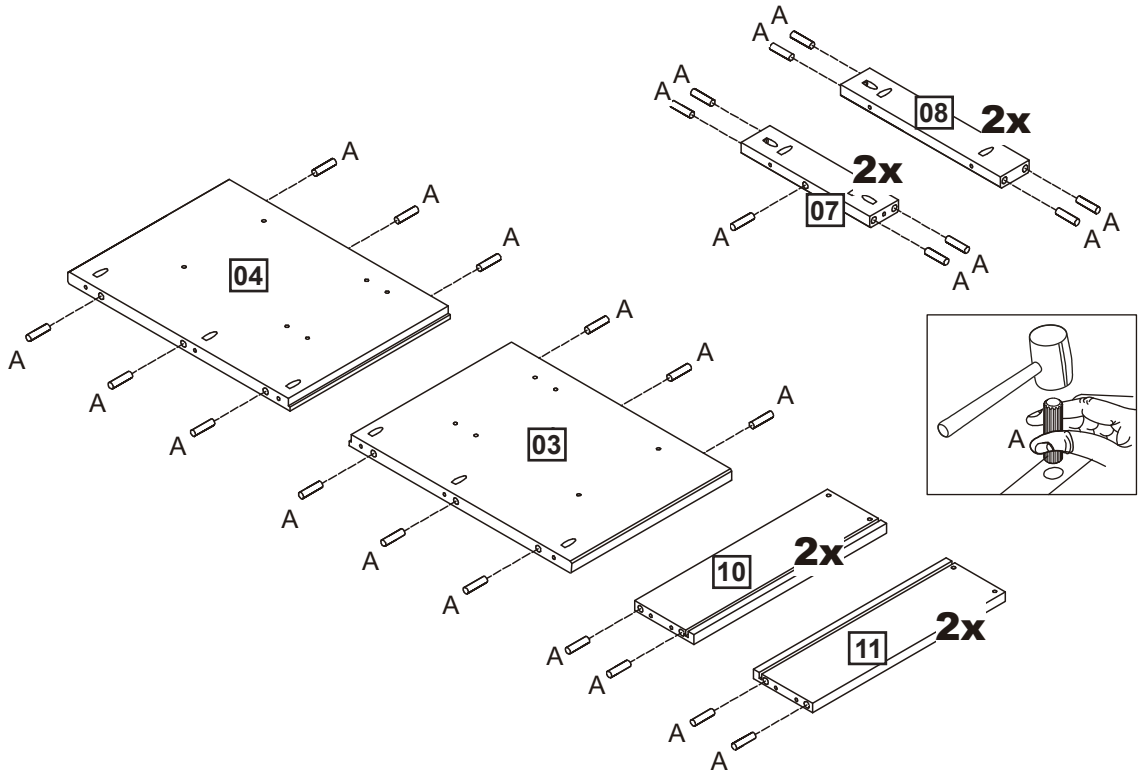

STEP 2

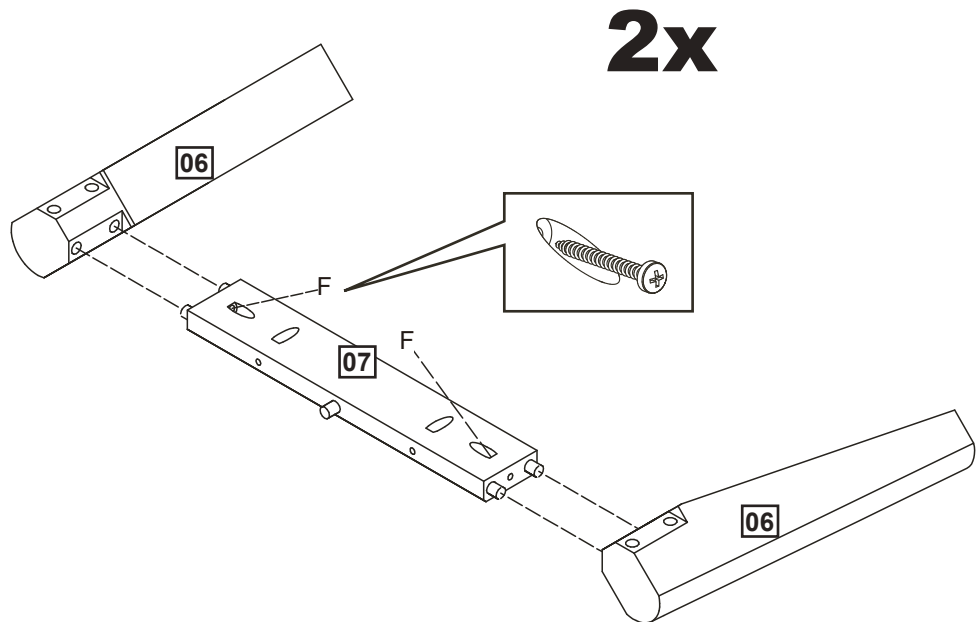

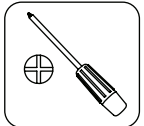


TROY
Ref: MC-0006






KLAST

www.klathome.com

STEP 3

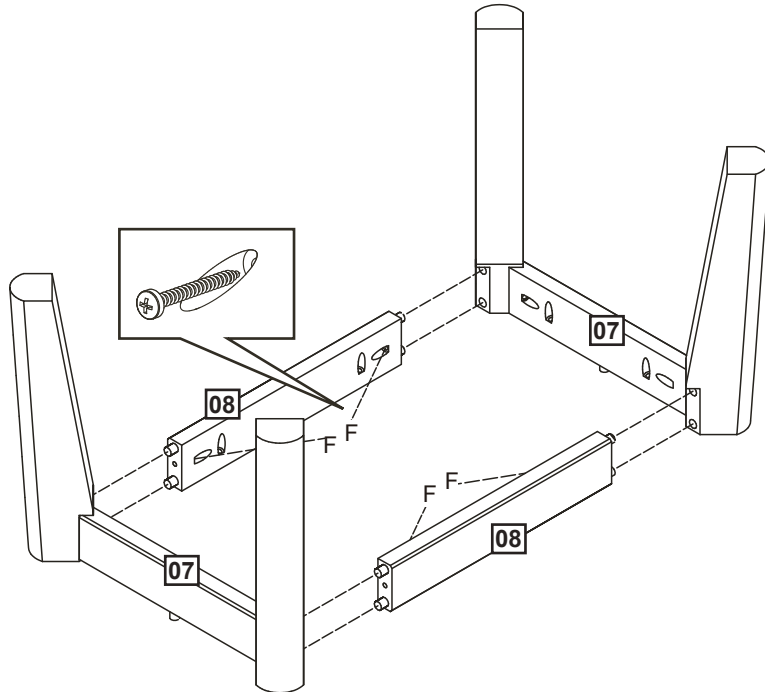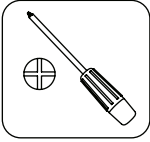

STEP 4

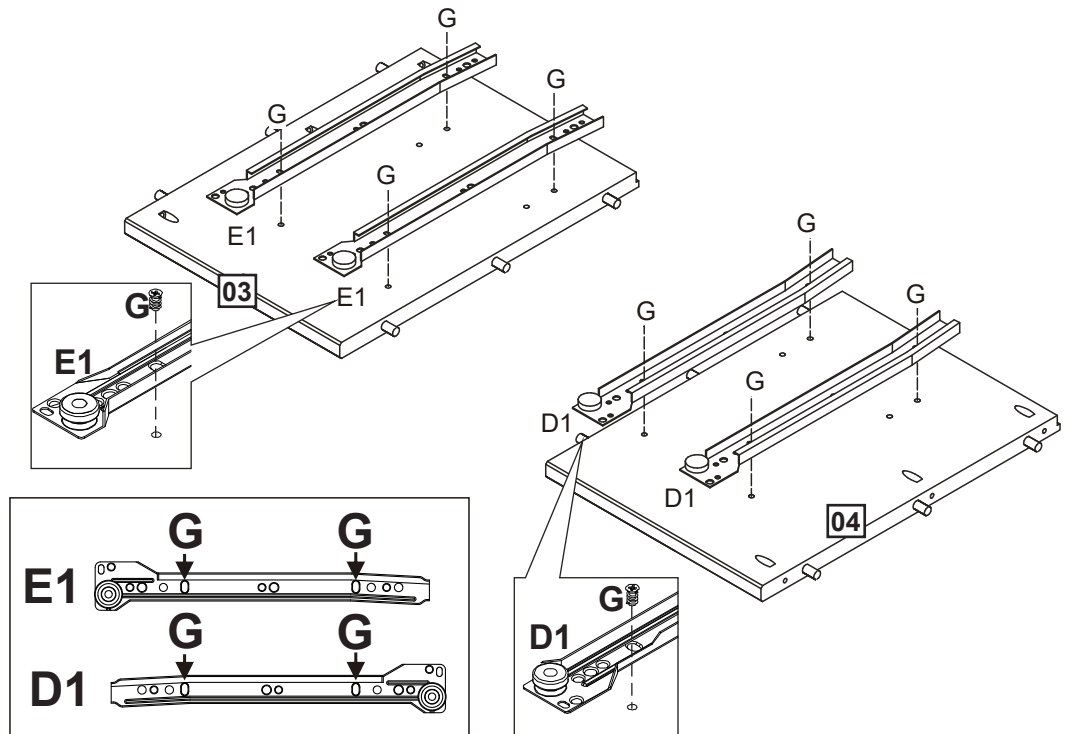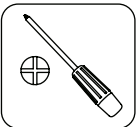




TROY

Ref: MC-0006



KLAST

www.klasthome.com

STEP 5

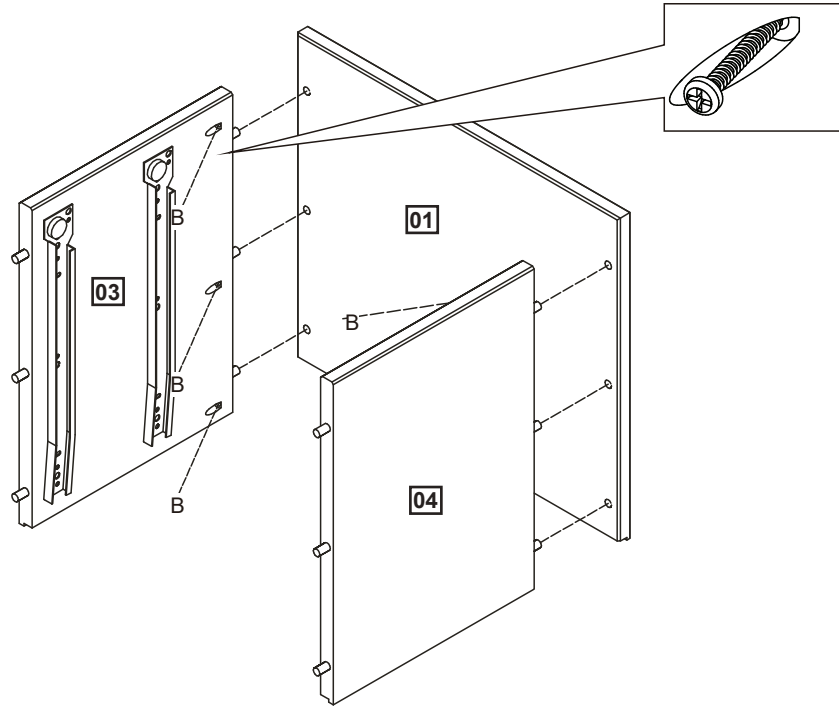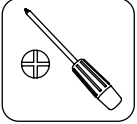

STEP 6

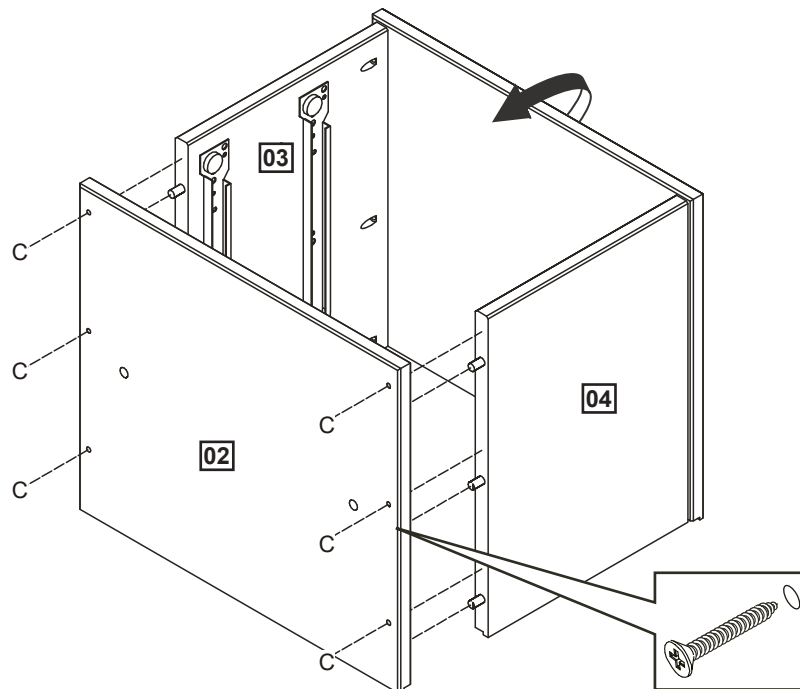



TROY

Ref: MC-0006




KLAST

www.klasthome.com

STEP 7

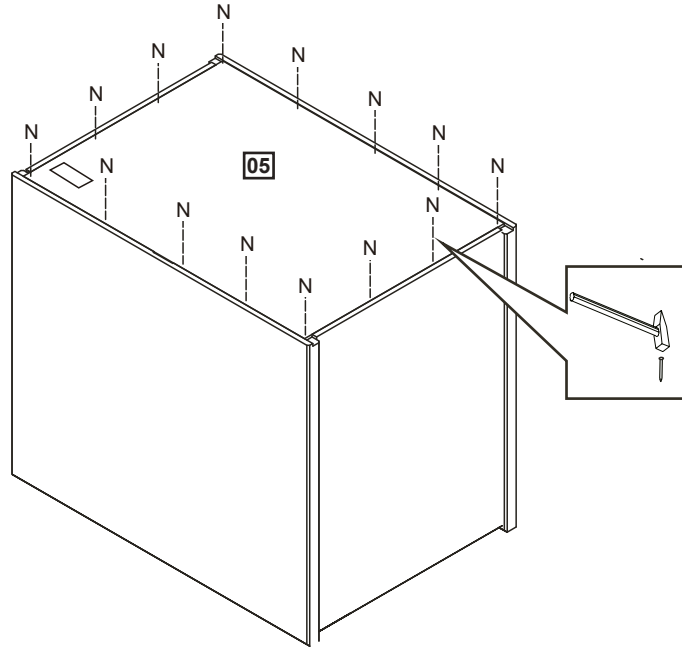

STEP 8

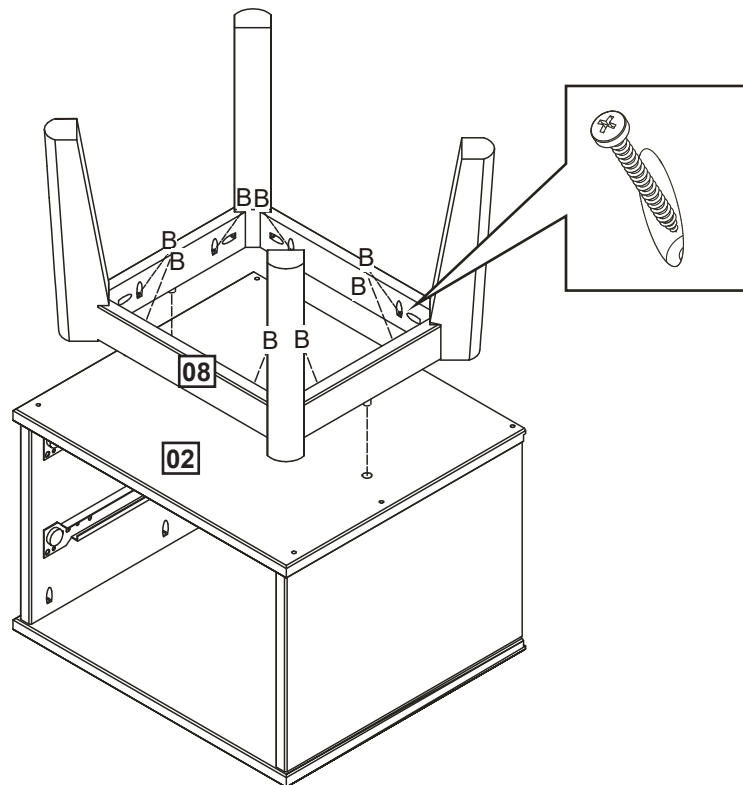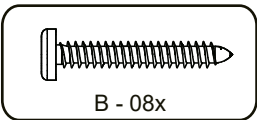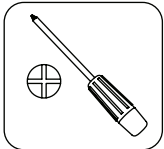




TROY

Ref: MC-0006







KLAST

www.klathome.com

STEP 9

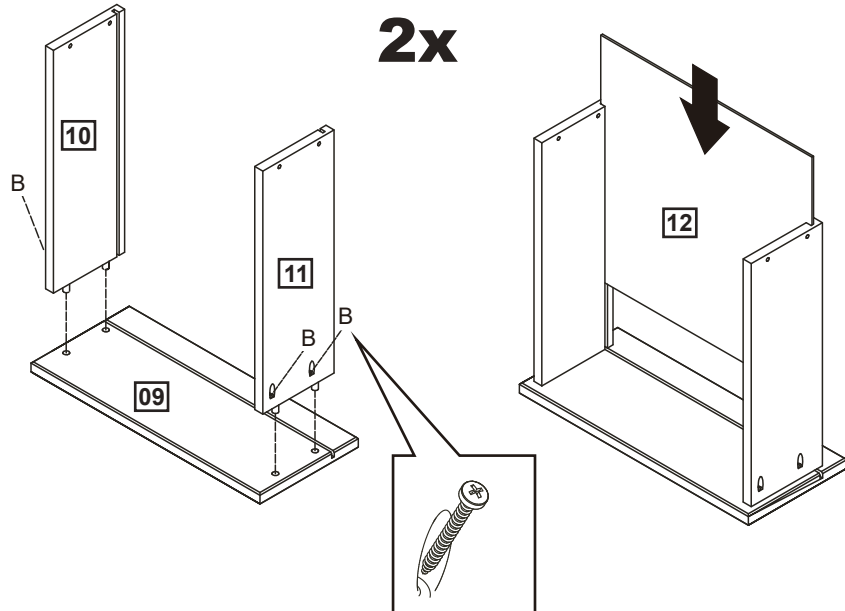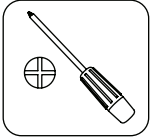

STEP 10

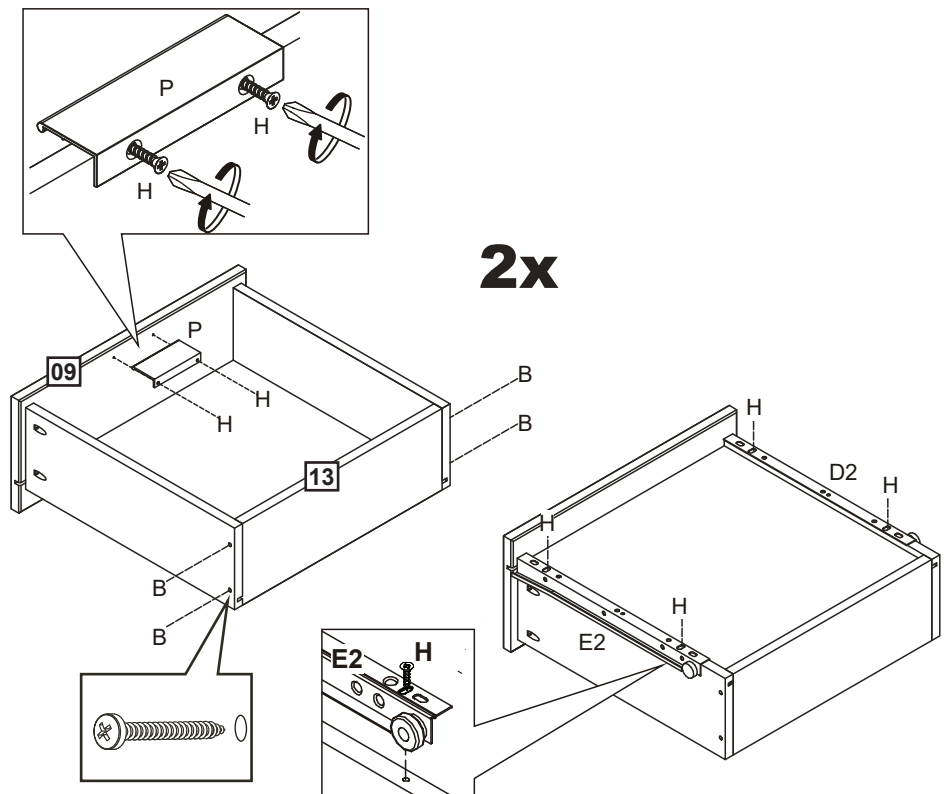


TROY

Ref: MC-0006

KLAST

www.klasthome.com

STEP 11

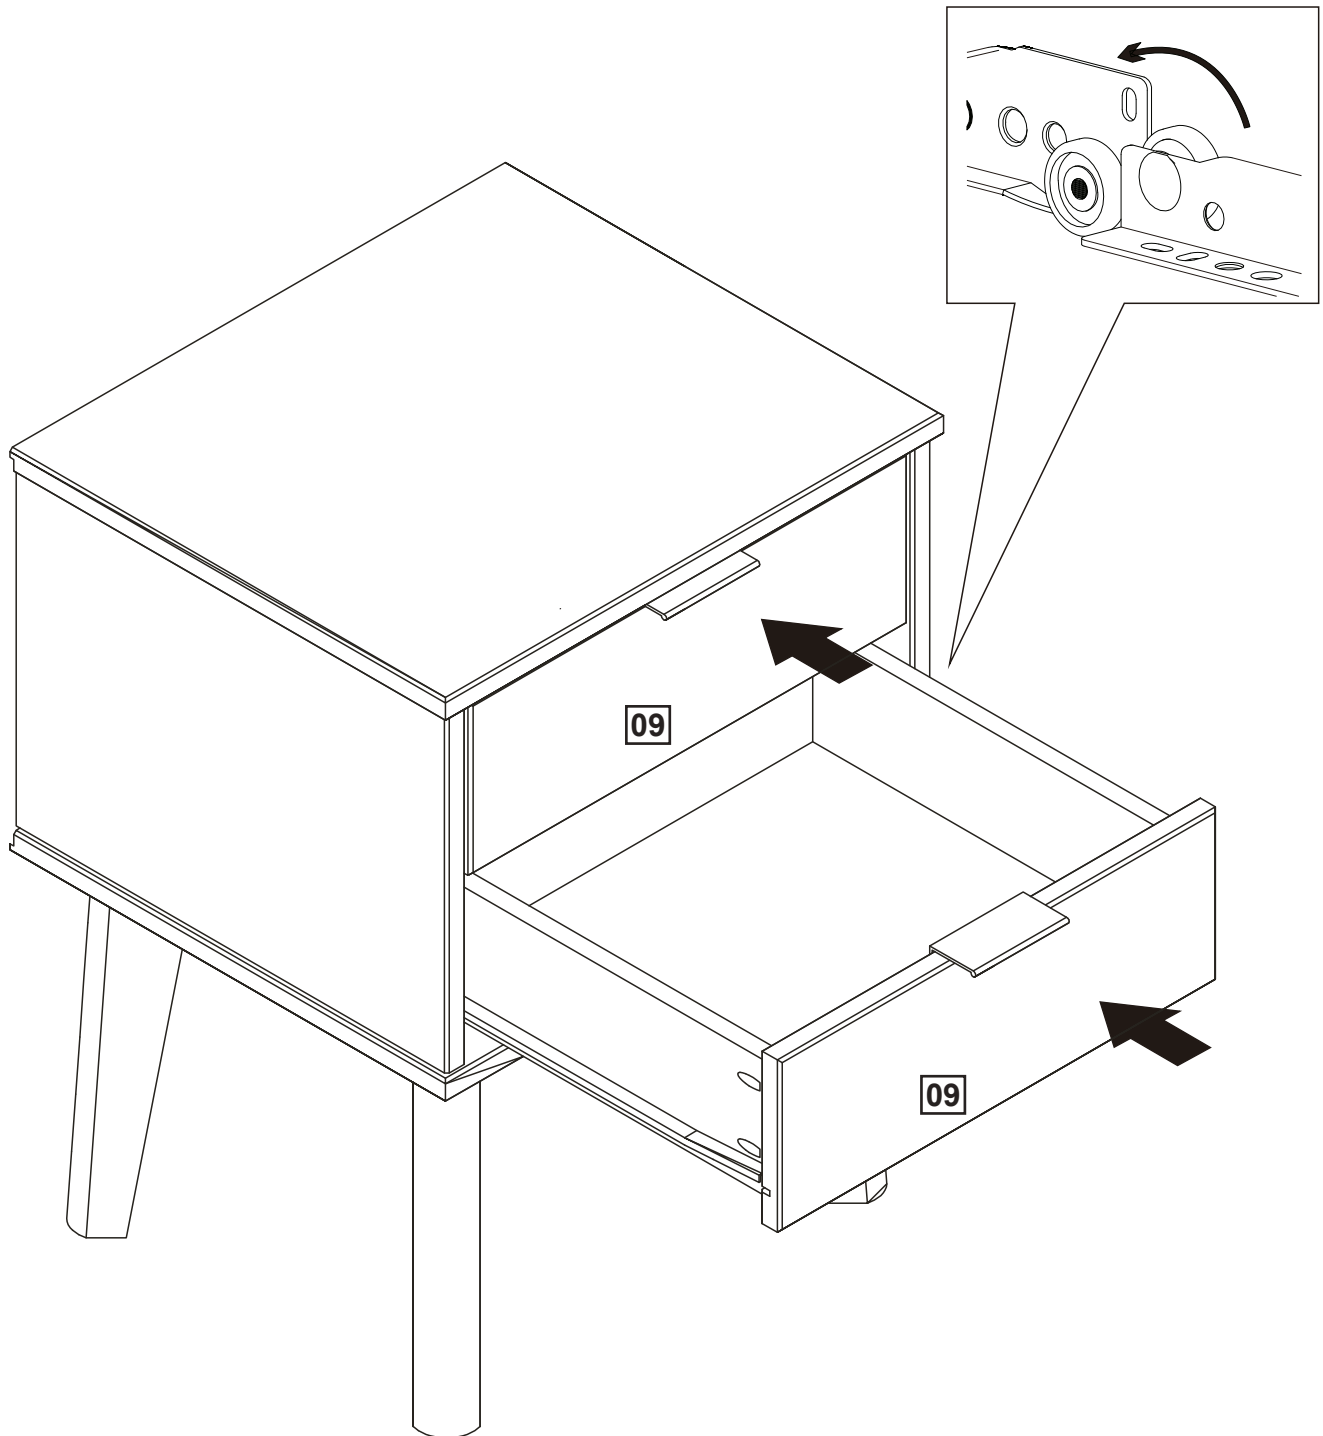

TROY

Ref: MC-0006




9/10

-V1.0-


KLAST

www.klathome.com

STEP 13

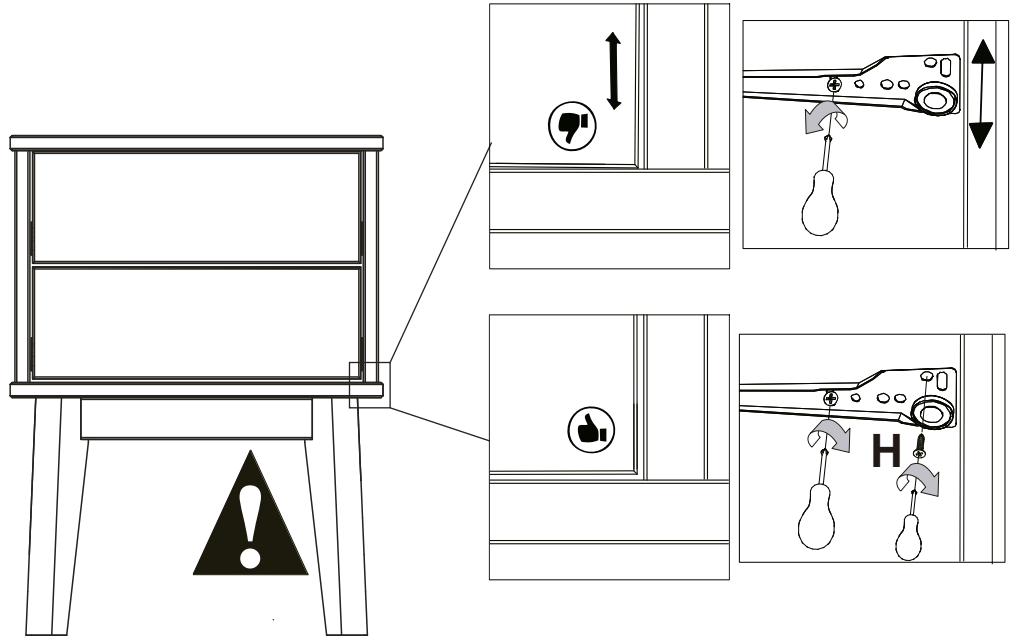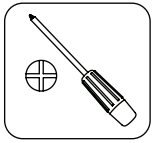

STEP 14

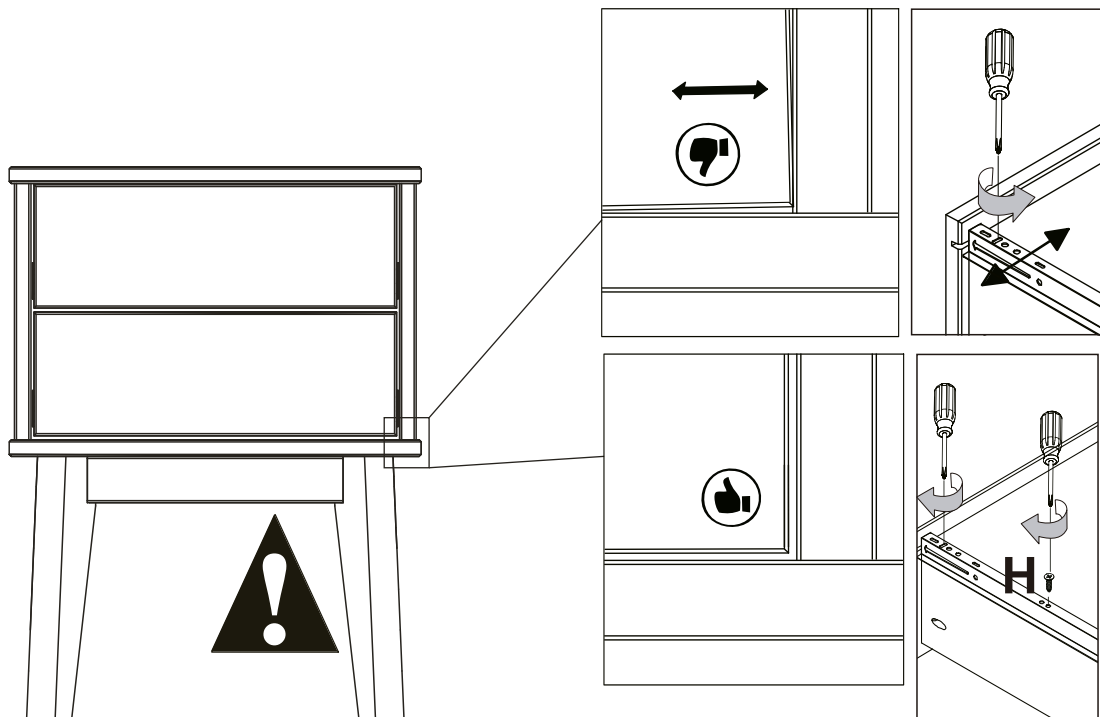

TROY

Ref: MC-0006