


KLAST

www.klasthome.com

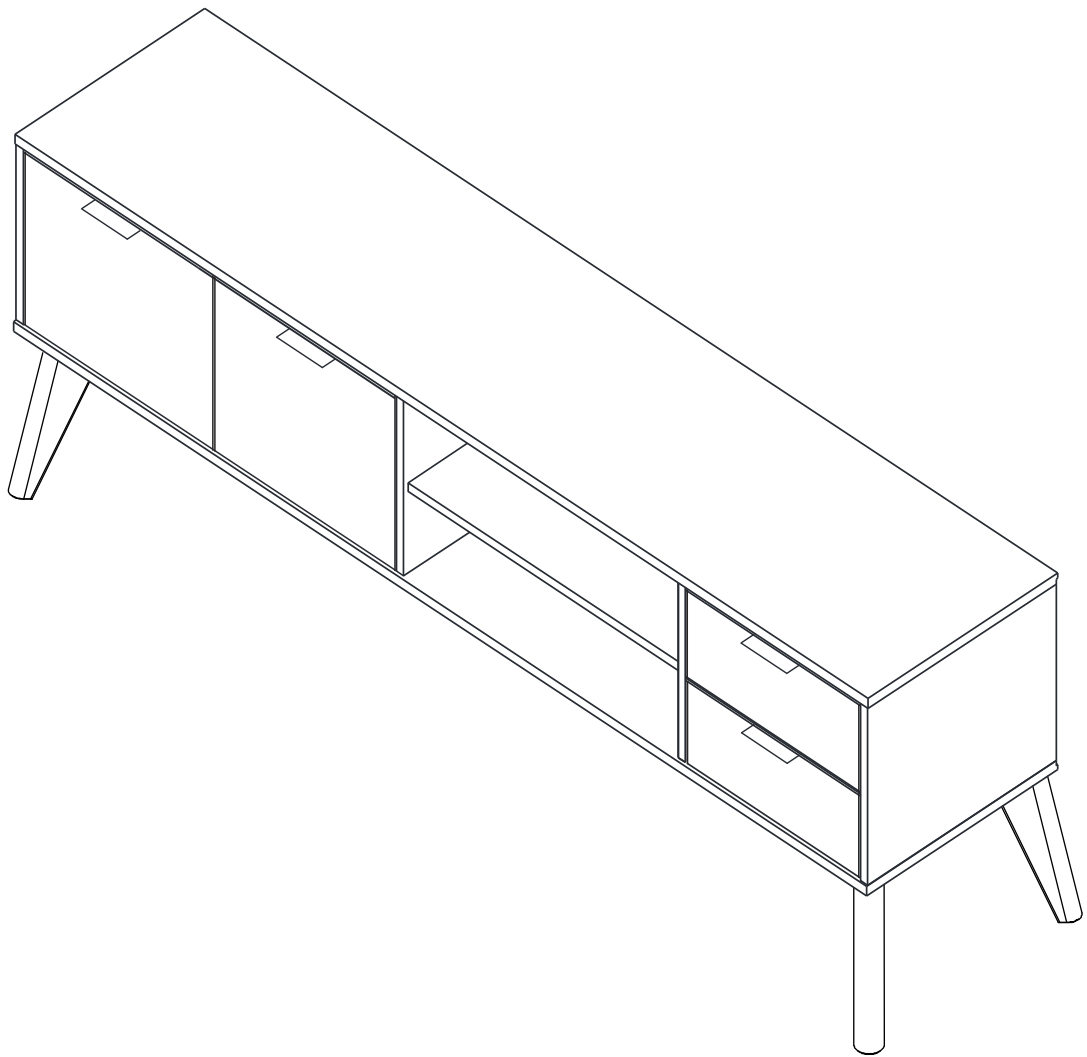

TROY

Ref: MC-0010


1/16

-V1.0-

KLAST

www.klasthome.com

MATERIAL

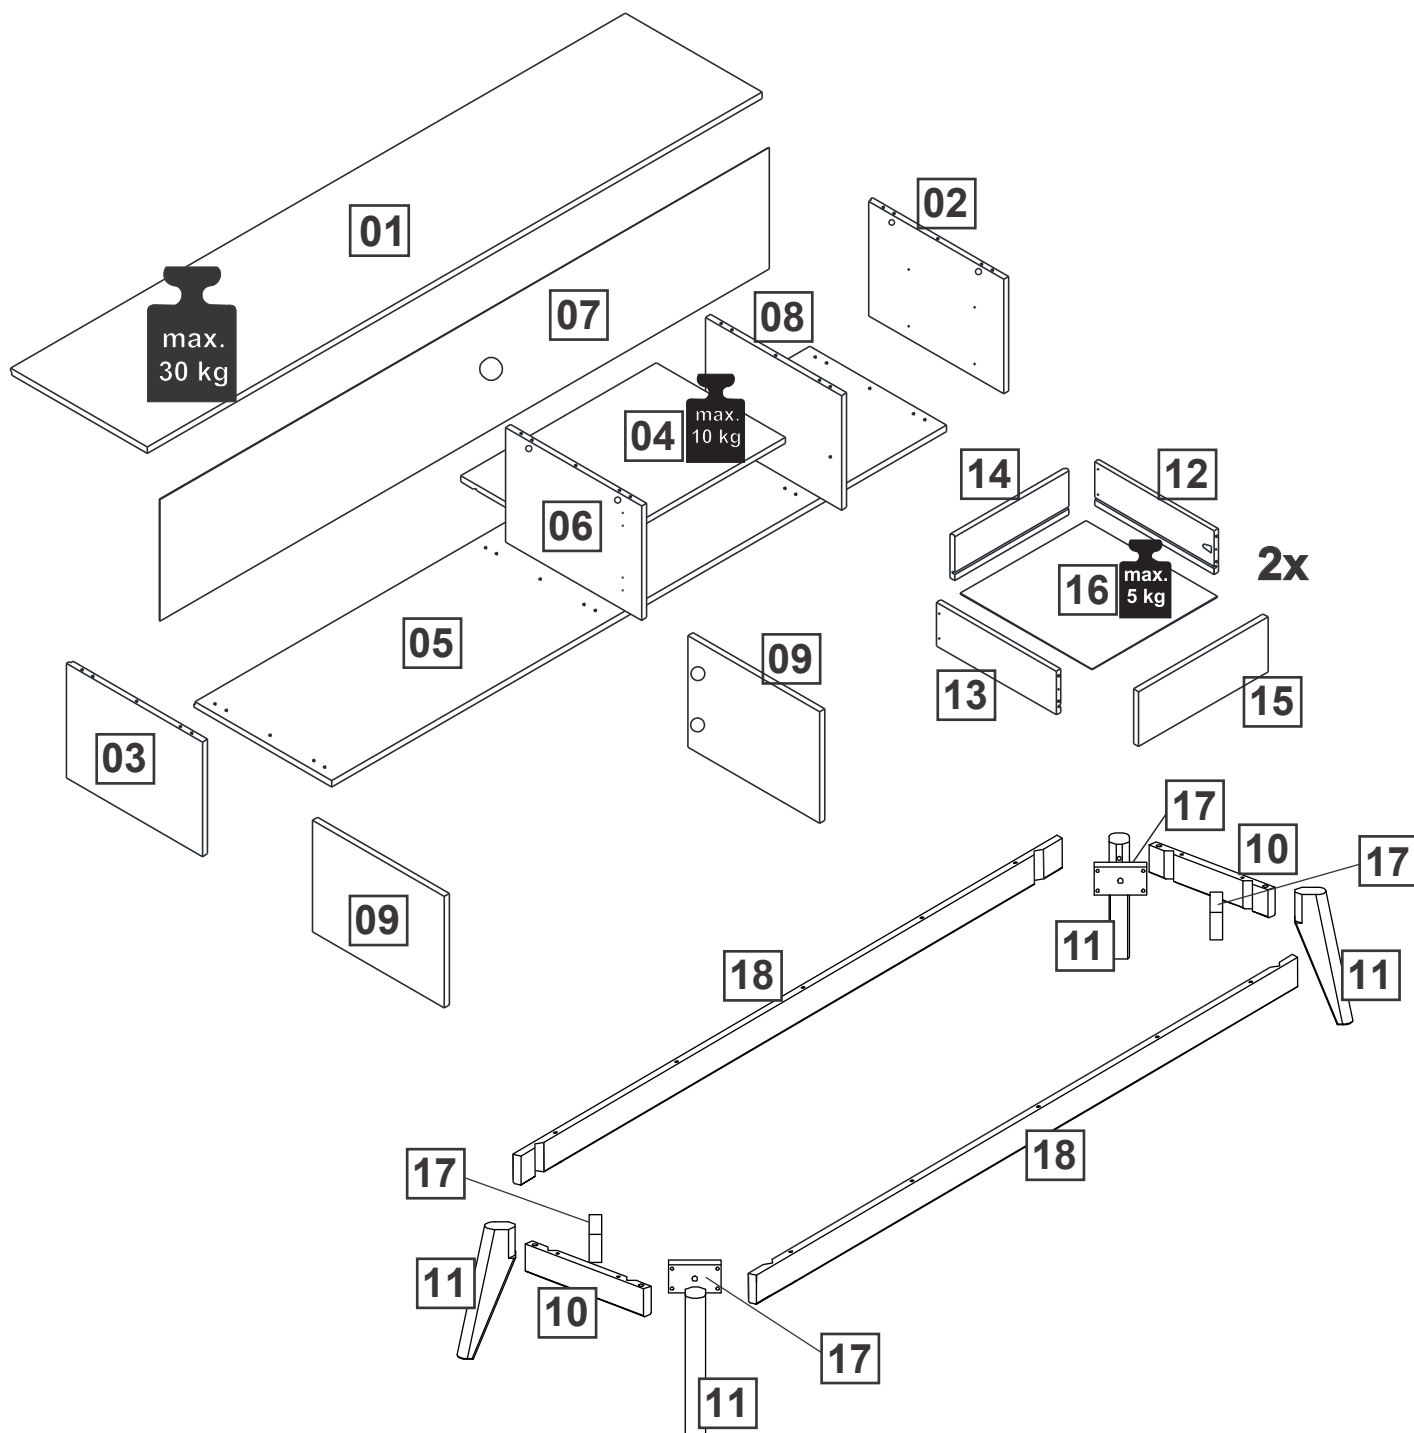





TROY










Ref: MC-0010

KLAST

www.klasthome.com

MATERIAL

M		01
L		08
G		04
E		02
D		02
Q		02
K		04
R		04
S		04
X		02
V		01

A x36		8,0x30
B x28		3,5x30
C x08		6,0x10
F x30		1,8x20
H x33		3,5x14
I x08		3,0x12
J x08		6,0x30
N x04		7,0x70
O x08		3,5x40
P x14		4,0x45
T x02		4,0x16
U x04		4,0x30





TROY

Ref: MC-0010




KLAST

www.klathome.com

STEP 1

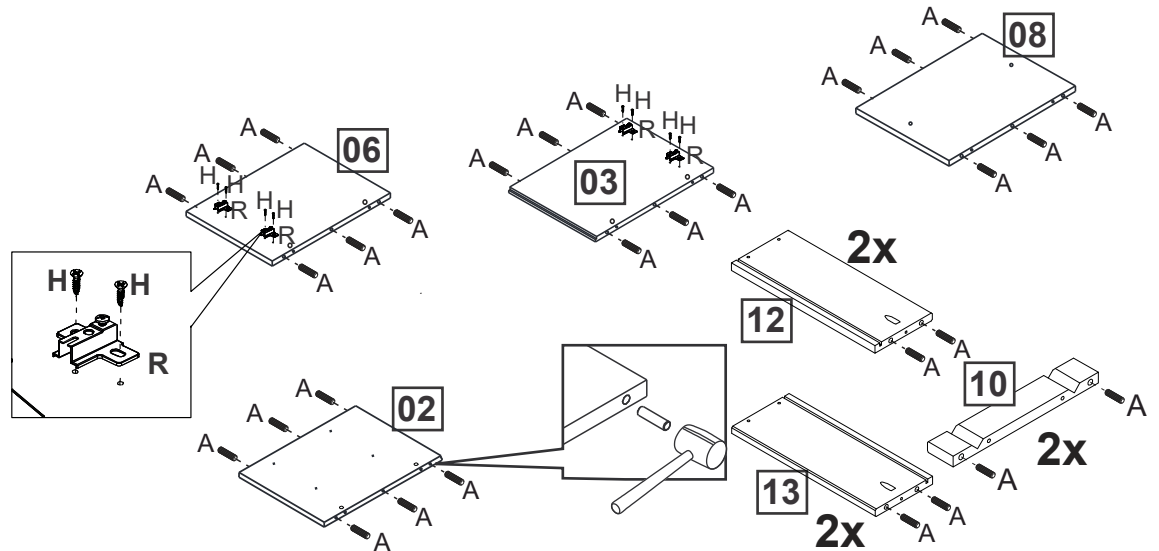

STEP 2

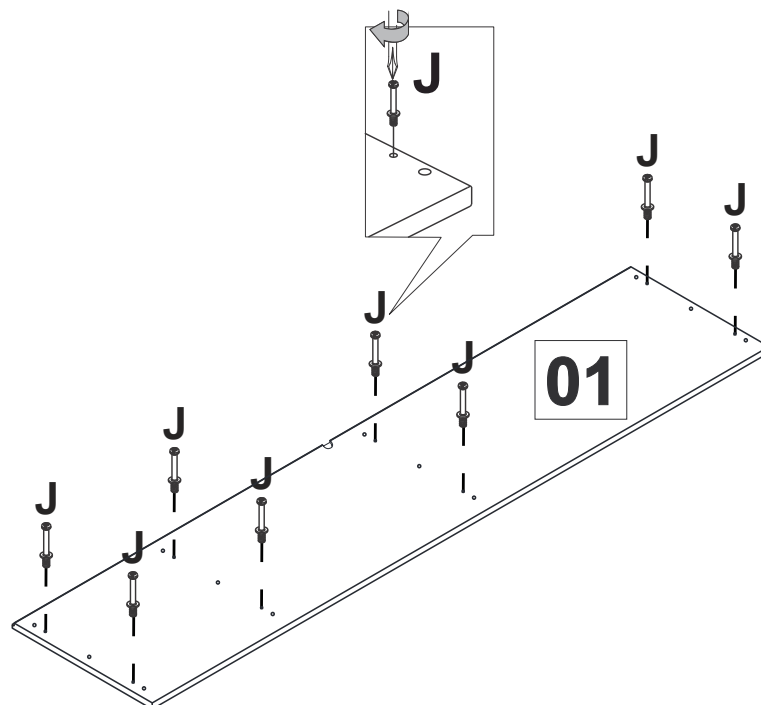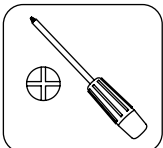






TROY

Ref: MC-0010




KLAST

www.klasthome.com

STEP 3

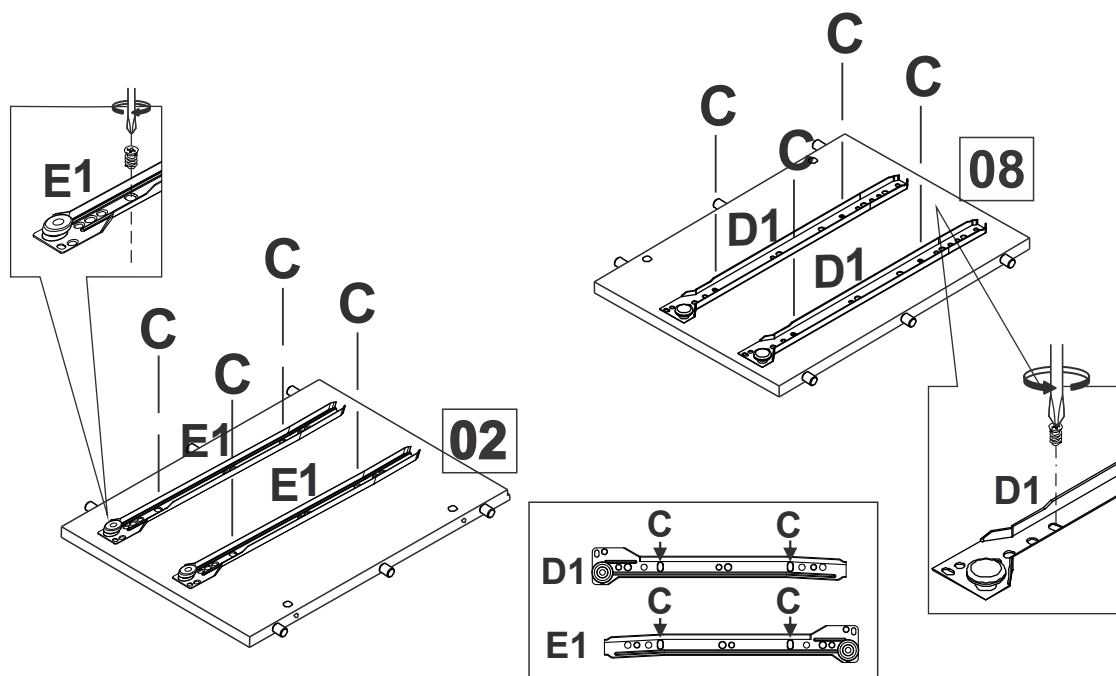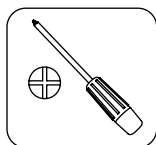

STEP 4

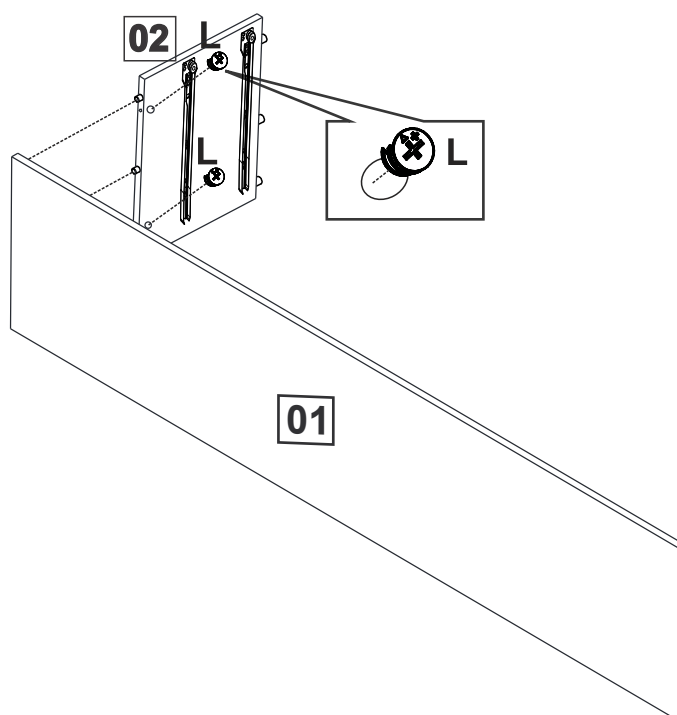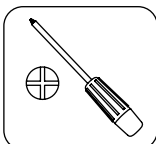


TROY

Ref: MC-0010




KLAST

www.klasthome.com

STEP 5

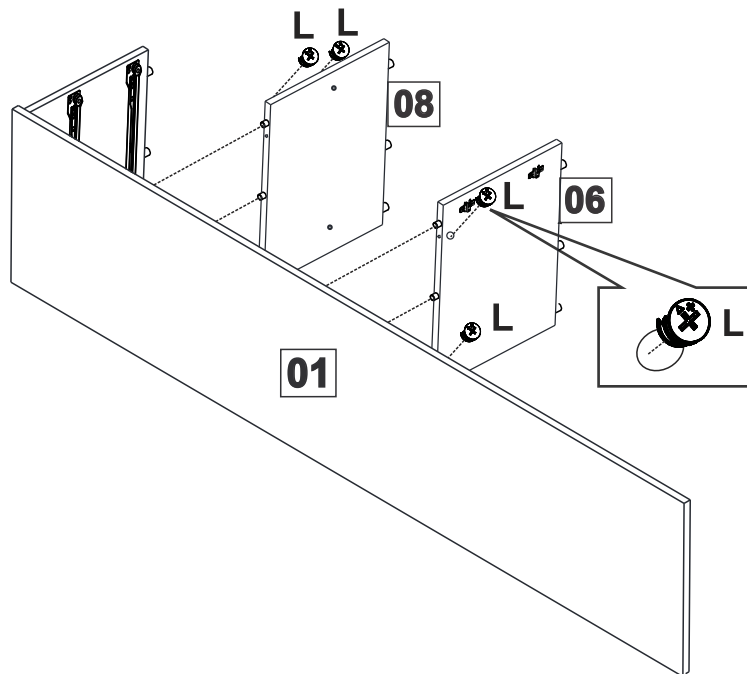

STEP 6

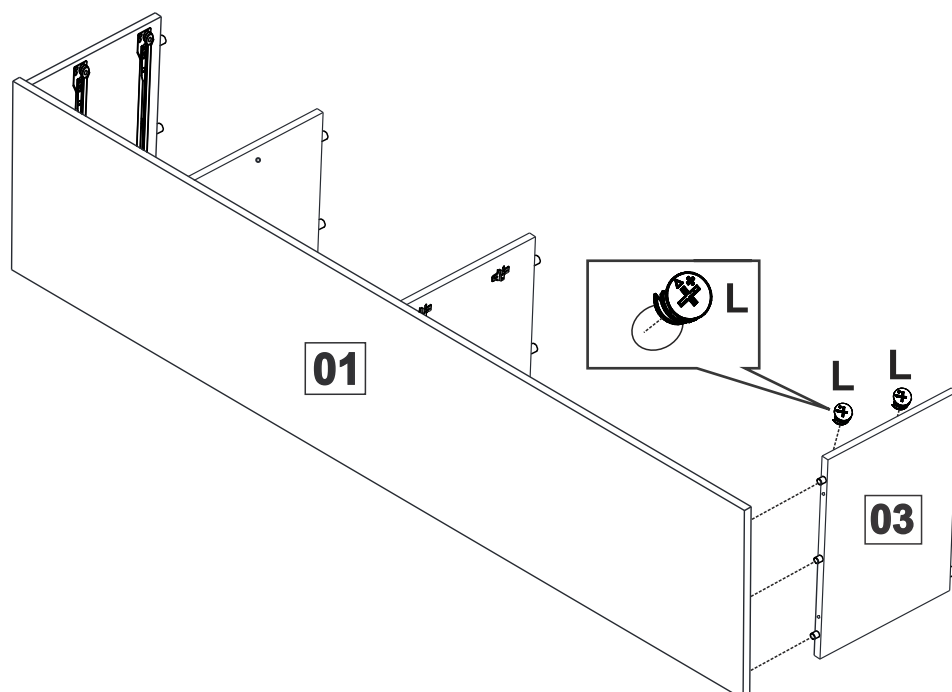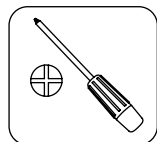



TROY

Ref: MC-0010



KLAST

www.klasthome.com

STEP 7

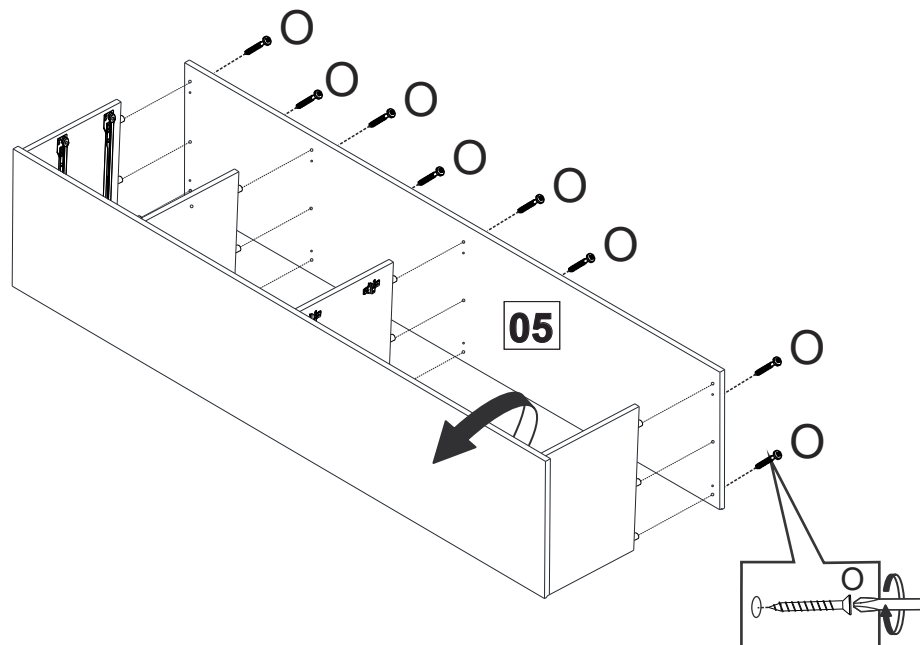

STEP 8

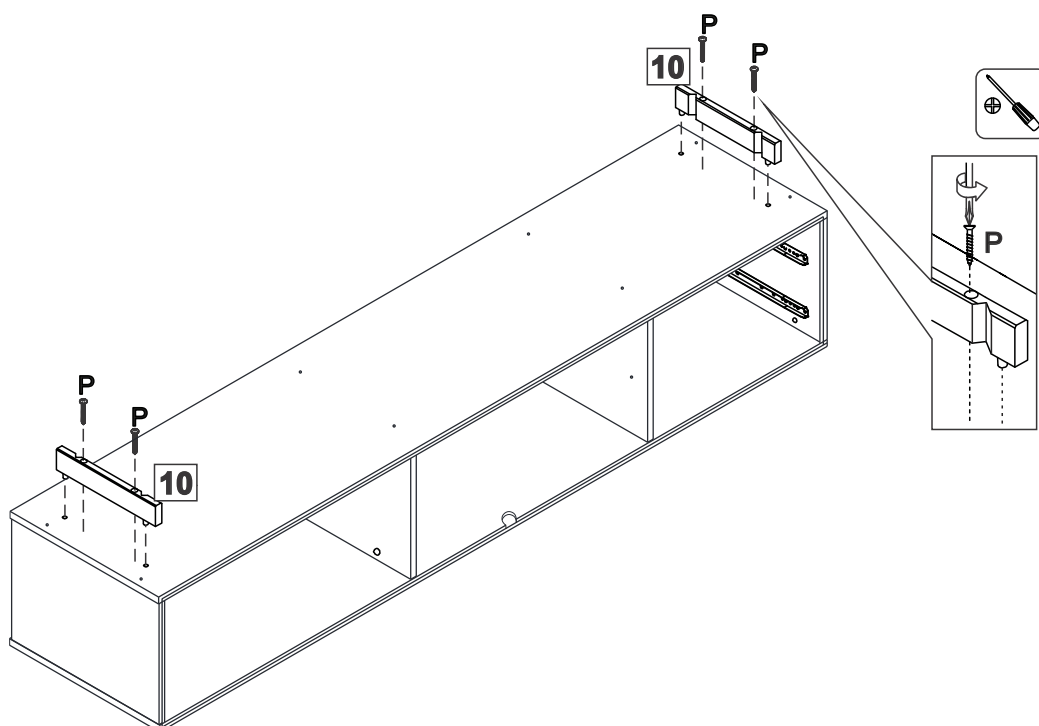

TROY

Ref: MC-0010




7/16

-V1.0-




KLAST

www.klasthome.com

STEP 9

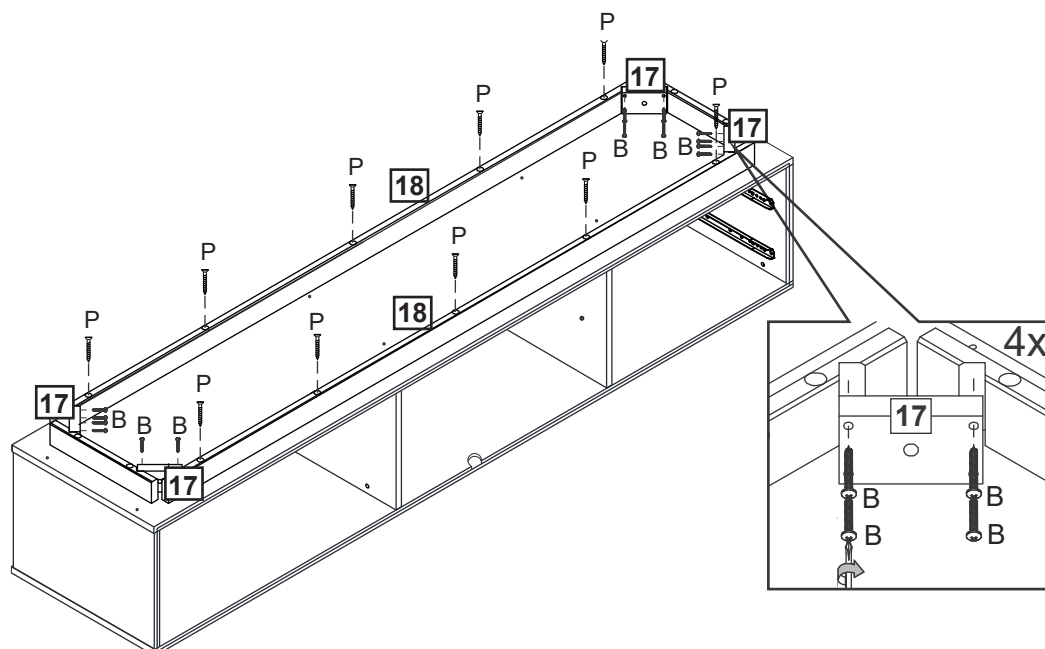

STEP 10

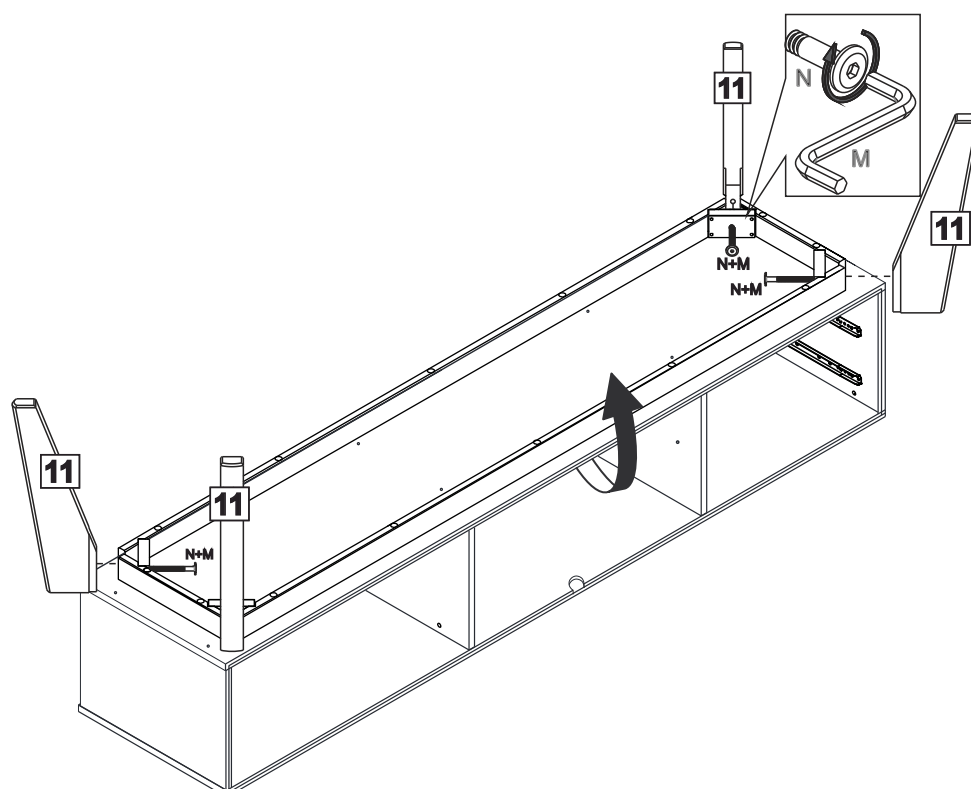

TROY

Ref: MC-0010



8/16

-V1.0-

KLAST

www.klasthome.com

STEP 11

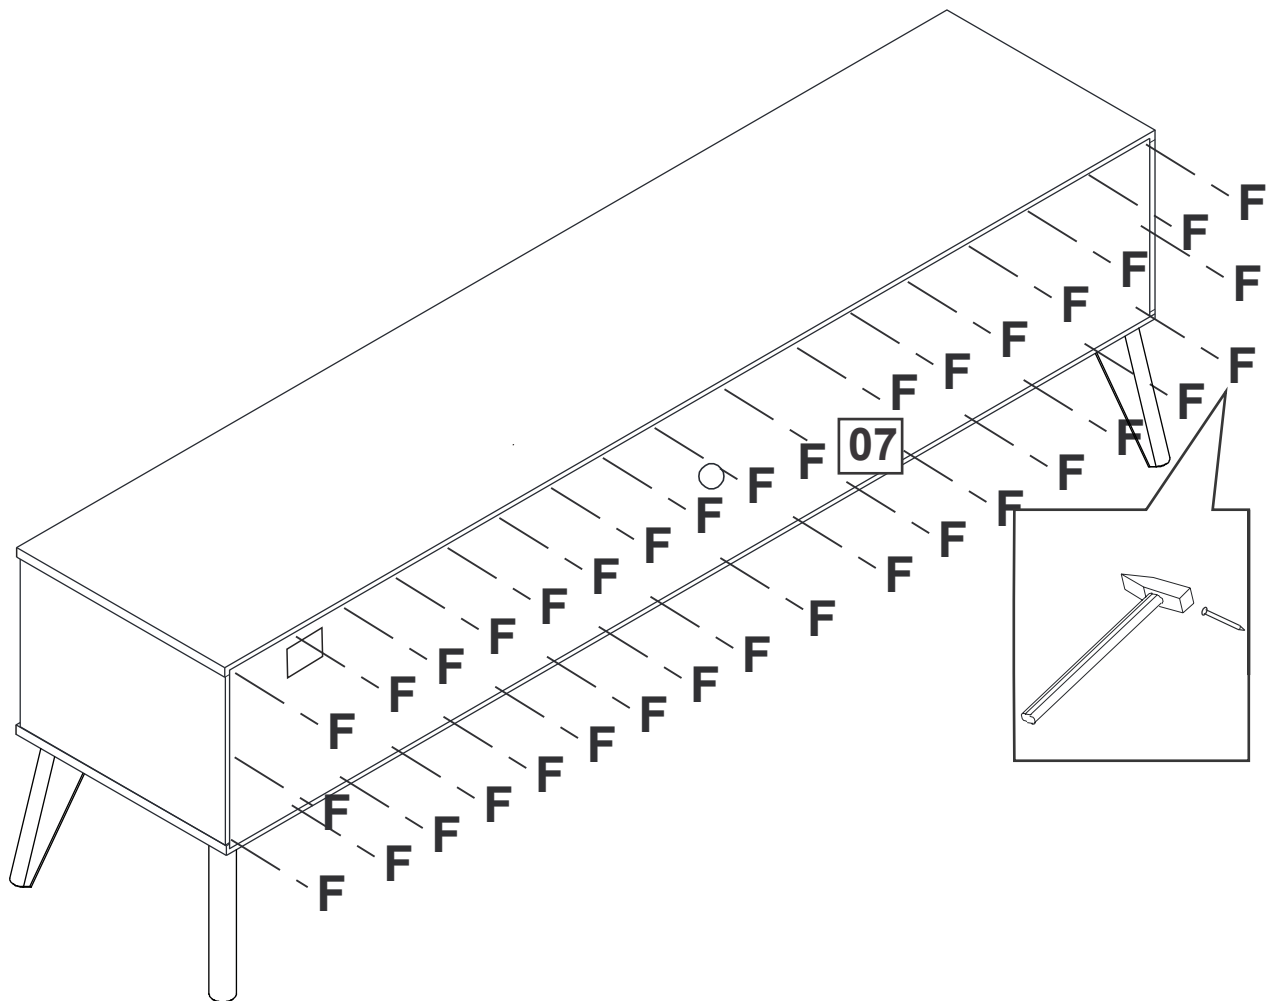

TROY

Ref: MC-0010


9/16

-V1.0-





KLAST

www.klasthome.com

STEP 12

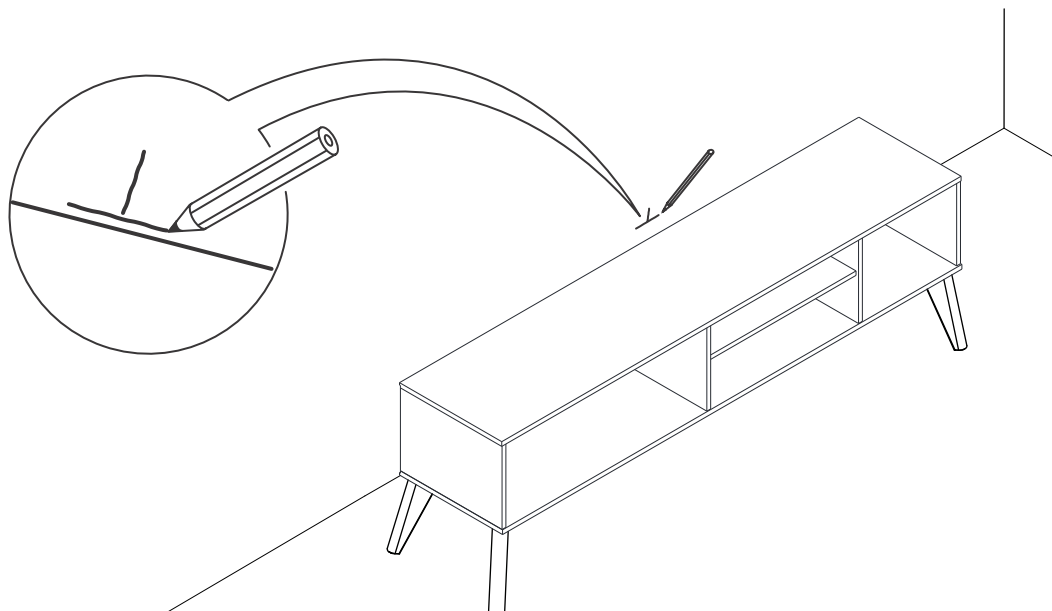

STEP 13

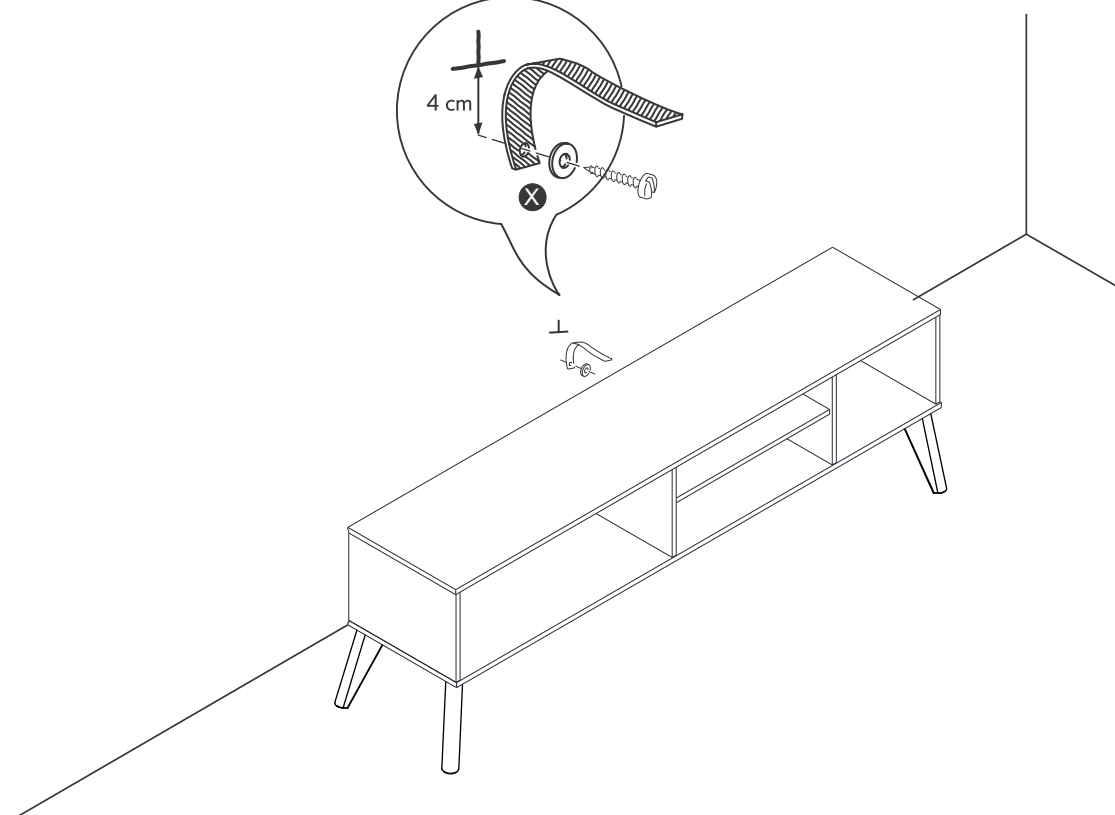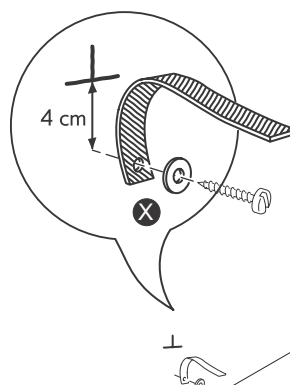

TROY

Ref: MC-0010


10/16

-V1.0-




KLAST

www.klasthome.com

STEP 14

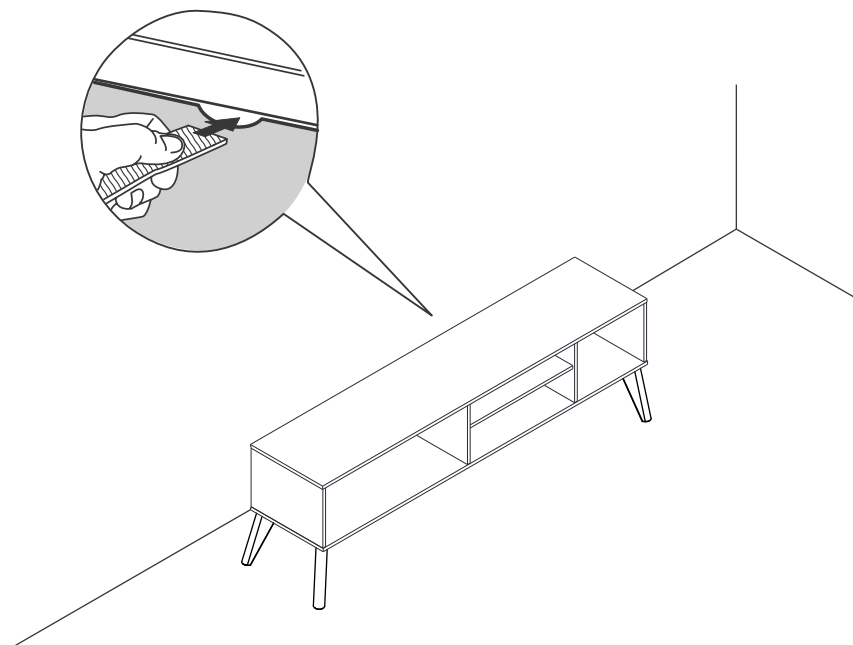

STEP 15

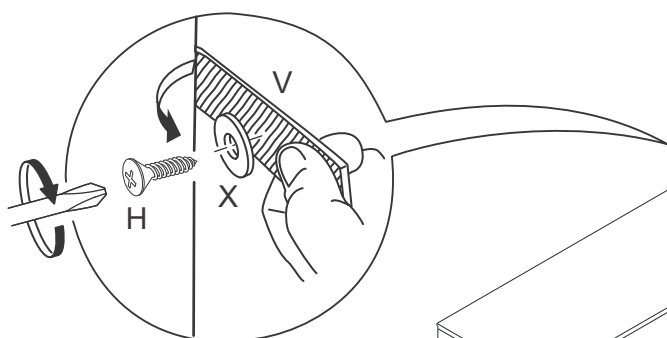

TROY

Ref: MC-0010




11/16

-V1.0-







KLAST

www.klasthome.com

STEP 16

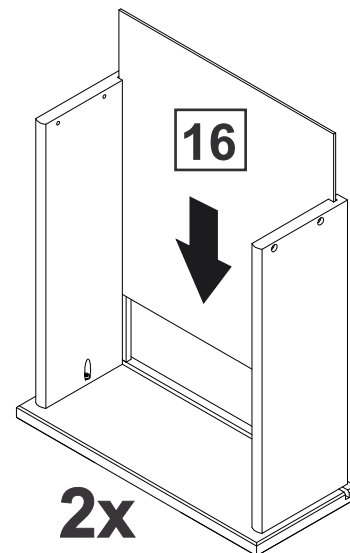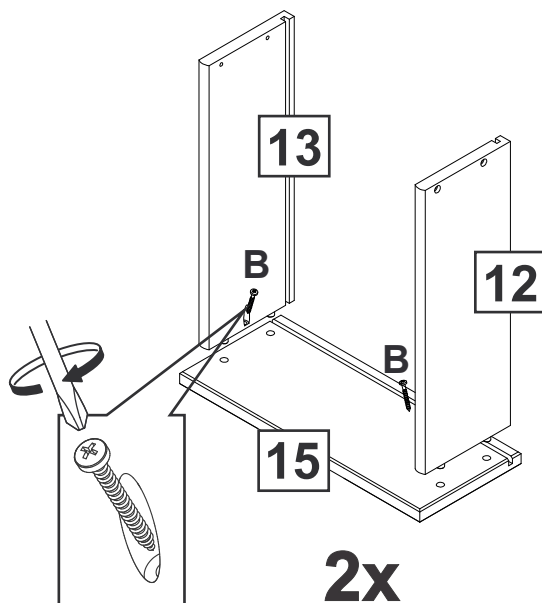

STEP 17

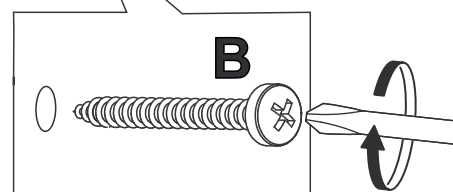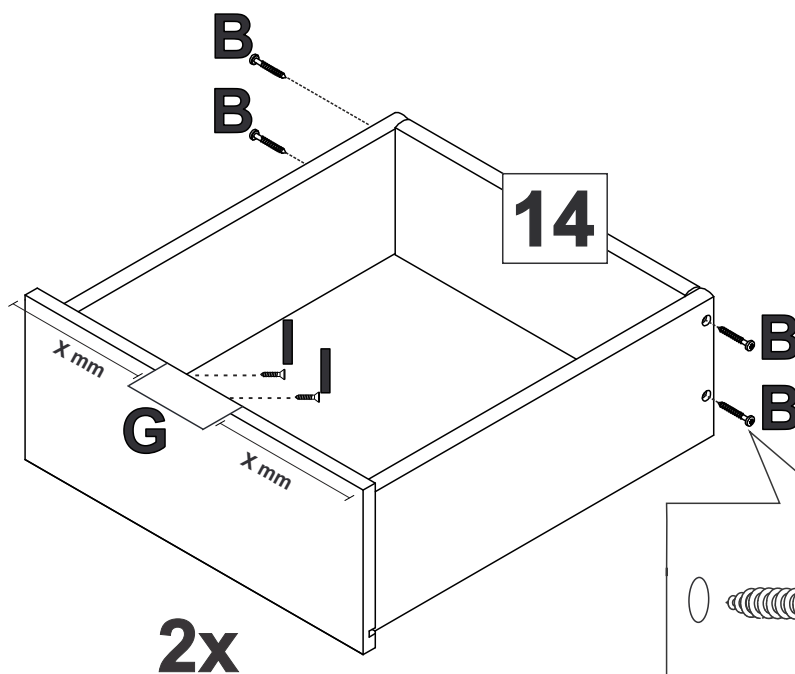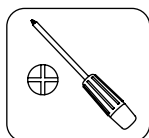





TROY

Ref: MC-0010






KLAST

www.klasthome.com

STEP 18

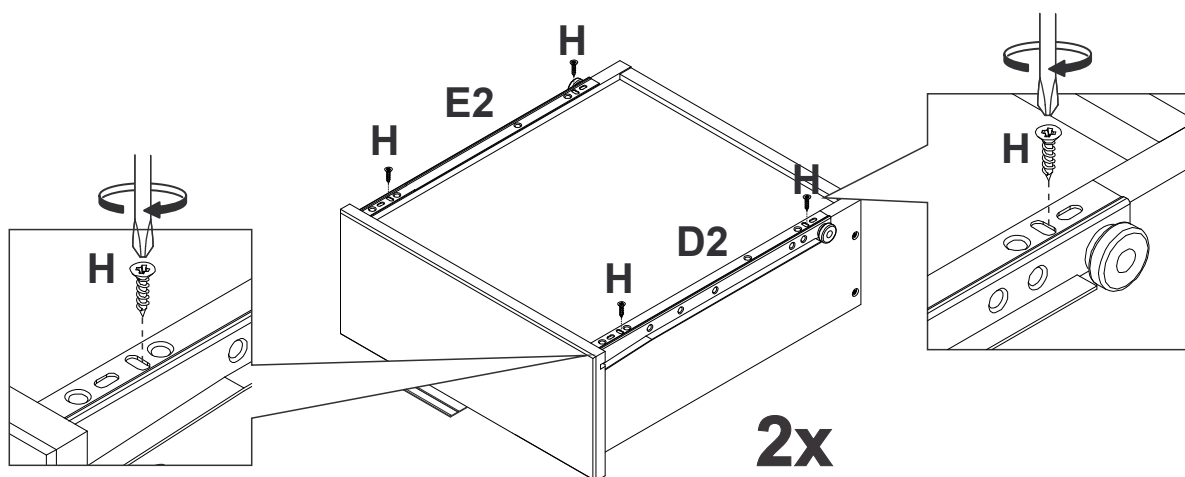

STEP 19

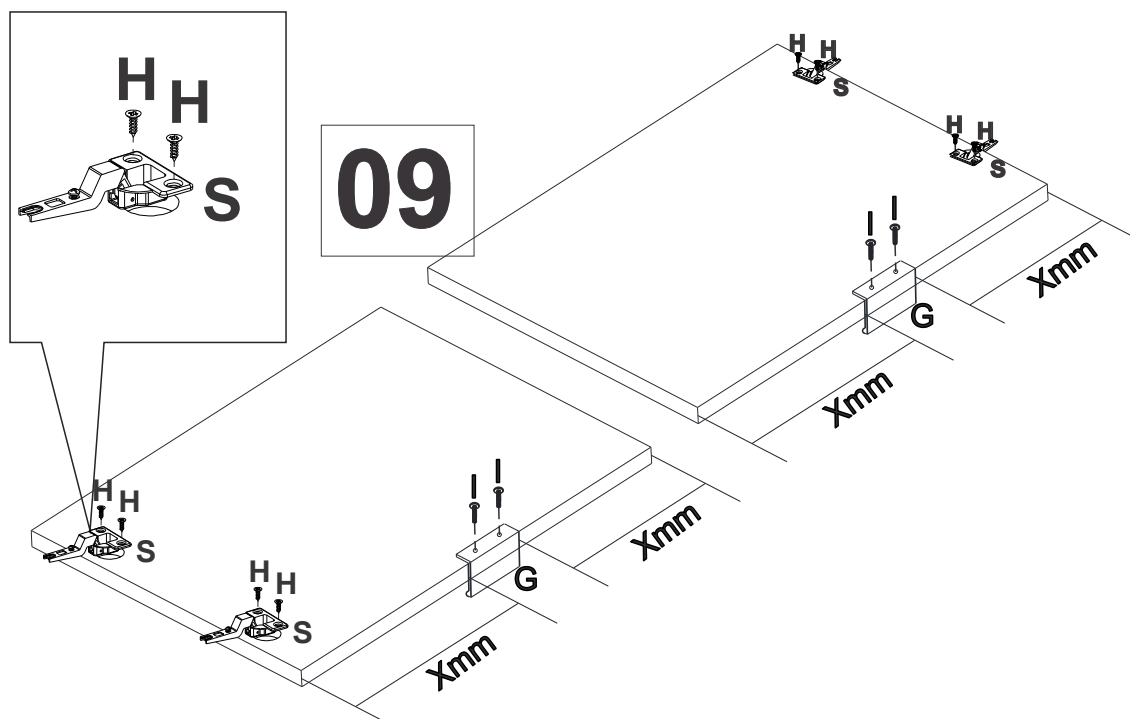




TROY

Ref: MC-0010


KLAST

www.klasthome.com

STEP 20

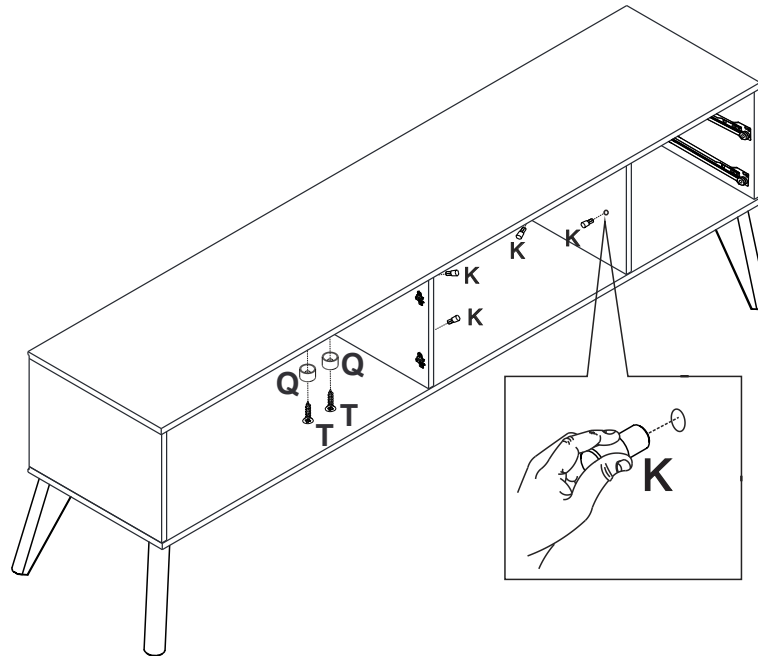

STEP 21

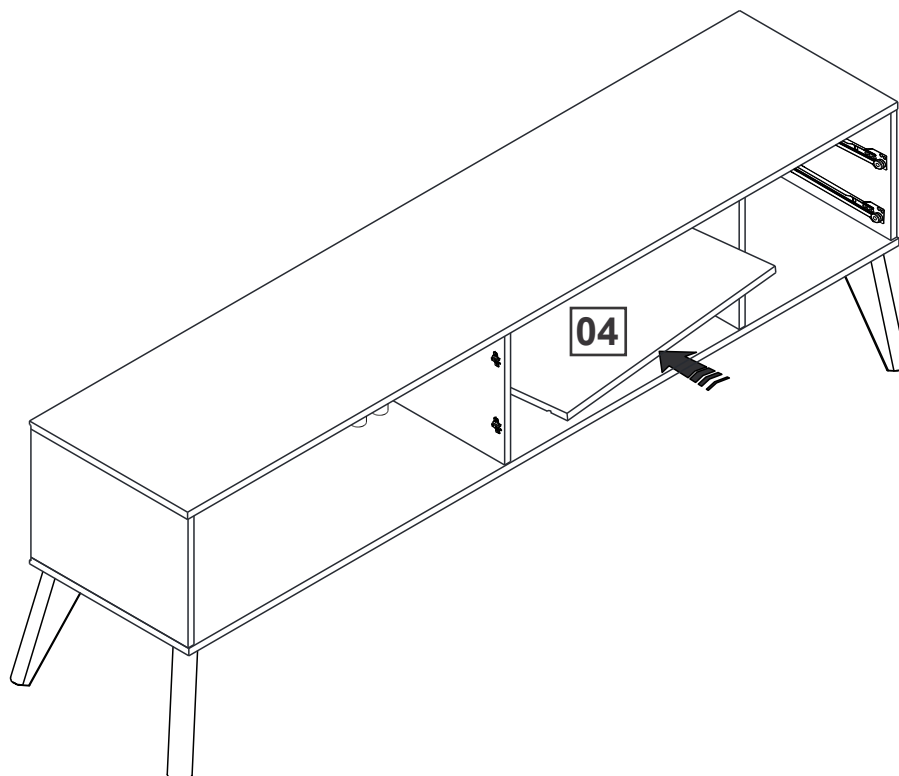




TROY

Ref: MC-0010


KLAST

www.klasthome.com

STEP 22

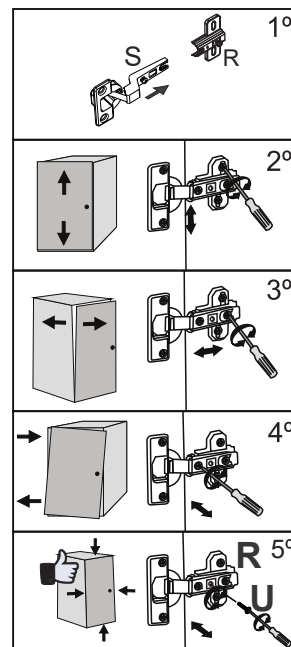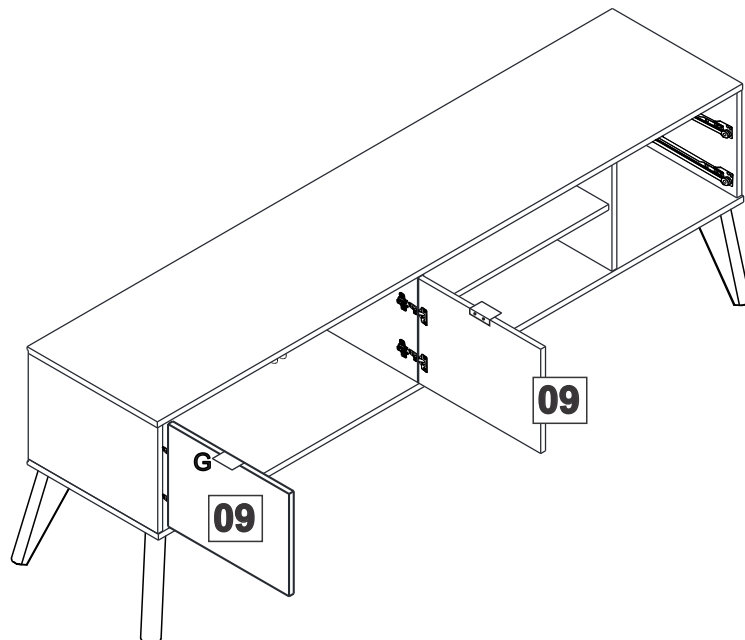

STEP 23

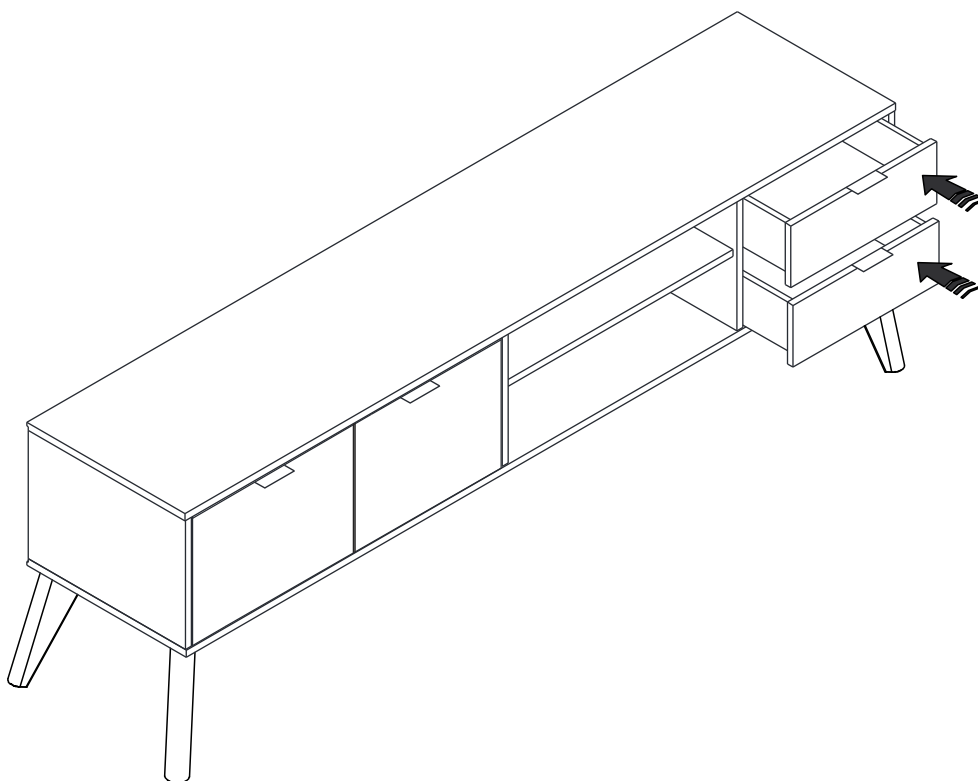



TROY

Ref: MC-0010



KLAST

www.klasthome.com

STEP 24

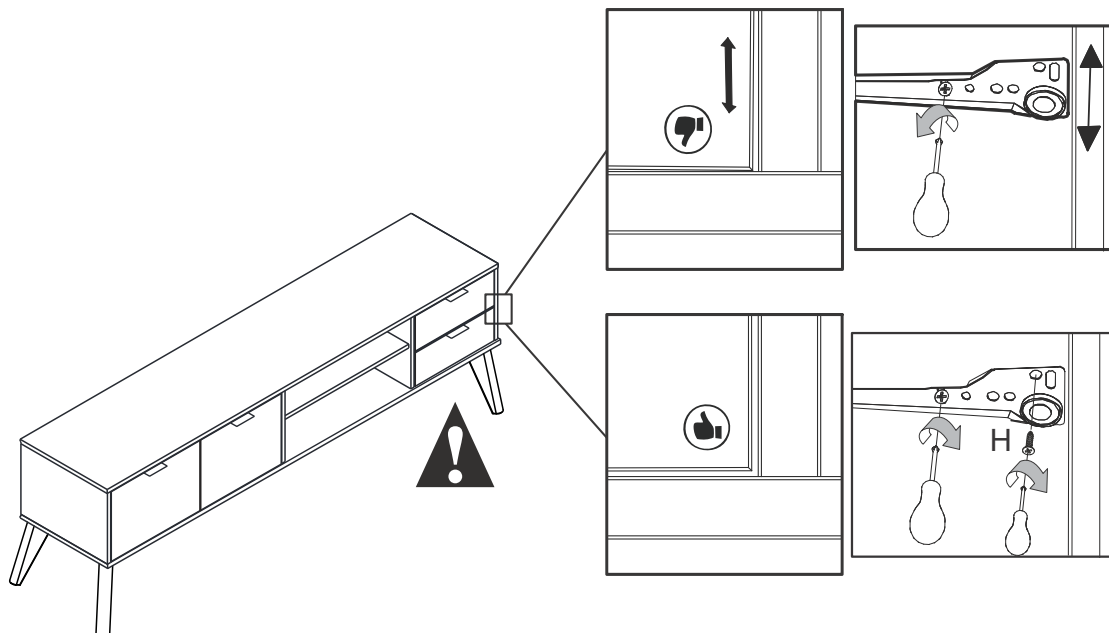

STEP 25

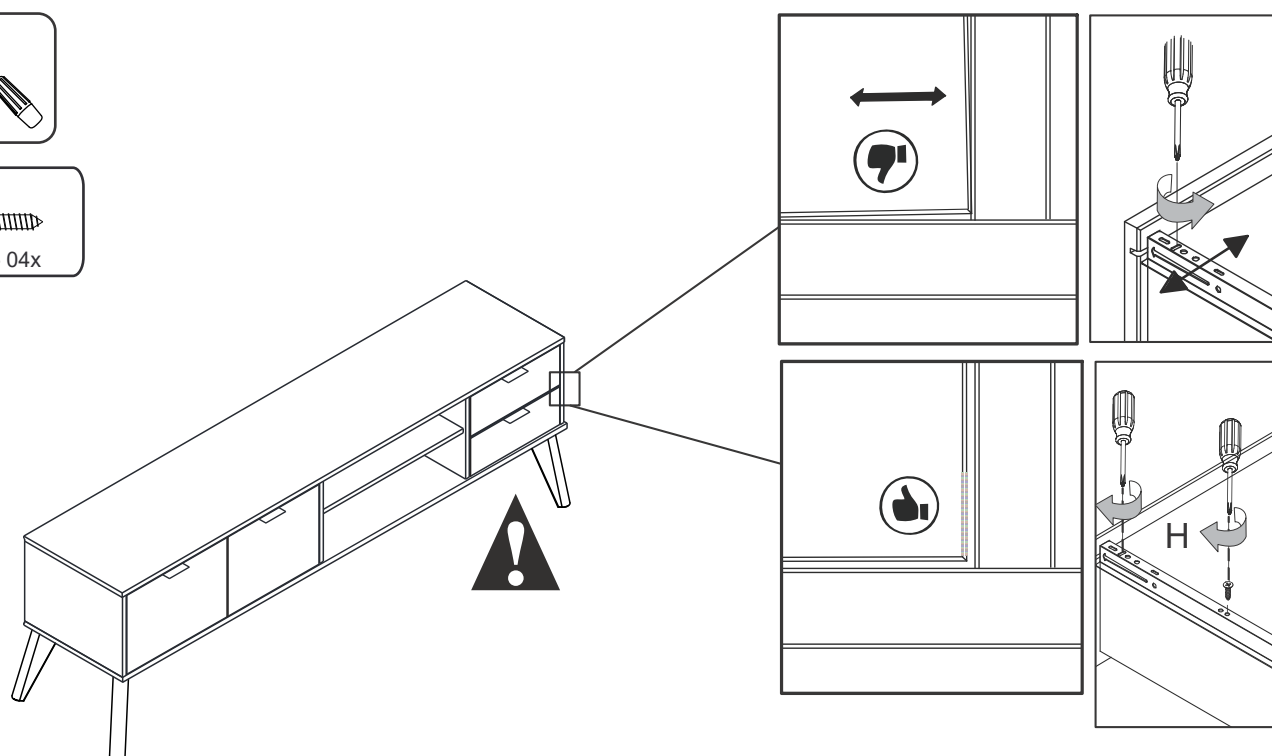

TROY

Ref: MC-0010