


KLAST

www.klasthome.com

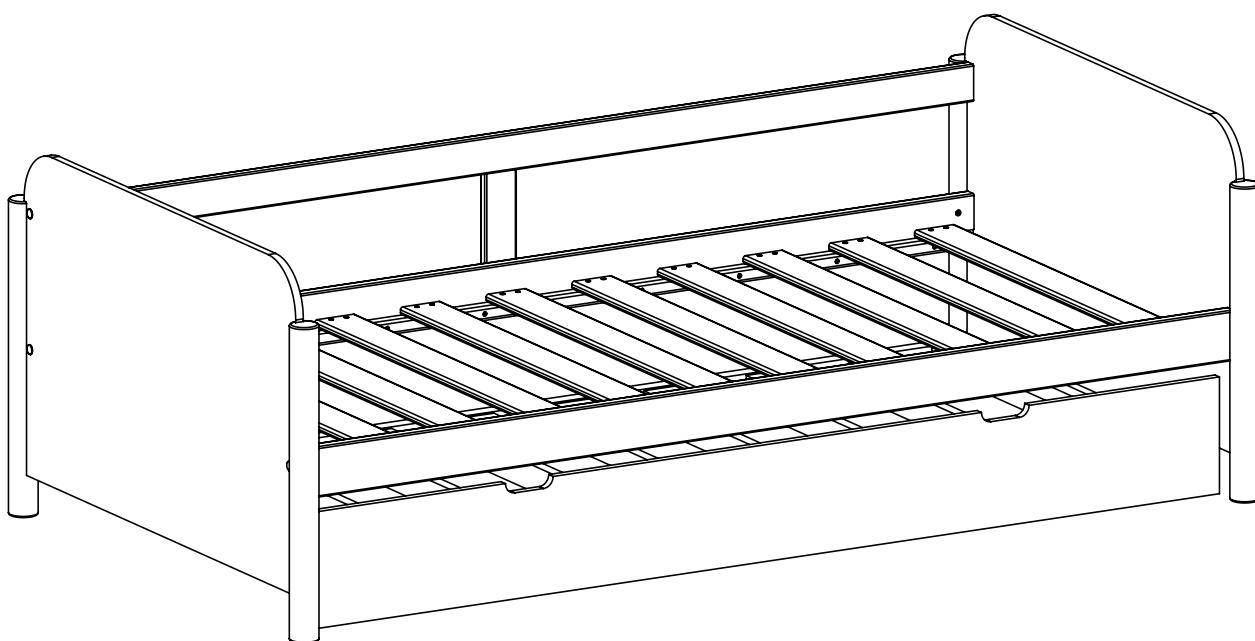

ORA

Ref:MC-0022


1/6

- V1.0 -

KLAST

www.klasthome.com

MATERIAL

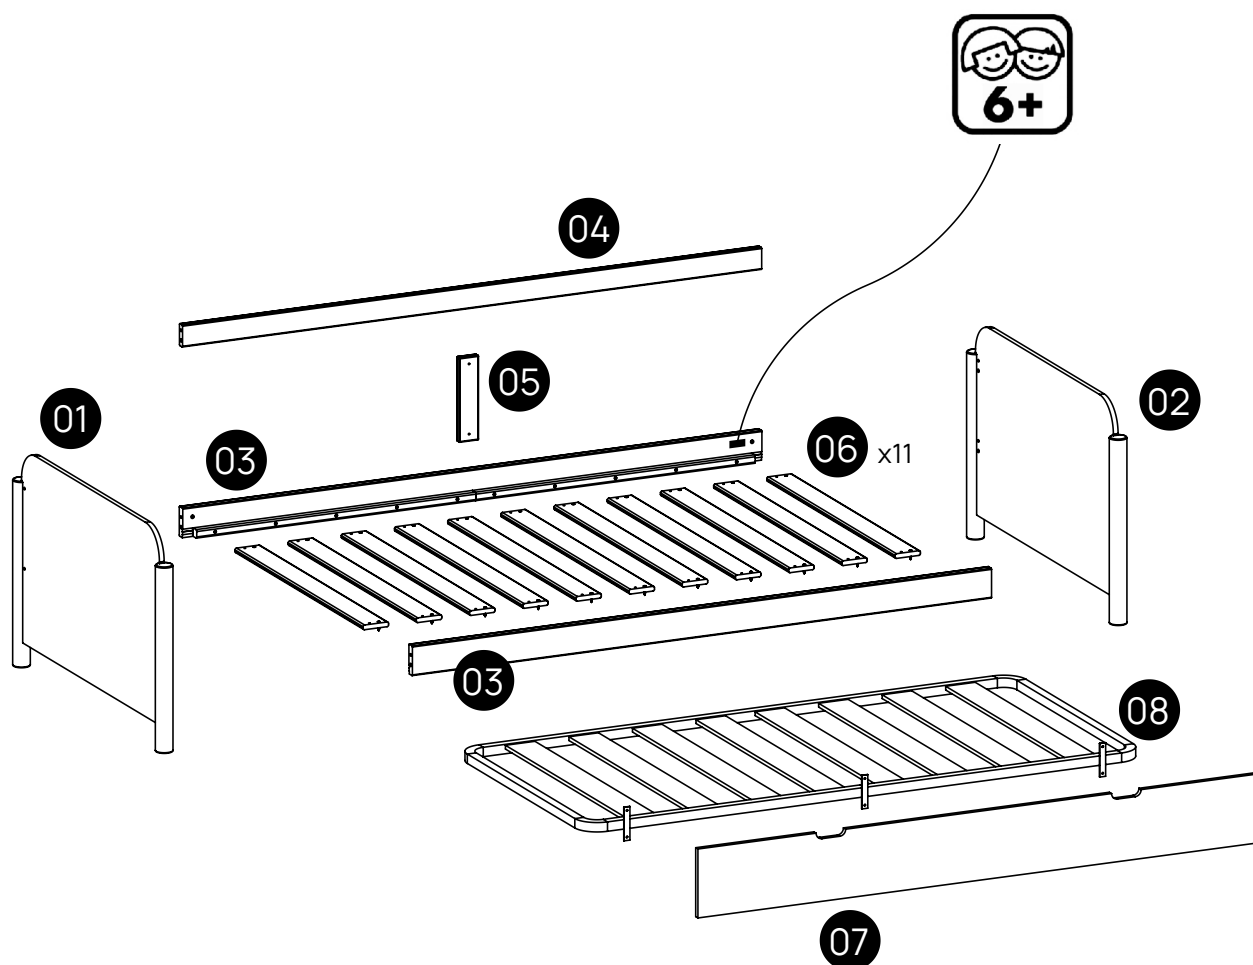


ORA

Ref:MC-0022


KLAST

www.klasthome.com

MATERIAL

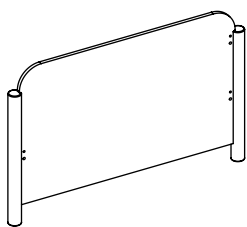


01 x1 PC

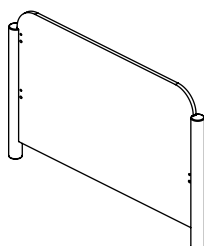

02 x1 PC




03 x2 PC




04 x1 PC




05 x1 PC

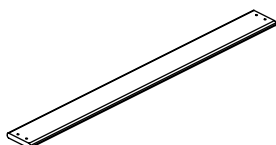

06 x11 PC

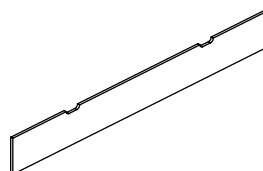

07 x1 PC

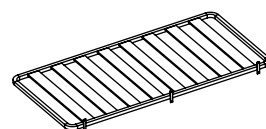


08 x1 PC




ø10x35 mm

A x6 PC



M6x60 mm

B x6 PC



ø4x16 mm

C x6 PC



ø4.5x30 mm


D x46 PC



E x6 PC



F x4 PC



G x1 PC



H x6 PC


ORA

Ref:MC-0022


KLAST

www.klasthome.com

STEP 1

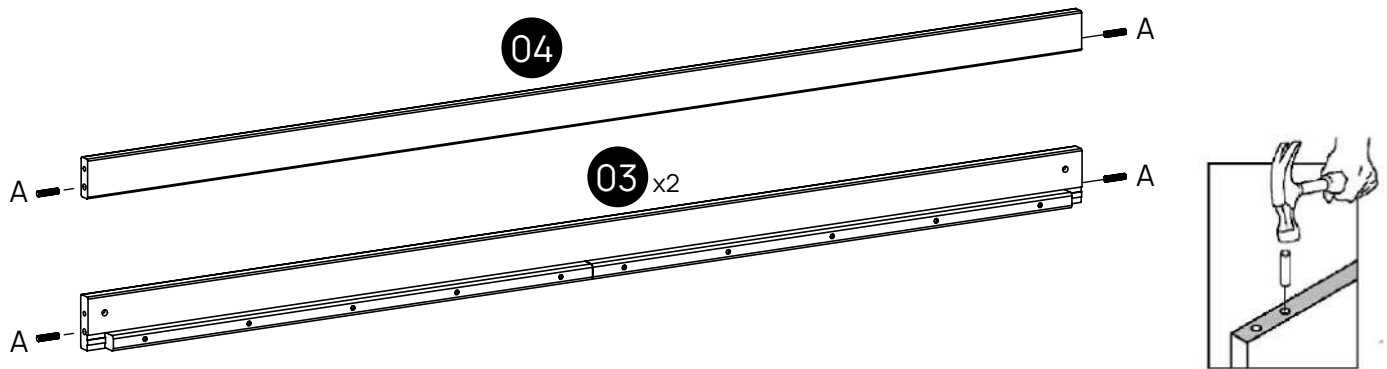

STEP 2

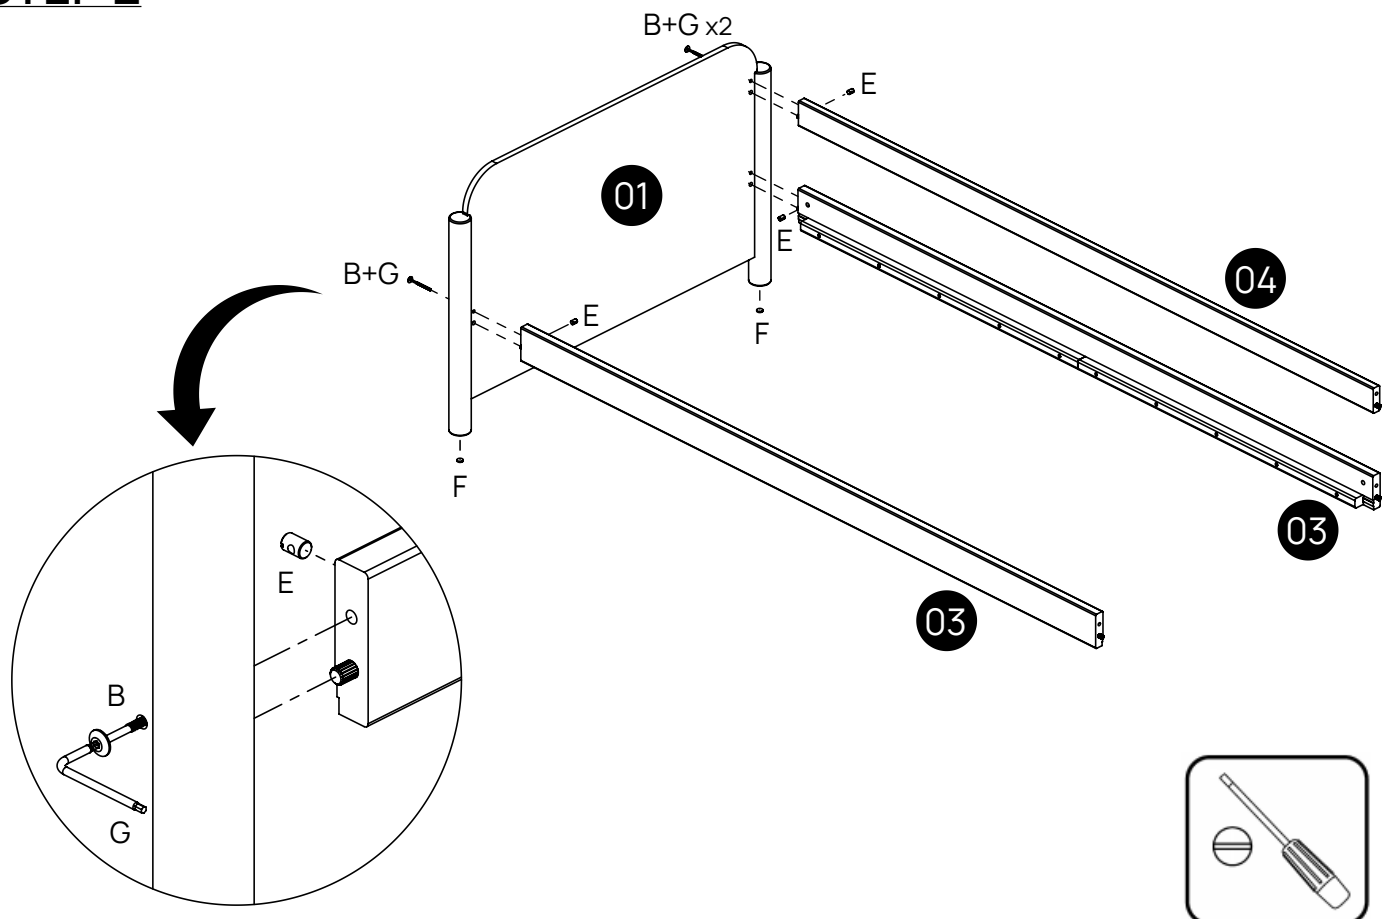

ORA

Ref:MC-0022

www.klasthome.com



Ref:MC-0022

www.klasthome.com

STEP 5

This diagram illustrates the final assembly step. The main illustration shows the bed frame with the headboard (02) and footboard (01) being attached. Screws (H) are used to secure the headboard and footboard to the side rails. A callout shows a hand inserting a screw. Another callout shows a screw (H) being inserted into the footboard. A third callout shows a screw (D x 2) being inserted into the side rail. A small icon of a screwdriver is also present.

STEP 6

07

08

2nd

1st

3rd

C x 6

!

!

Kg

Max. 100 kg

Kg

Max. 100 kg

TO ASSEMBLE THE NEST BED TO THE FRONT PIECE, START FIRST BY CENTRAL PLATEN (1st) AND AFTERWARDS ASSEMBLE THE ENDS (2nd AND 3rd)

Ref:MC-0022