


KLAST

www.klasthome.com

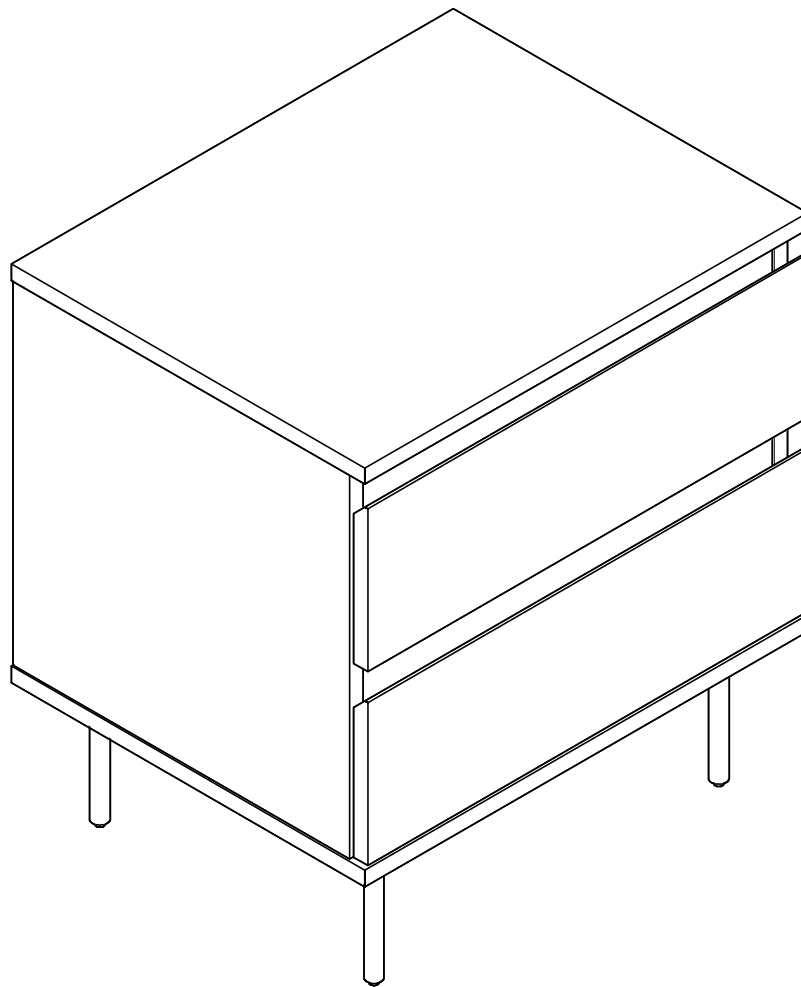

ESBEN

Ref: SB-0100


1/12

-V2.0-

KLAST

www.klasthome.com

MATERIAL

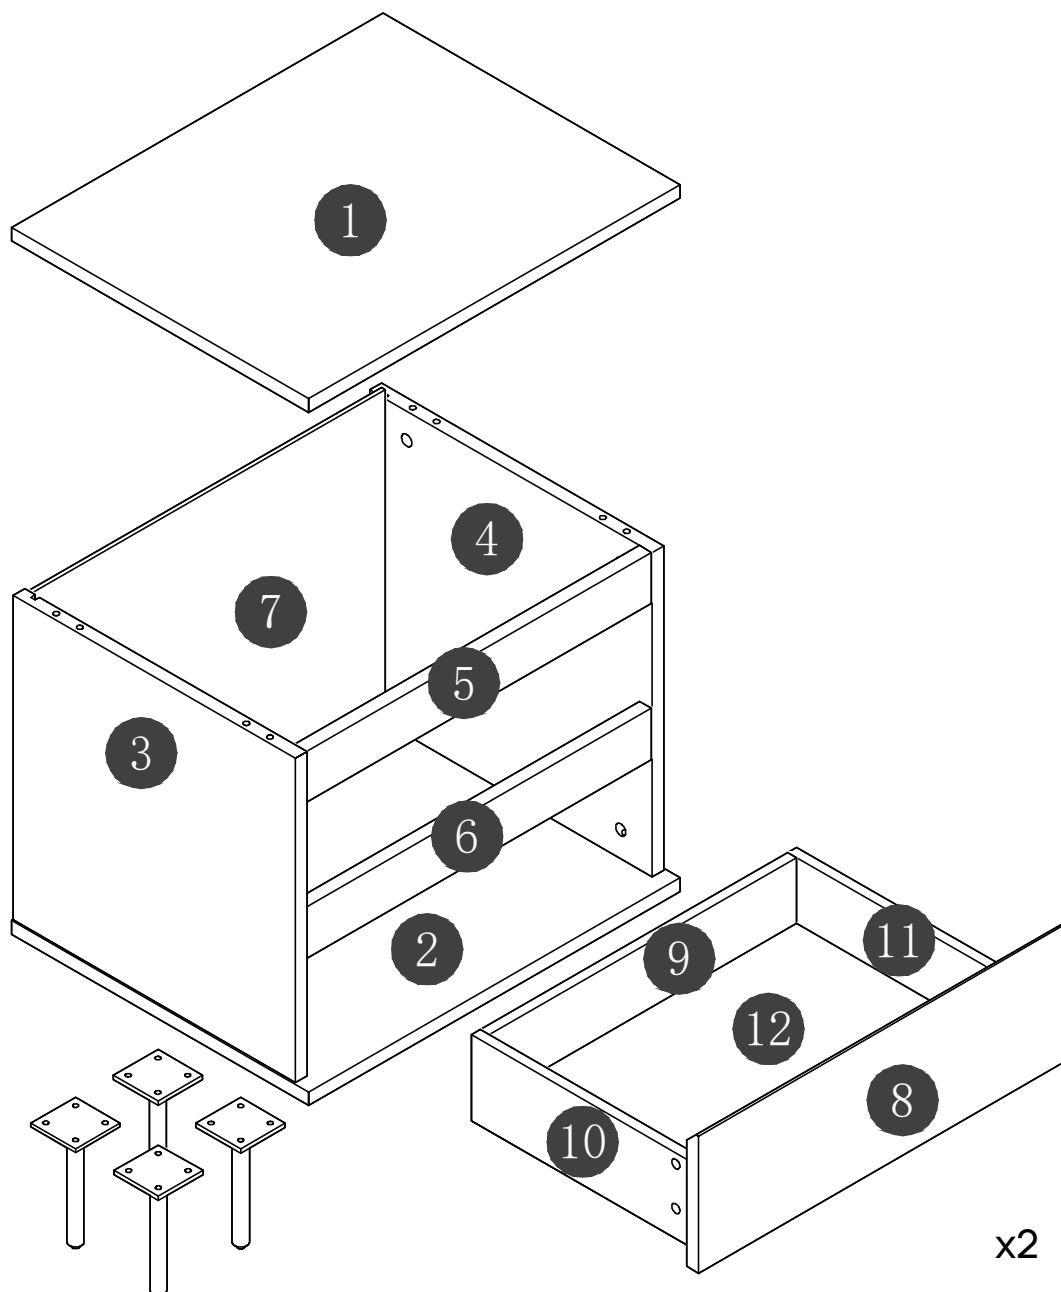

ESSEN

Ref: SB-0100

2/12

-V2.0-

KLAST

www.klasthome.com


MATERIAL



M6x40 mm
A x9 PC



Ø8x30 mm
B x12 PC




Ø15x12 mm
C x9 PC




Ø21 mm
D x29 PC




E x4 PC

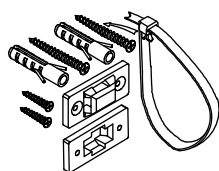


F x1 PC




M6x16 mm
G x16 PC



M4
H x1 PC




60x60x140 mm
J -1 x4 PC

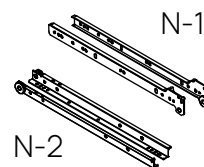


350 mm
N x2 PC




M6x34 mm
O x16 PC



Ø12x10.5 mm
P x16 PC



Ø7x50 mm
Q x4 PC



M3.5x12 mm
V1 x16 PC



M4
Z1 x16 PC



M4
Z2 x16 PC


ESBEN

Ref: SB-0100

KLAST

www.klasthome.com

STEP 1

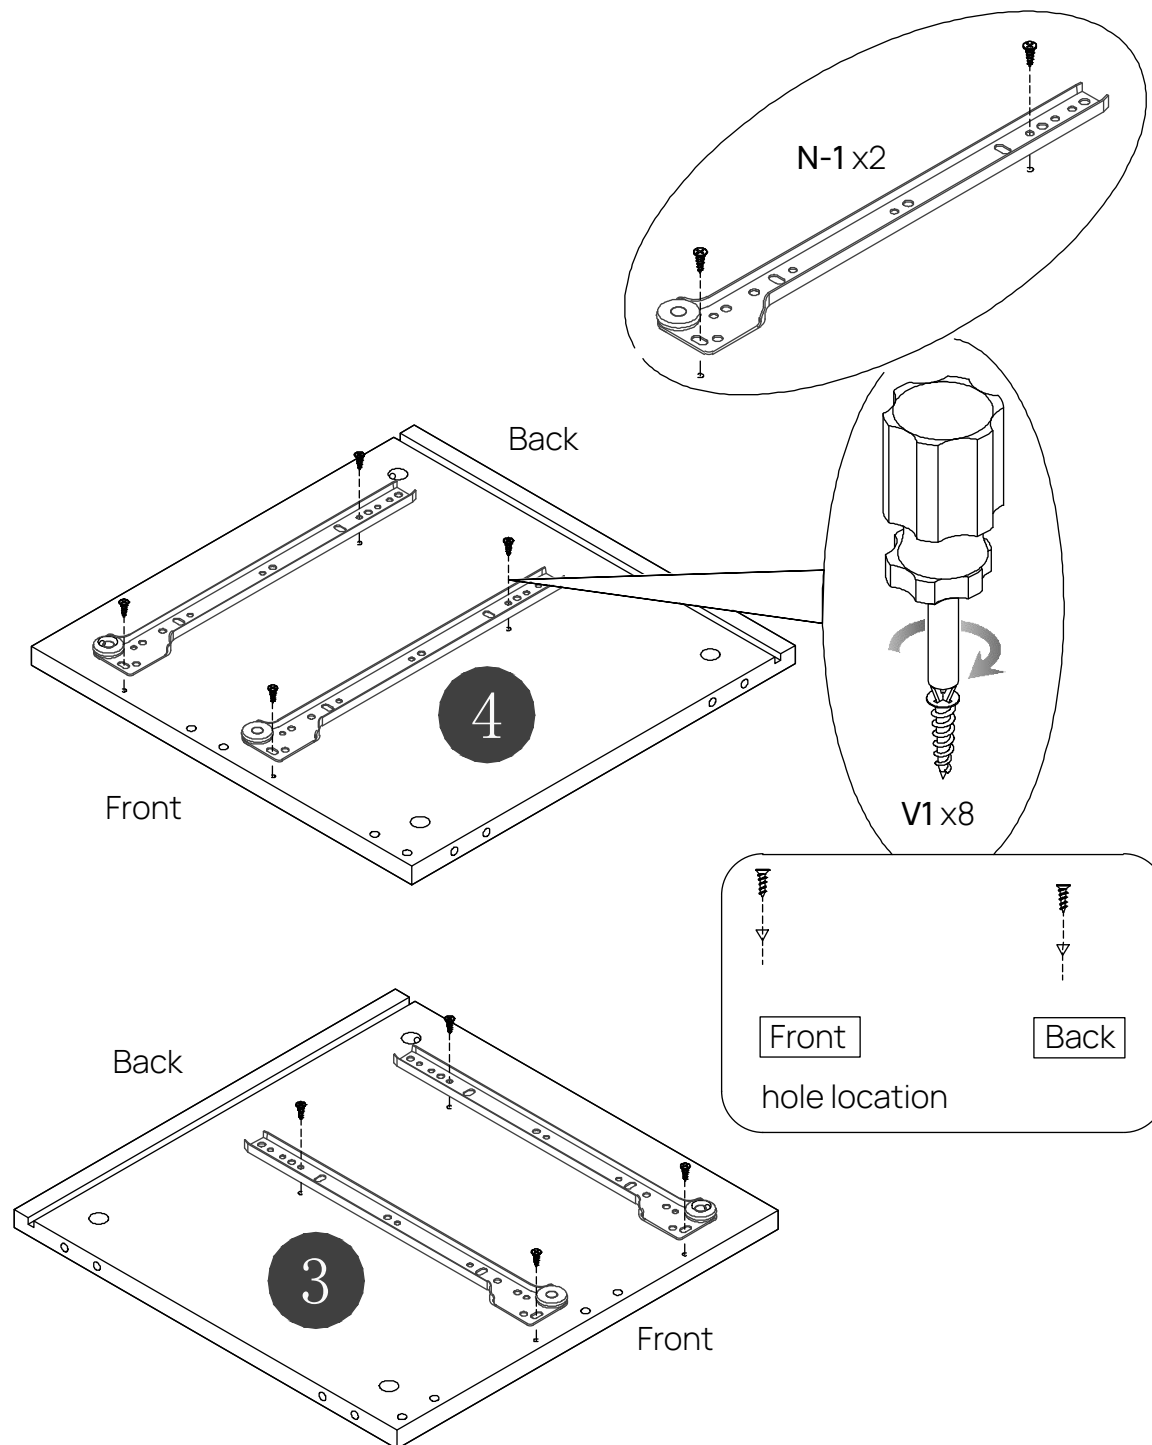

ESBEN

Ref: SB-0100


4/12

-V2.0-

KLAST

www.klasthome.com

STEP 2

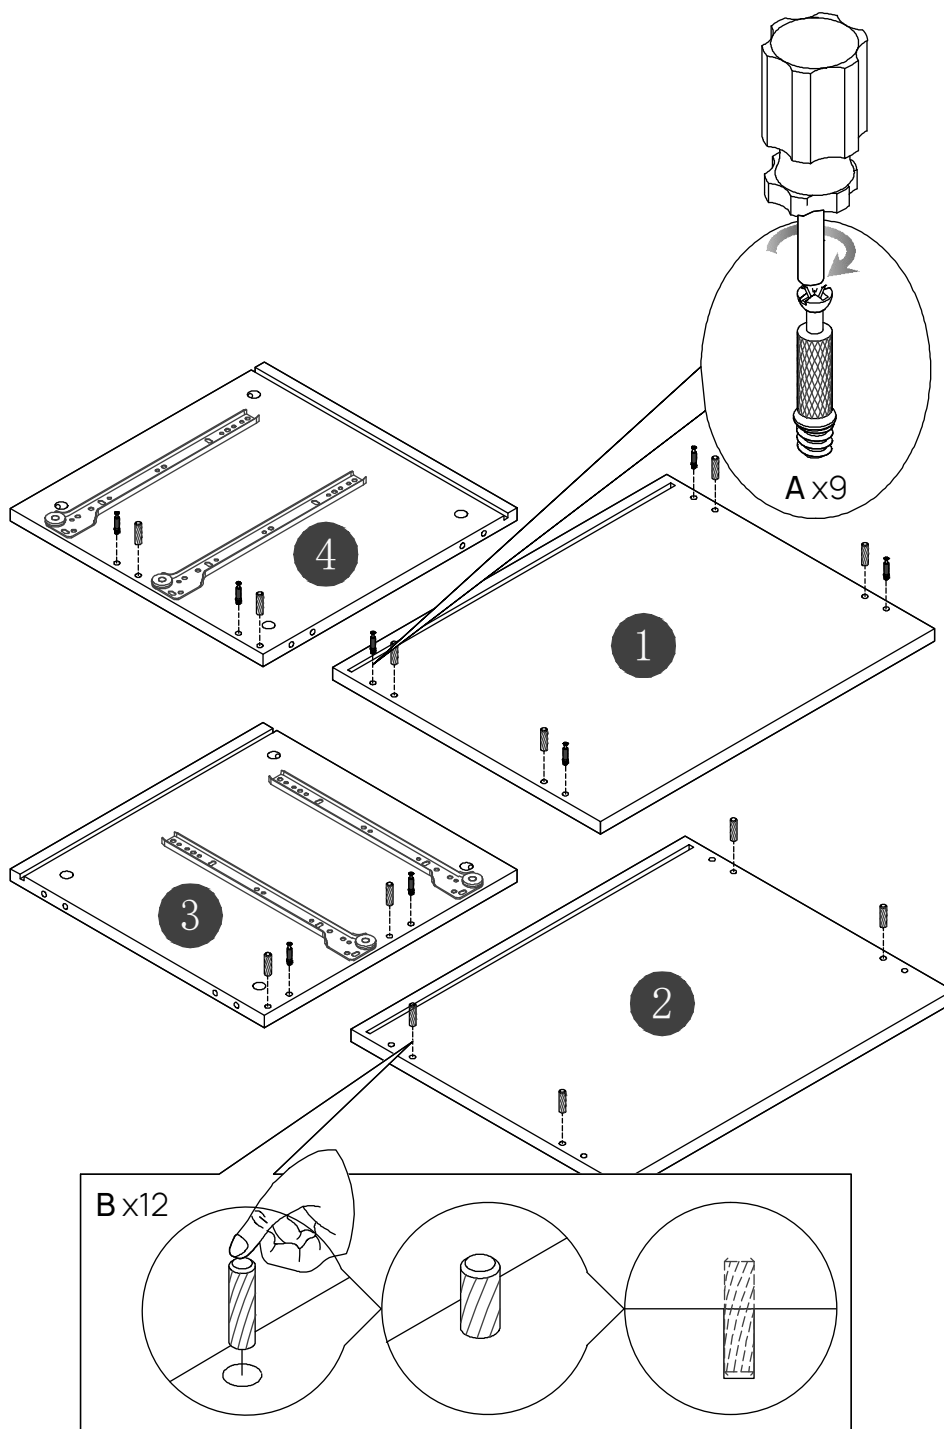


ESSEN

Ref: SB-0100


KLAST

www.klasthome.com

STEP 3

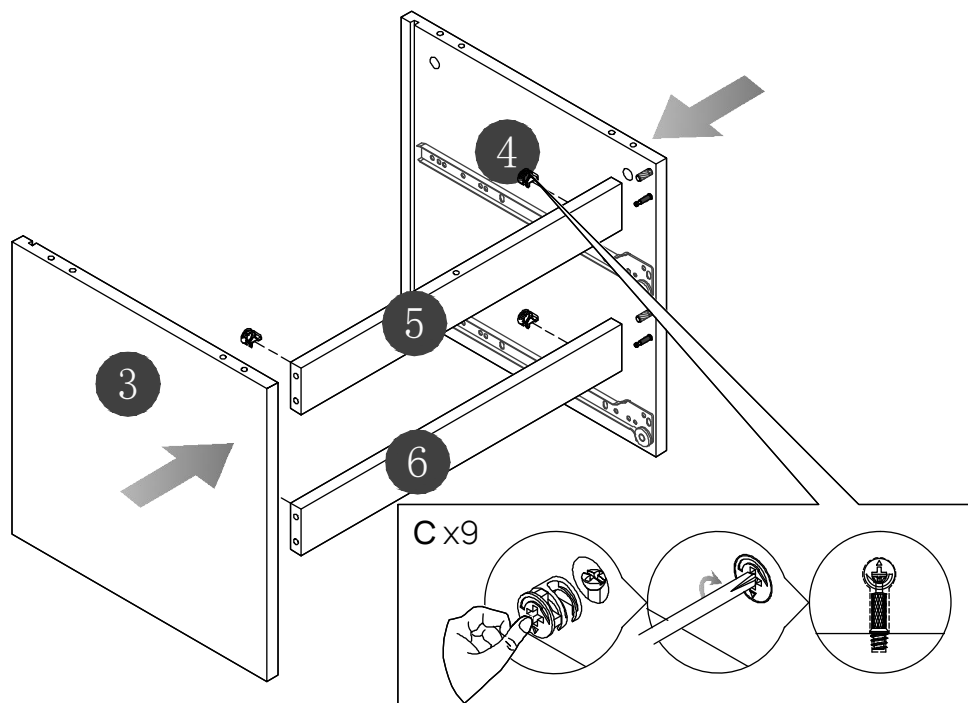

STEP 4

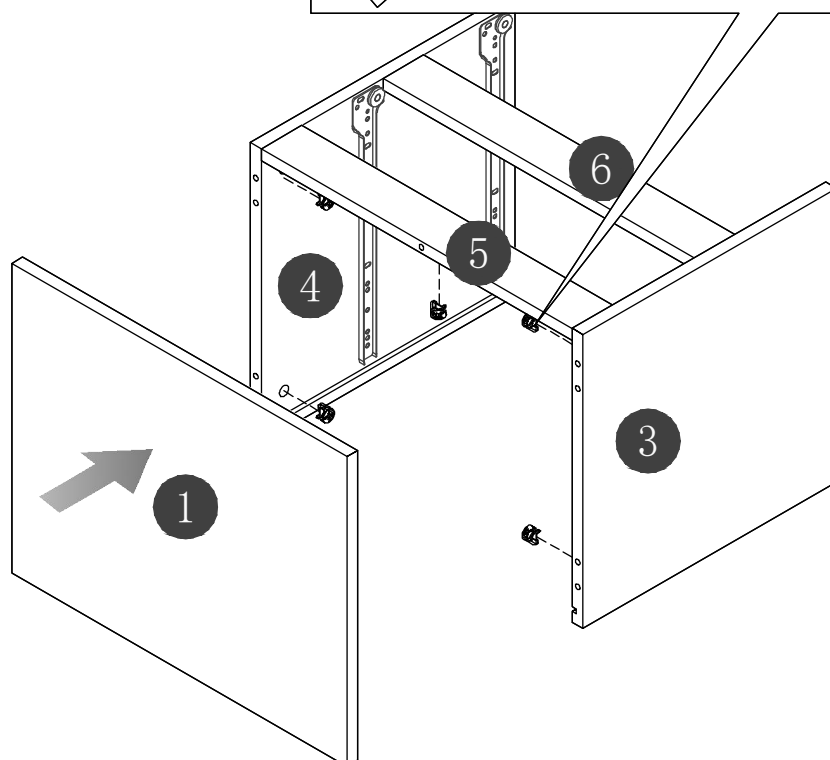

ESBEN

Ref: SB-0100


6/12

-V2.0-


KLAST

www.klasthome.com

STEP 5

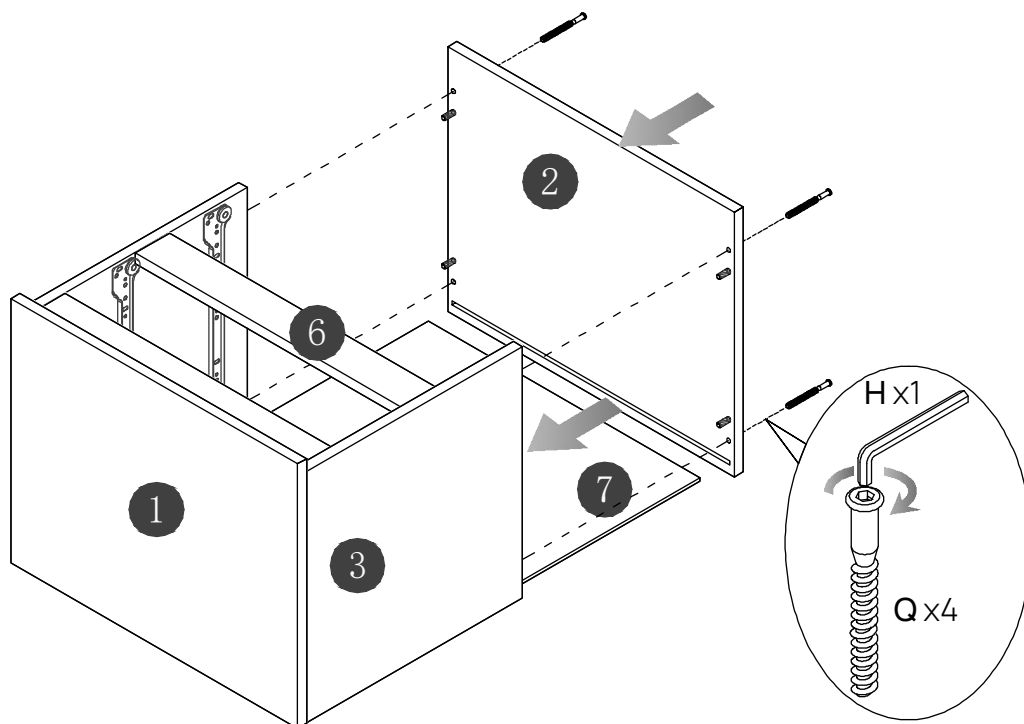

STEP 6

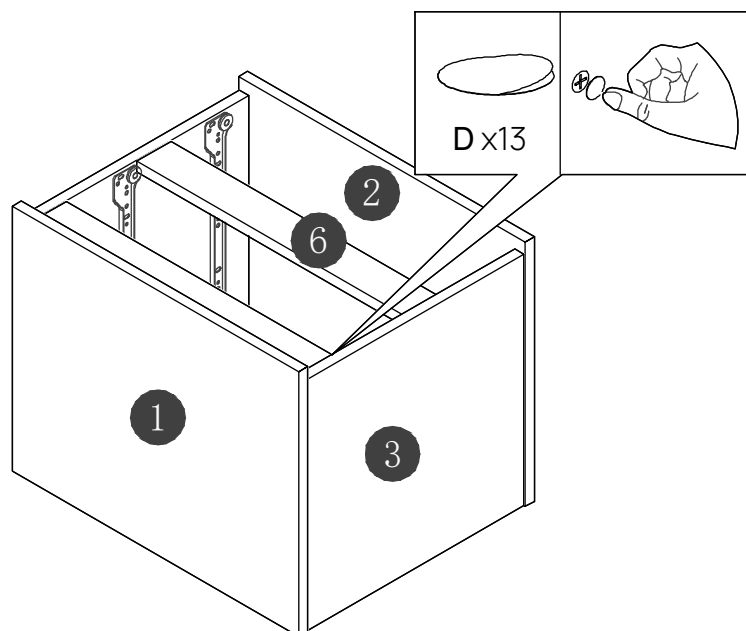


ESBEN

Ref: SB-0100

KLAST

www.klasthome.com

STEP 7

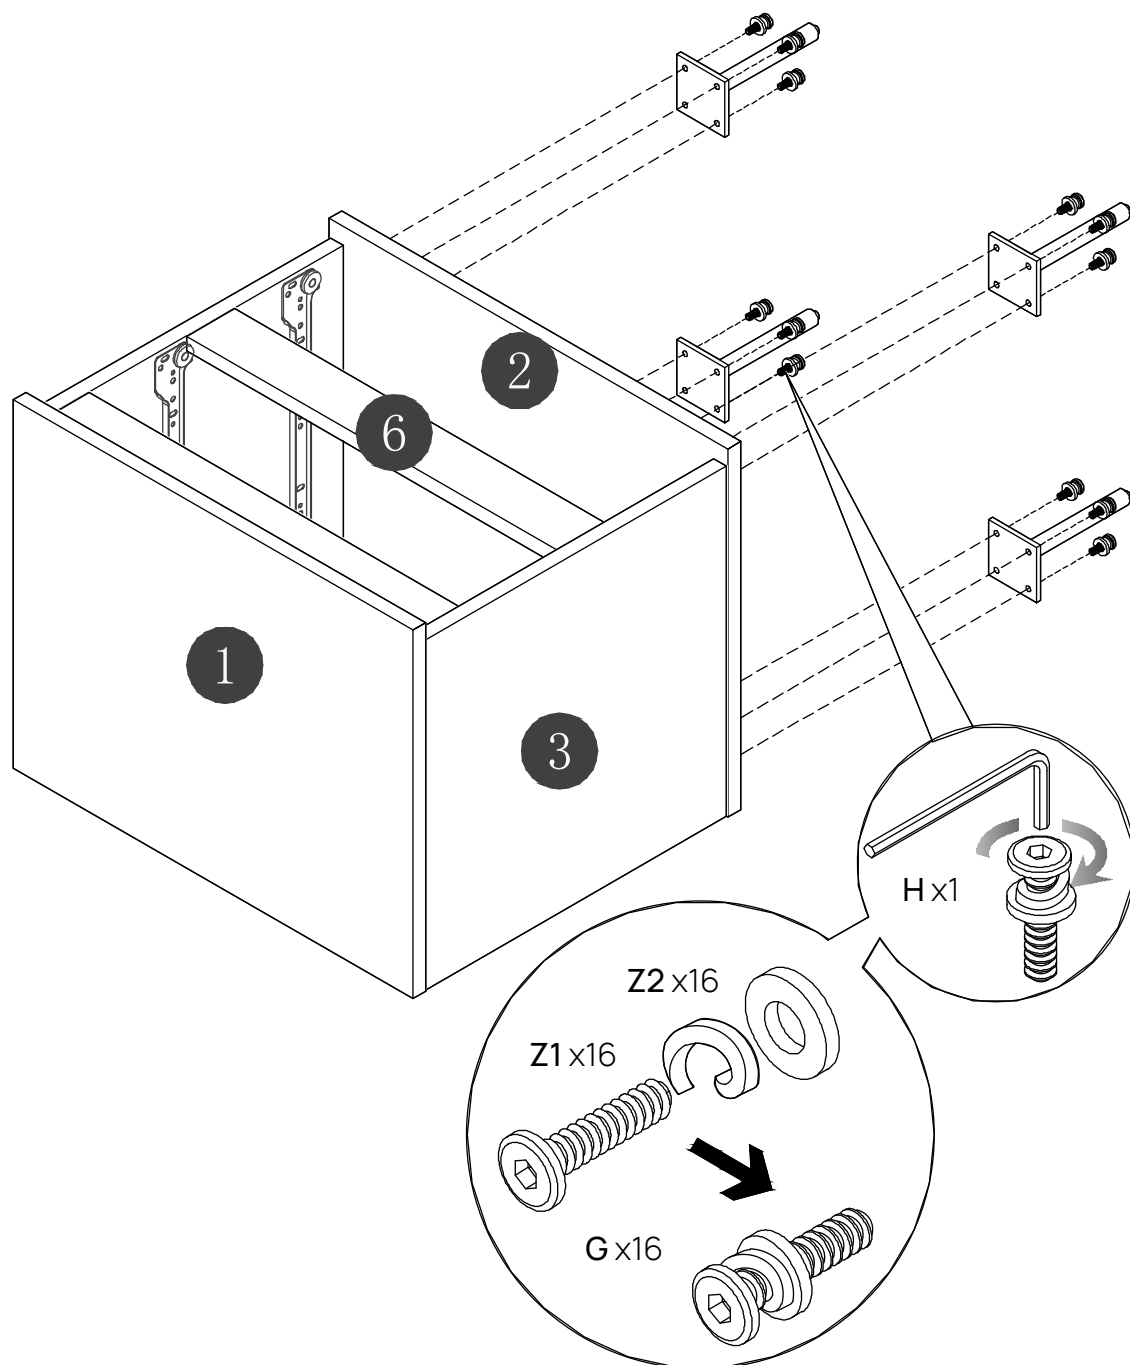

ESSEN

Ref: SB-0100


8/12

-V2.0-


KLAST

www.klasthome.com

STEP 8

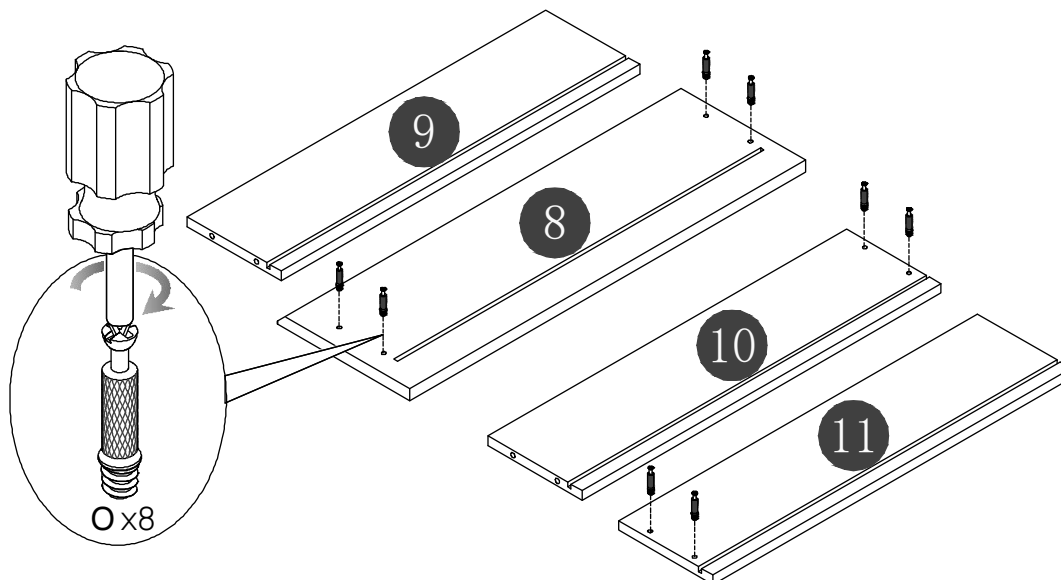

STEP 9

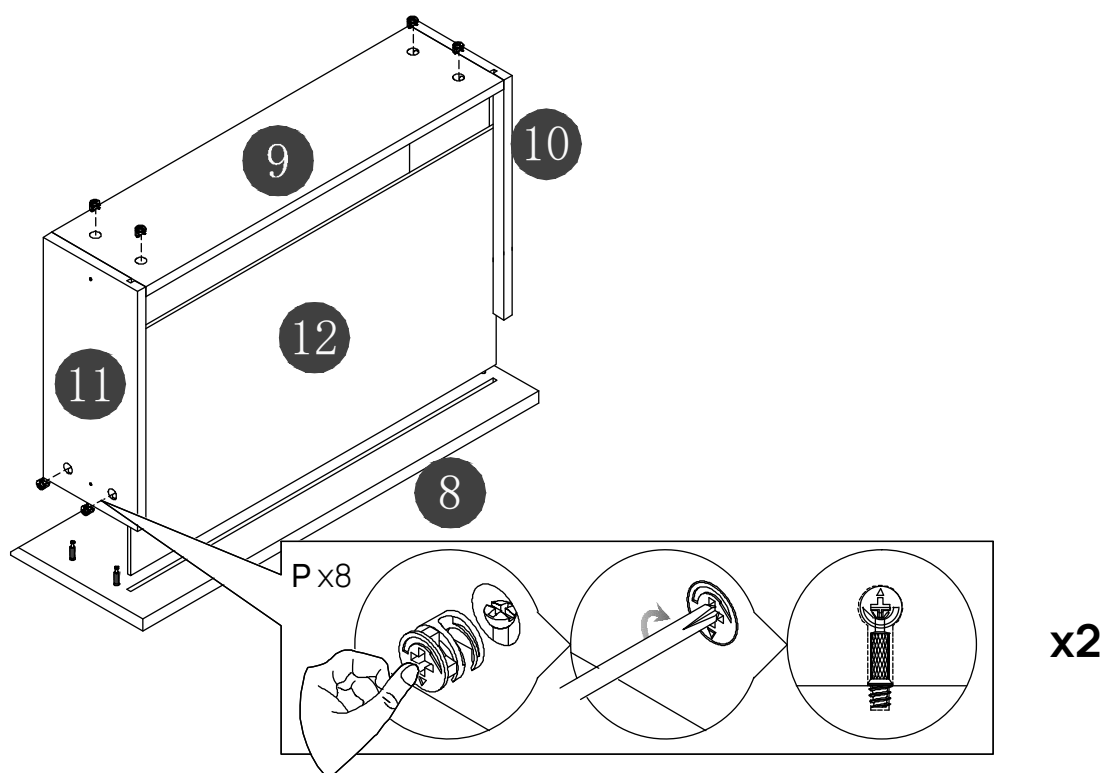


ESBEN

Ref: SB-0100

KLAST

www.klasthome.com

STEP 10

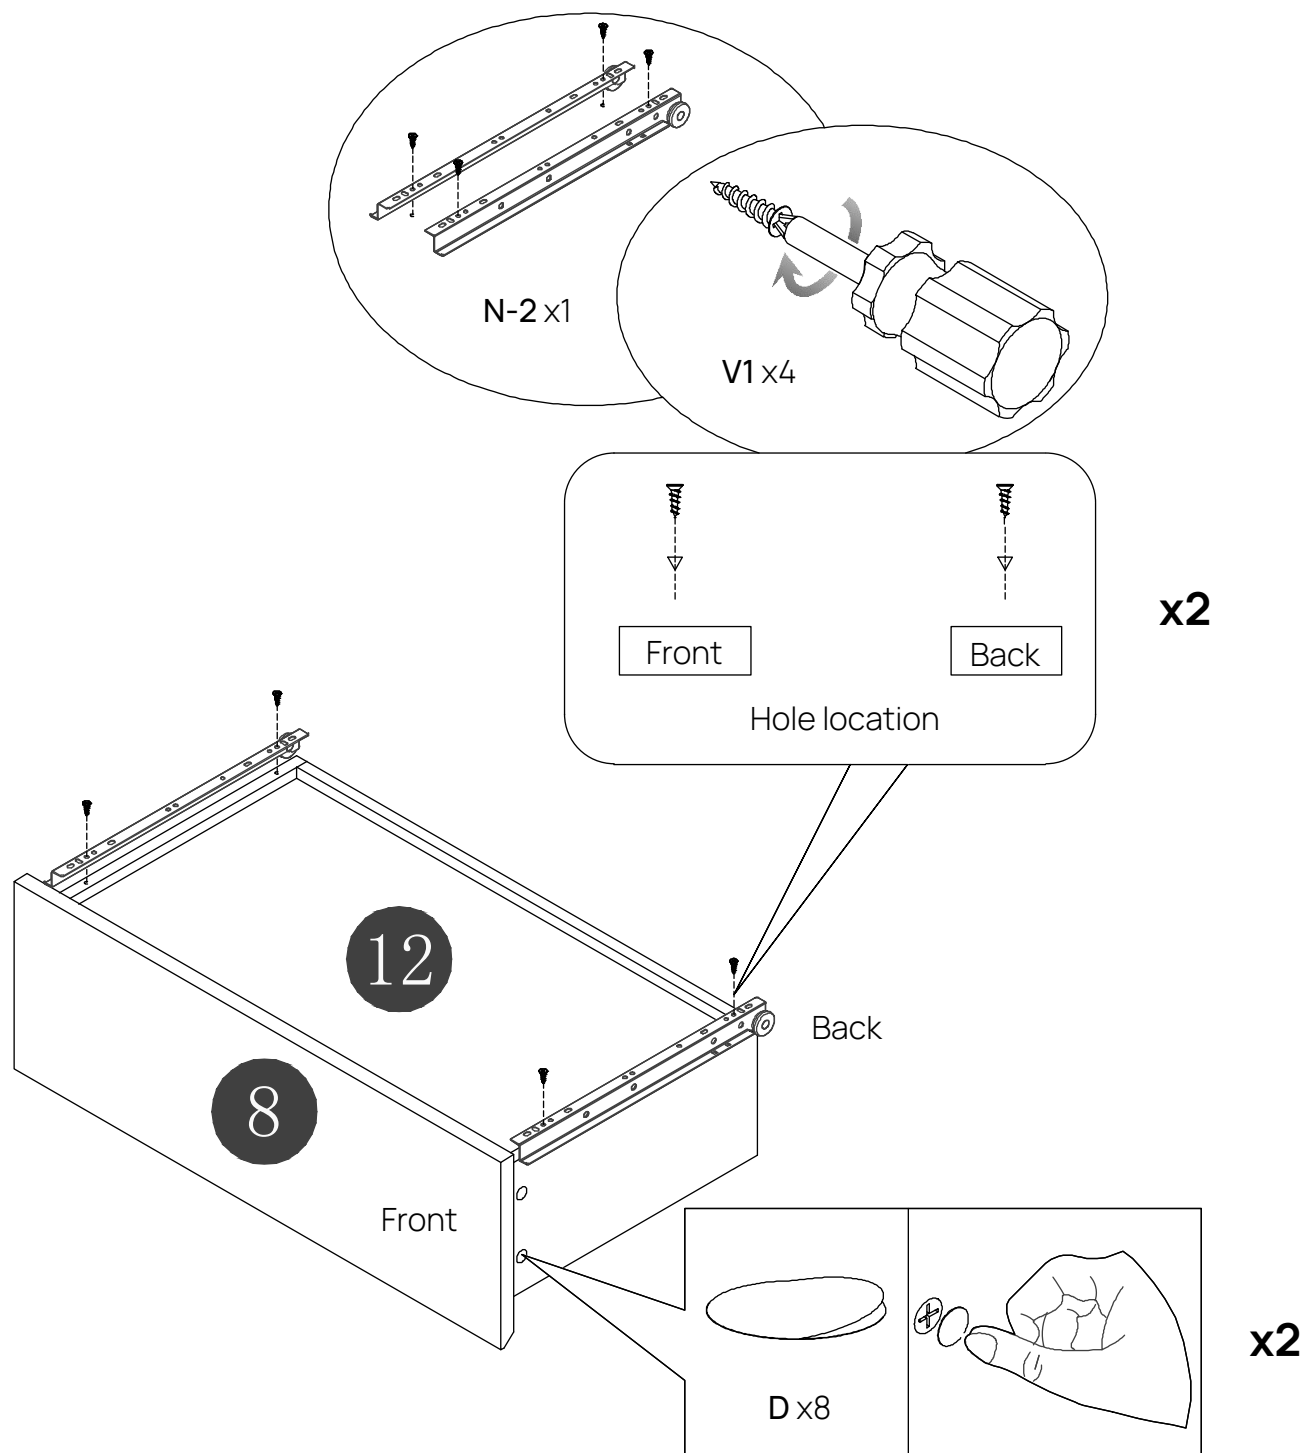

ESSEN

Ref: SB-0100


10/12

-V2.0-

KLAST

www.klasthome.com

STEP 11

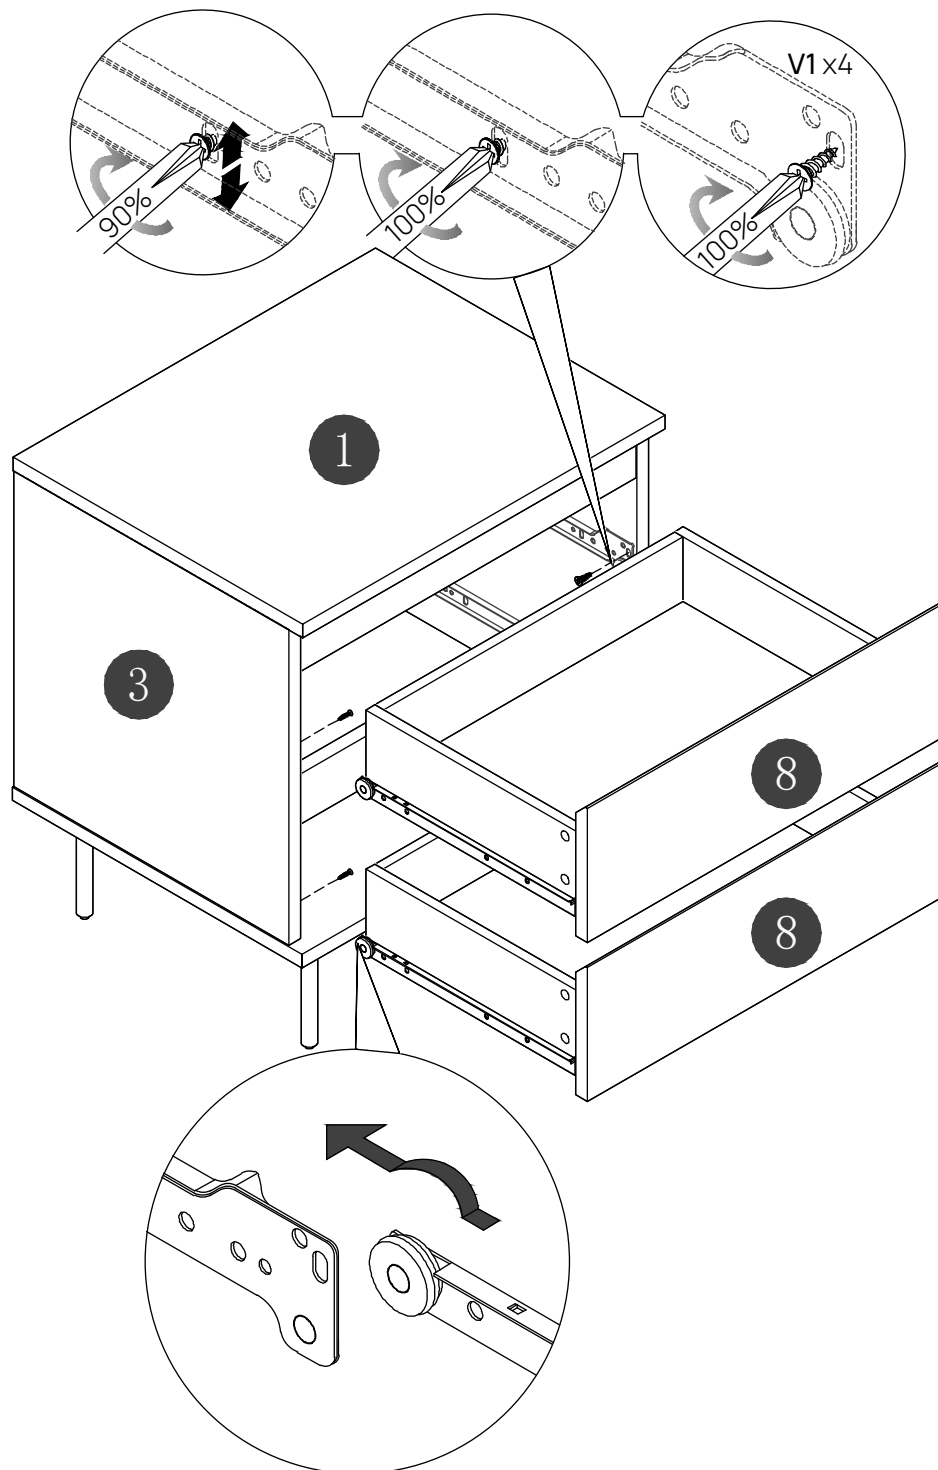

ESBEN

Ref: SB-0100


11/12

-V2.0-


KLAST

www.klasthome.com

STEP 12

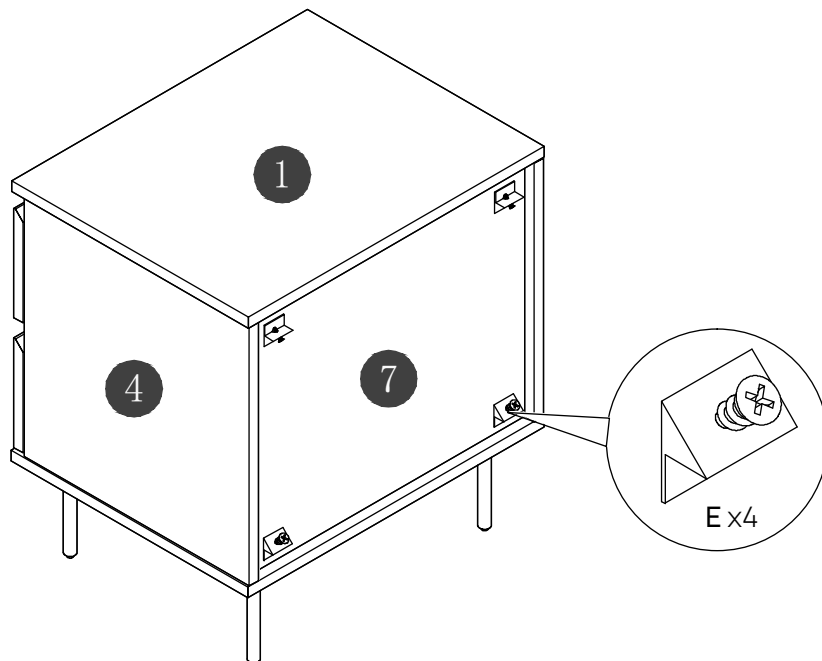

STEP 13

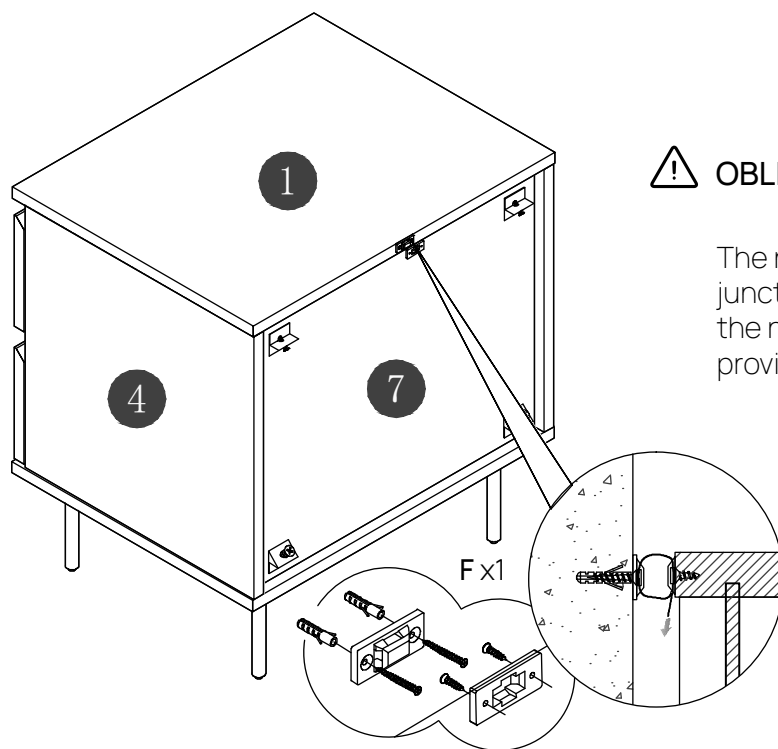

! OBLIGATORY FIX ON THE WALL

The needed hardware for the junction wall/furniture depends of the nature of the wall and is not provide.

ESBEN

Ref: SB-0100