




- V 1.0 -





## MATERIAL

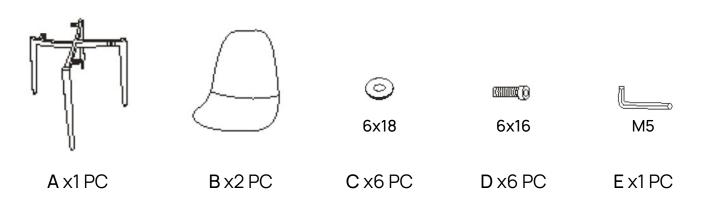





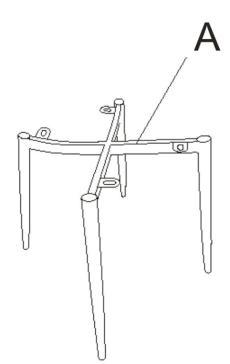


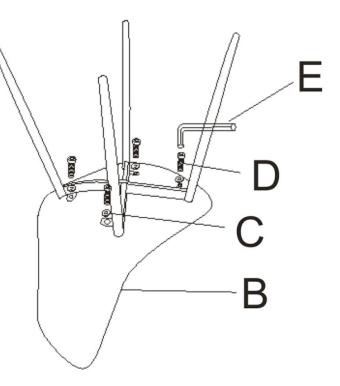





## STEP 3

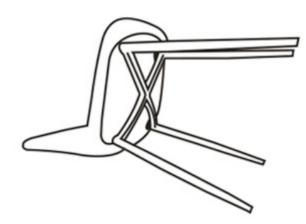

Put the screw in the hole. Tight the screws, but not too tight. 90% is ok.

## STEP 4



Adjust the balance of the chair.

Finally, tighten all the screws.



- V 1.0 -